


Driver Side

Passenger Side

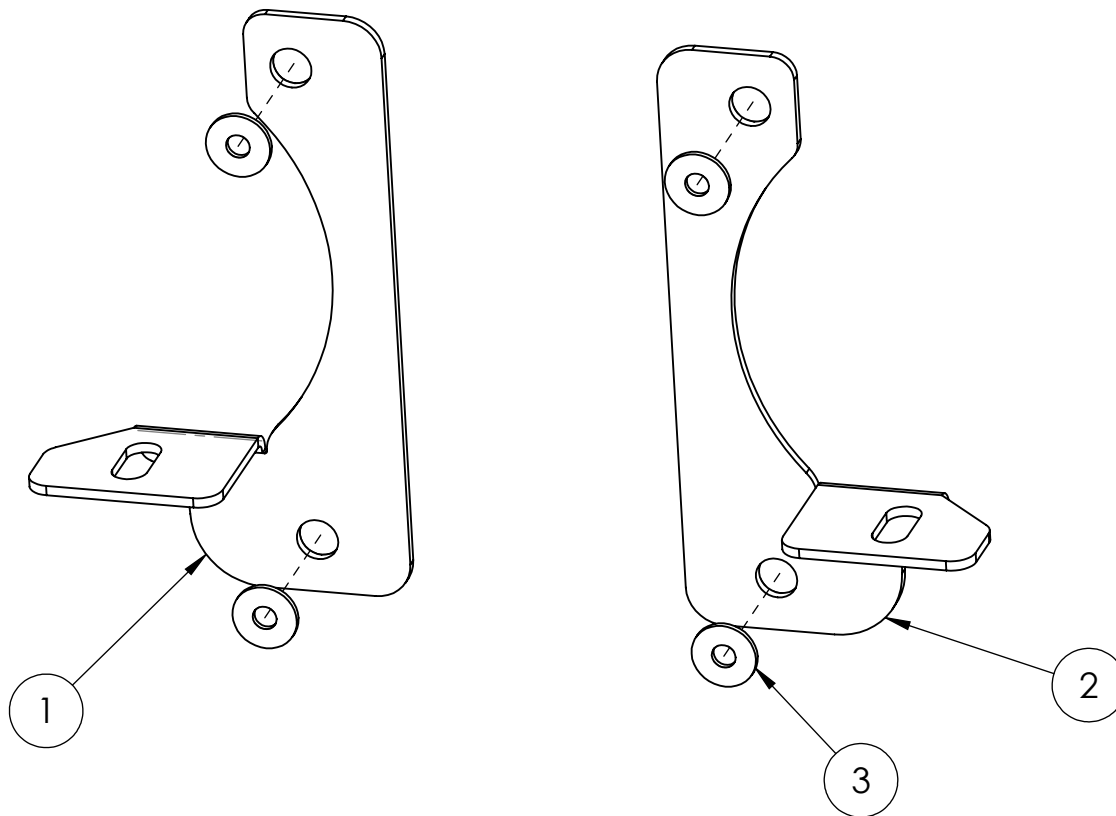

ITEM NO.	PART NUMBER	QTY.
1	44-7590 OEM Jeep JK Rubicon Fog Pocket Bracket DS	1
2	44-7591 OEM Jeep JK Rubicon Fog Pocket Bracket PS	1
3	20-1026 6mm oversized washer	4
4	60-0017 Connector, Universal H16 to 2 pin	2

Instructions:

1. First unplug the stock headlights and remove the two bolts holding in the stock headlight bracket.
2. Install the supplied brackets using the stock bolts with the two of the washers in the kit.
3. Next install your squadron light and adjust the depth as well as making the light concentric with the hole for the fog light.
4. Use the supplied harness adapters to connect the lights to the factory wiring. You can now operate the fog lights with the factory fog light switch.

[View other off-road lights made by Baja Designs on our website.](#)