




Necessary Upgrades

- > T6 Mount Turbocharger
 - o BD 171710
 - For greater performance BW #14969880004
- ➤ ECM Tuning.

Do not install this manifold if you do not have the above items.

EXPLODED VIEW

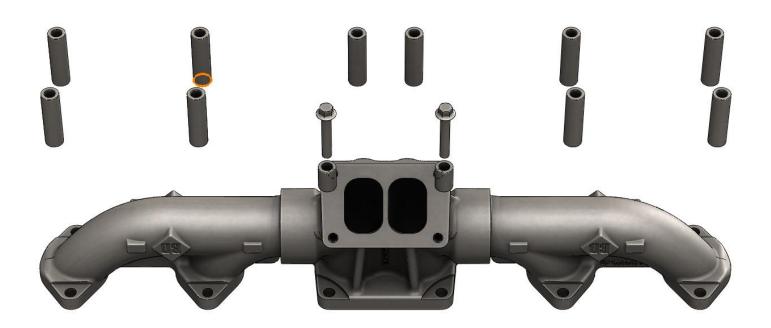

- You must use the spacers provided in the kit.
- Use the factory fasteners when using the tall spacers
- Use the two provided fasteners when using the short spacers.
- You must use the turbo mounting studs provided in the kit

Quantity	Part #	Description
1	1048008	Manifold
10	1408008-3	Spacer; Tall
2	1408008-4	Spacer;Short
4	1462429	Stud, M10 x
2	FT-11115686	35mm Bolt;M10 x

60mm