



# INSTALLATION GUIDE

**PART NUMBER: 5465**  
**FRONT ANTI-SWAY BAR**  
**RAM 1500 2WD/4WD | 2009-2018 (2019-2021 CLASSIC)**

# THANK YOU

Thank you for choosing our high quality Belltech product. We have spent a great deal of time developing our line of products so that you will receive maximum performance with minimal difficulty during installation. Soon your vehicle will be on the road looking and feeling much improved.

**Please take a moment to read all instructions and warnings prior to installation of your new Belltech product and before operating your vehicle. If you have any questions or concerns regarding any step in the installation process, please do not hesitate to call or email our customer support specialists who are trained to help you through any portion of this process.**

## **Before You Begin:**

**It is of the utmost importance that you confirm all of the components listed on the parts list is in the kit. You can find this list located on the last page(s) of your instructions. Do not begin installation if any part is missing. Instead, please call our Belltech customer service specialists.**

## **Safety Information:**

**Warning:** Do not work under a vehicle supported only by a jack. Place support stands securely under the vehicle in the manufacturer's specified locations unless otherwise instructed.

Proper use of safety equipment and eye/face/hand protection is absolutely necessary when performing any of the following instructions.

We strive for an exceptional experience for all our valued customers.

We recommend that a qualified mechanic, at a properly equipped facility, perform this installation.

It is very helpful to have an assistant available during installation.

## **Before Driving Your Vehicle:**

It is important to double check all brake hoses, cables, and other components to be sure there is no interference. You must also check for wheel/tire to chassis/body interference. If any issues are found, review your installation instructions to be sure no steps were missed and any problems are corrected.

Make sure your vehicle is aligned immediately following installation.

Check all hardware and re-torque at intervals for the first 10, 100, and 1000 miles.

Some of Belltech's products are designed to improve your vehicle's off-road performance. Leveling/lifting your vehicle may result in an altered center of gravity. It is crucial to use extreme care when operating your vehicle to prevent rollover and/or loss of control.

Any changes in your vehicle's suspension may result in transformed handleability. Please test-drive your vehicle in a remote location so you can become accustomed to the revised driving characteristics.

Perform headlight check and adjustment.

Failure to drive any modified vehicle in a safe manner may result in harm or death.

Never operate your modified vehicle under the influence of drugs, alcohol, or lack of adequate sleep.

Always wear your seatbelt.



**DIFFICULTY:**



**INSTALLATION TIME:** 1-2 Hours

## RECOMMENDED TOOLS:

- Properly rated floor jack
- Support stands
- Metric wrench set

## JACKING, SUPPORTING, AND PREPARING THE VEHICLE

*(THE FOLLOWING STEPS, 1 THROUGH 8, ARE OPTIONAL, AS WITH MOST VEHICLES YOU SHOULD BE ABLE TO ACCESS THE ANTI-SWAY BAR WITHOUT LIFTING THE VEHICLE OR REMOVING THE WHEELS.)*

1. Park your vehicle on a smooth, level, concrete or seasoned asphalt surface.
2. Block the rear wheels of the vehicle using wheel chocks. Make sure the vehicle's transmission is in "PARK" (automatic) or 1st gear (manual).
3. Activate the parking brake.
4. Loosen, but do not remove, the front wheel lug nuts.
5. Lift the front of the vehicle off the ground using a properly rated floor jack. Lift the vehicle so the front tires are approximately 6-8 inches off the ground.
6. Place support stands rated for the vehicles weight. The stands should be positioned in the factory specified locations. (Refer to owners manual). Prior to lowering the vehicle onto stands, make sure the support stands will contact the chassis. It is very important that the vehicle is properly supported to prevent any harm to ones self or to the vehicle.
7. Lower the vehicle slowly onto the stands.
8. Remove the front wheels.



### Technician reminder:

Never work under a vehicle supported only by a jack. It is necessary to place support stands securely under the vehicle in the manufacturer's specified locations unless otherwise instructed.

## OEM ANTI-SWAY BAR REMOVAL

9. Remove the end link from the anti-sway bar using a 18mm wrench.




10. Remove the bolts holding the OE sway bar bushings in place using a 15mm wrench.



## BELLTECH ANTI-SWAY BAR INSTALLATION

11. Using the supplied grease pack, grease inside each of the supplied bushings.
12. Slide the bushings onto the Belltech anti-sway bar.
13. Using the OE sway bar as a guide, align the bushings on the Belltech sway bar with the bushings on the OEM sway bar.
14. Install the Belltech sway bar onto the chassis using the supplied bushing brackets and original hardware.
15. Install the end links into the Belltech bar using the OEM hardware. You may select either hole option based on your preferences, but be sure to mirror your selection on the opposing side.

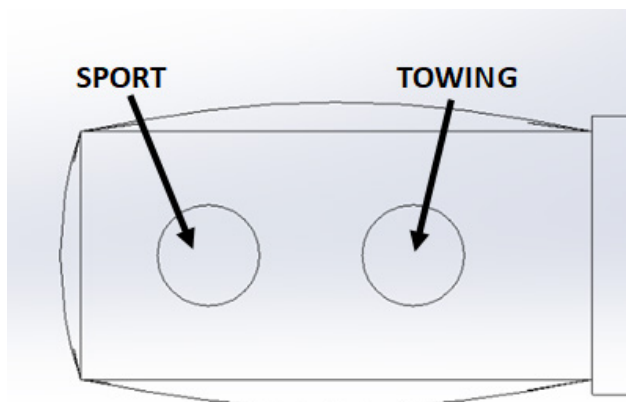

16. Once the sway bar is properly in place, torque all fasteners to OE specifications.

# FINALIZING THE INSTALLATION

17. Re-install the wheels and tighten the lug nuts.
18. Lift the vehicle and remove the support stands.
19. Carefully lower the vehicle onto the flat ground.
20. Torque the lug nuts to manufacturer's specifications.
21. Check that all components and fasteners have been properly installed and torqued.
22. Re-read and perform all tasks in the "Before Driving Your Vehicle" section of page 1 of your instructions.

## THANK YOU FOR CHOOSING BELLTECH.

You are now a part of the Belltech family and we are eager to catch a glimpse of your newly modified vehicle. Give us a shout out and let us know how much you love our product.

# KIT CONTENTS



## Anti-Sway Bar Kit

Part number	Description	Qty
5465-300	Front Anti-Sway Bar	1
5465-777	Hardware Kit	1

## Hardware Kit (5465-777)

Part number	Description	Qty
55000-10	Grease Pack	1
114037-95	Zinc-Plated Bushing Bracket	2
113110	Pivot Bushing 1-3/8"	2