



Installation Instructions Mirror Cup Kit

Vehicle Application:
Jeep® JK/JL Wrangler and JK/JL Wrangler
Unlimited 2007-Current
Part Number 51734-01

Installation Tips

Before you install your new Bestop Mirror Cup Kit, please read all the instructions thoroughly.



WARNING

This product is designed primarily to enhance the appearance of the vehicle and to shield the occupants from ordinary weather conditions. Do not rely in any way on the components of this product to protect against injury or death in the event of an accident. Never operate the vehicle in excess of manufacturer's specifications.

Read and follow, precisely, all installation instructions provided when installing this product. Failure to do so may result in a poor fit and could place occupants of the vehicle in a potentially dangerous situation.



CAUTION

Safety glasses should be worn at all times when installing this product.

WEAR SEAT BELTS AT ALL TIMES

Tools



Safety Glasses



3mm Allen Wrench



Ratchet



T40
Torx Driver

Installation Time



30 Minutes

Skill Level

1

2

3

4



1 - Easy

Step 1

Tools



Step 2

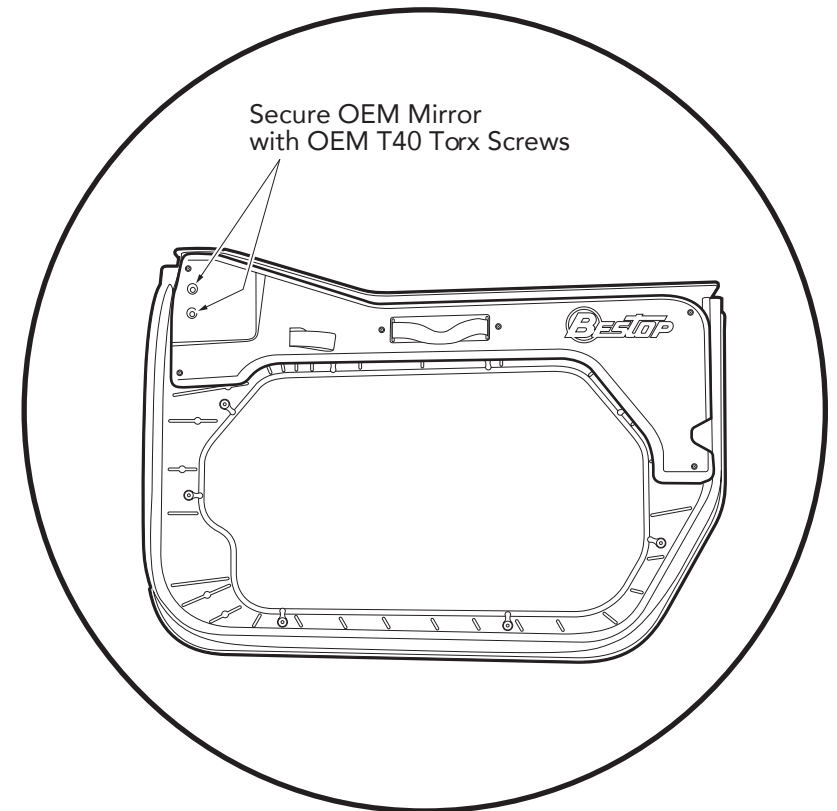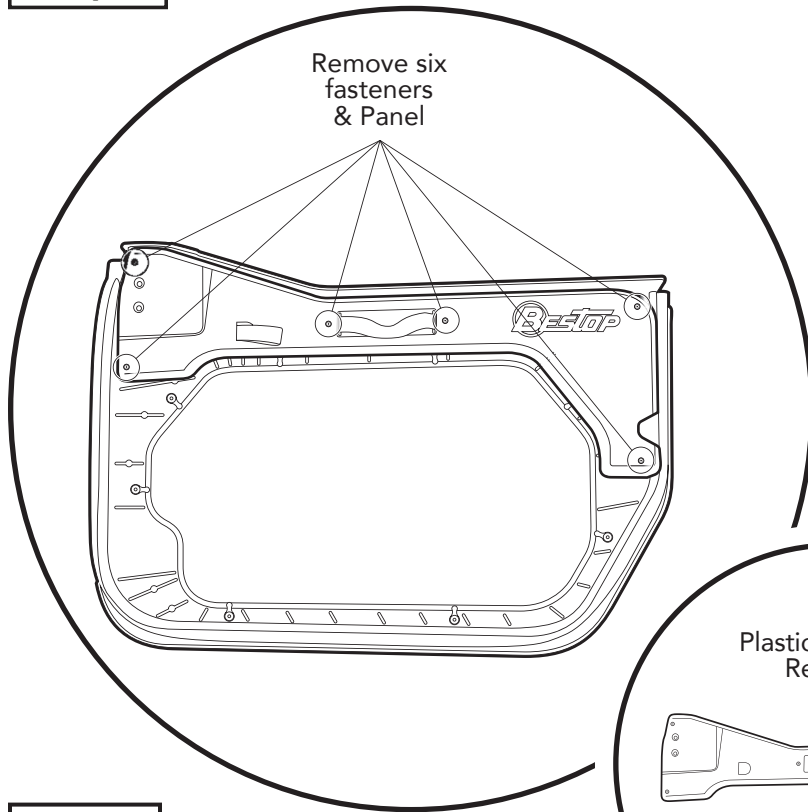


Step 1

The mirrors from the original doors can be mounted to the Core Doors.

First, remove the Plastic Trim Panel. Using a 3mm Allen Wrench, remove the six (6) fasteners which attach the Plastic Trim Panel to the inside of each Core Door.

Insert the OEM mirror from the outside, and place the Bestop Mirror Mount onto the mirror pins.

Replace the Plastic Trim Panel, using the six (6) screws you removed earlier.

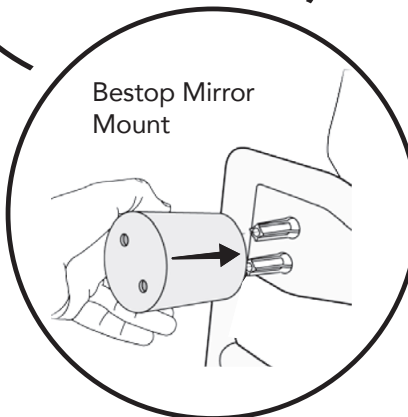

Step 2

Align the holes on the inside of the Core Door Upper Door Panel with the holes in the Bestop Mirror Mounts, and secure using the OEM T40 Torx screws. Align the mirrors before tightening these screws.

Section 1 Attach Original Mirrors; Adjust Paddles

Step 1


Tools



Ratchet



T40
Torx Driver

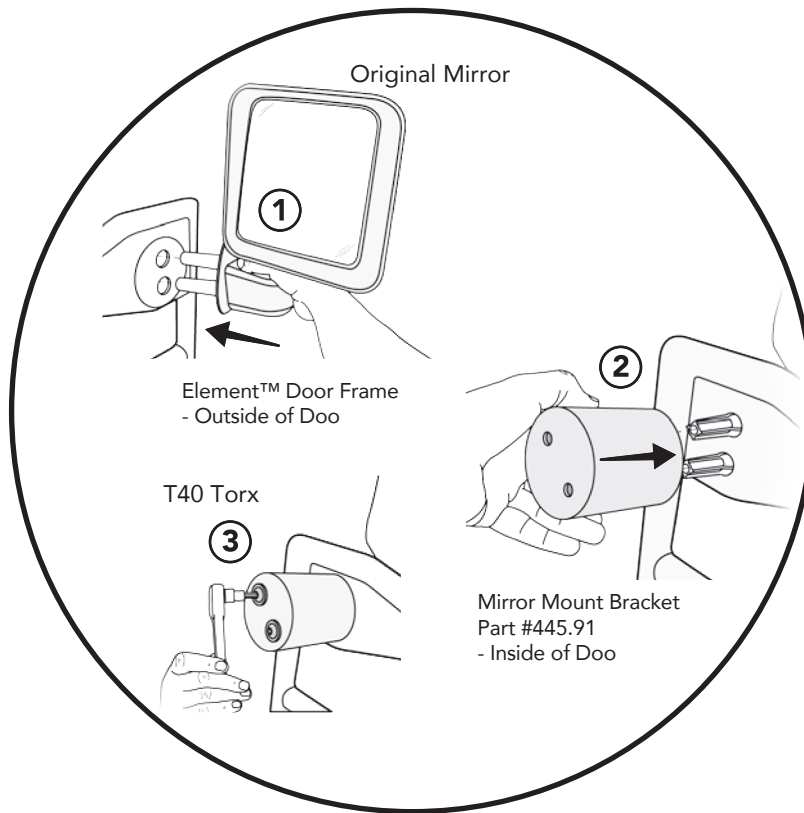

Step 1

The mirrors from the original doors can be mounted to the Element Doors using Mirror Mount Bracket Kit #5173401 (available separately from Bestop).

Use a T40 Torx wrench to remove the mirrors from the factory doors.

Align the holes in a Mirror Mount Bracket with the holes on the inside of the Element™ Door.

Slide the pins on the mirror through the door from the outside into the bracket. Secure using the two original mounting screws.