


# BILSTEIN SHOCK ABSORBERS

## How to Measure the Length of a Shock




### Eye to Eye

An eye to eye shock is measured from the center of one eyelet to the center of the other eyelet

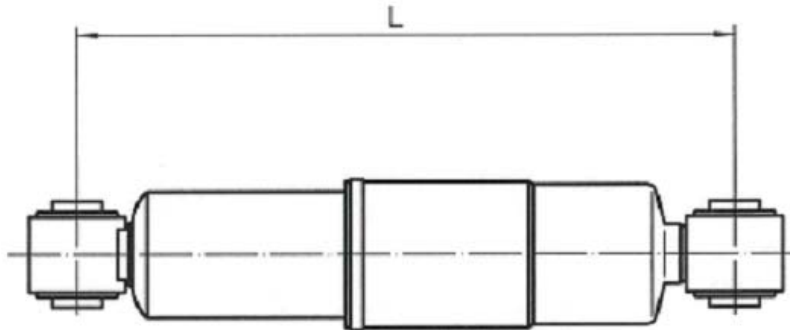

### Pin to Eye

A pin to eye shock is measured from the base of the stem where the mounting hardware rests to the center of the eyelet.

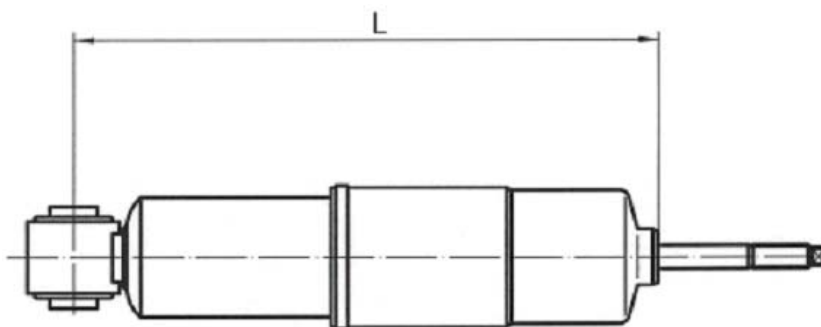


With Boot    No Boot



### Pin to Pin

A pin to pin shock is measure from the base of the stem where the mounting hardware rests to the base of the other stem where the mounting hardware rests.

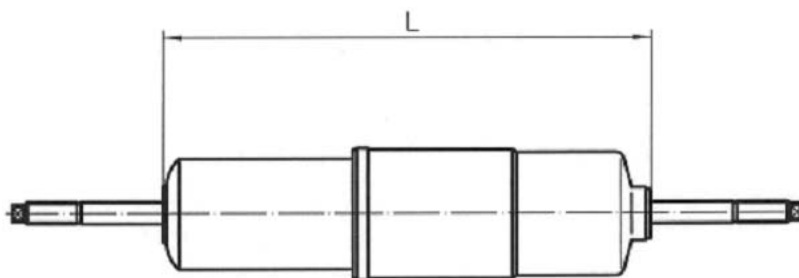

With Boot    No Boot

