



INSTALLATION INSTRUCTIONS

PART#: 17NR26SS\17NR26A
04-08 NISSAN TITAN INCLUDES 04-09 PRO 4-X /04-08 ARMADA



PARTS LIST:

1	Grille Guard	4	12-1.75mm x 30mm Hex Head Bolts
1	Driver/Left Mounting Bracket	4	12mm Nylock Washers
1	Passenger/Right Mounting Bracket	8	12mm ID x 24mm OD x 2.5mm Flat Washers
1	Driver/Left Top Bracket	2	10-1.50mm x 25mm Button Bolts
1	Passenger/Right Top Bracket	2	10mm Nylock Washers
		4	10mm ID x 20mm OD x 2mm Flat Washers



**Passenger Side
Mounting Bracket**



**Driver Side Mounting
Bracket**



**Passenger Side Top
Bracket**



**Driver Side Top
Bracket**

PROCEDURE:






- 1. REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT. READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION.**
2. From underside of vehicle, remove the front four torxs bolts (**Figure 1**) and the rear two hex bolts holding the factory skid plate (**Figure 2**), then remove skid plate from vehicle and set aside.
3. Starting on the driver side of the vehicle, remove tow hook and skid plate bracket from vehicle by unscrewing the two factory tow hook bolts (**Figure 3**).
4. Insert driver side Mounting Bracket through front of bumper intake and align holes in the Bracket with tow hook mounting location. Place tow hook and skid plate bracket over Mounting Bracket with front factory bolt attach (**Figure 4**), then push the assembly towards the front of the vehicle to line it up bolt with front tow hook mounting location (**Figure 5**). While holding the assembly, hand tighten the rear bolt and then hand tighten the front bolt (**Figure 6 & 7**).
5. Repeat steps 3 & 4 for passenger side Mounting Bracket.
6. Open the hood and remove the factory grille shell from vehicle, there are twelve clips holding the grille shell in place. **NOTE:** Use a long flat screw driver to unfasten these clips (**Figure 8**). Set grille shell assembly in a clean area.
7. Once you have removed the grille shell from vehicle, collect all fasteners and re-install them back to the grille shell (**Figure 9**).
8. Remove the two factory bolts in the top of the bumper located by the headlights (**Figure 10**).
9. Partially attach driver side Top Bracket using the factory bolts (**Figure 11**).
10. Repeat steps 7 & 8 for opposite side.
11. With help position Grille Guard on the outside of Mounting Brackets. Use the included (4) 12mm x 35mm Hex Head Bolts, (4) 12mm Nylock Washers, , and (8) 12mm Flat Washers (**Figure 12**). Do not tighten at this time.
12. Temporarily attach Grille Guard to Top Brackets using the included (2) 10mm x 25mm Button Head Bolts, (2) 10mmNylock Washers, and (2) 10mm Flat Washers (**Figure 11**).
13. Align Top Brackets properly, and then fully tighten Top Brackets to vehicle.
14. Remove Grille Guard from Top Brackets and carefully tilt Grille Guard forward to re-install the grille shell. To re-install grille shell back to the vehicle, align all attached fasteners on the shell to their mounting location and then push them into place.
15. Re-attach Grille Guard to Top Brackets and secure them using the hardware listed in step 12.
16. Align Grille Guard properly; then tighten all hardware at this time.
17. Do periodic inspections to the installation to make sure that all hardware is secure and tight.

To protect your investment, wax this product after installing. Regular waxing is recommended to add a protective layer over the finish. Do not use any type of polish or wax that may contain abrasives that could damage the finish.

For stainless steel: Aluminum polish may be used to polish small scratches and scuffs on the finish. Mild soap may be used also to clean the Grille Guard.

For gloss black finishes: Mild soap may be used to clean the Grille Guard.

GRILL GUARD FOR 04-08 NISSAN TITAN INCLUDES PRO 4-X / 04-08 ARMADA

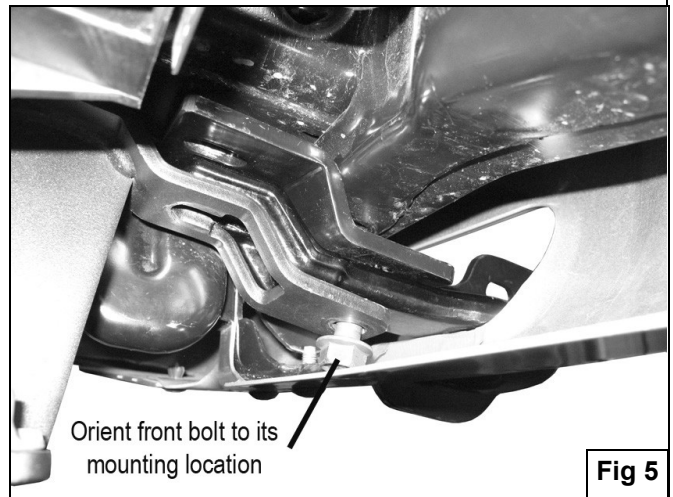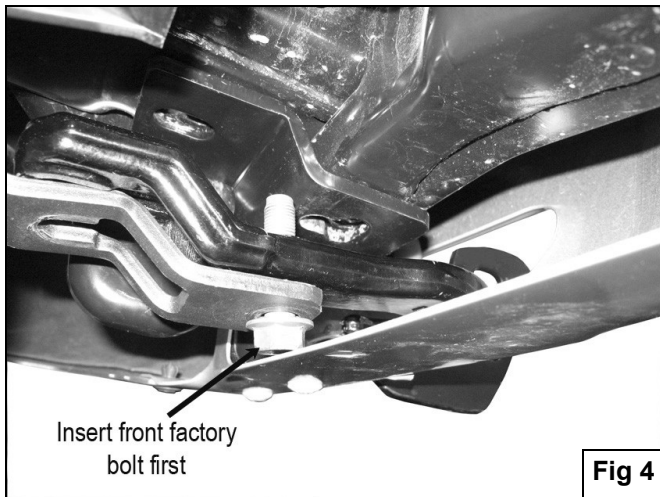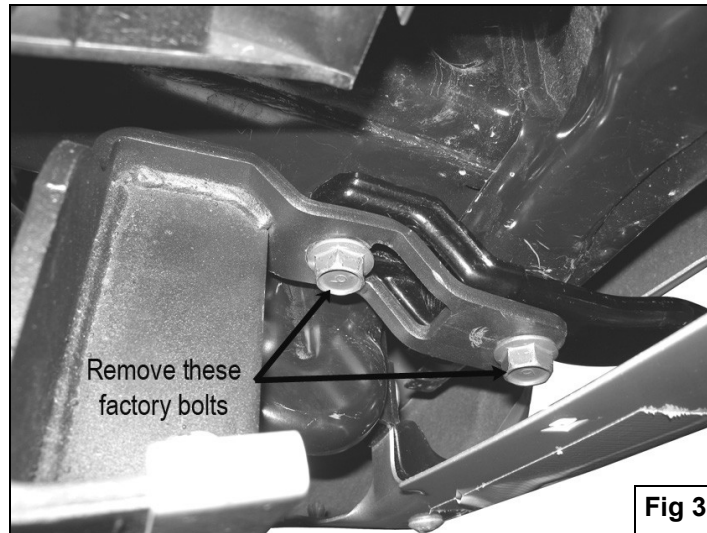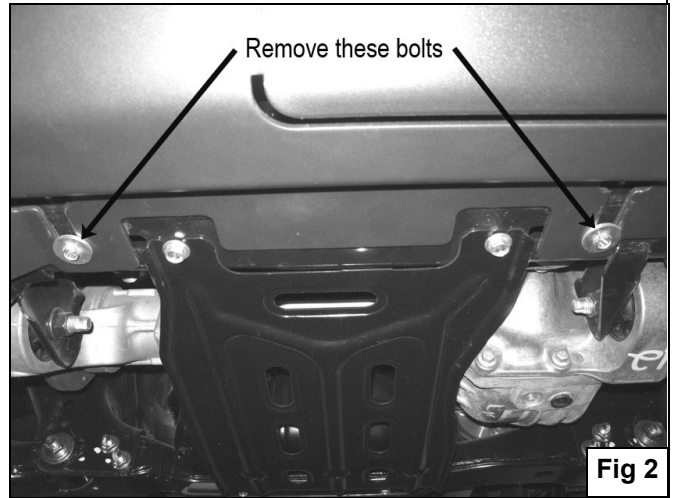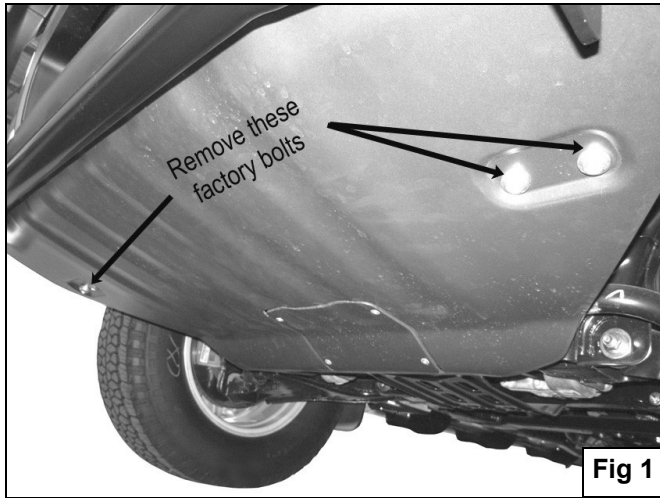

GRILL GUARD FOR 04-08 NISSAN TITAN INCLUDES PRO 4-X / 04-08 ARMADA

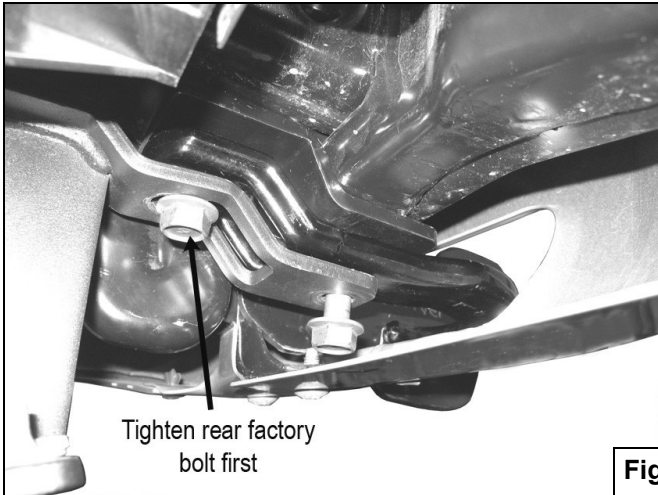


Fig 6



Fig 7



Fig 8

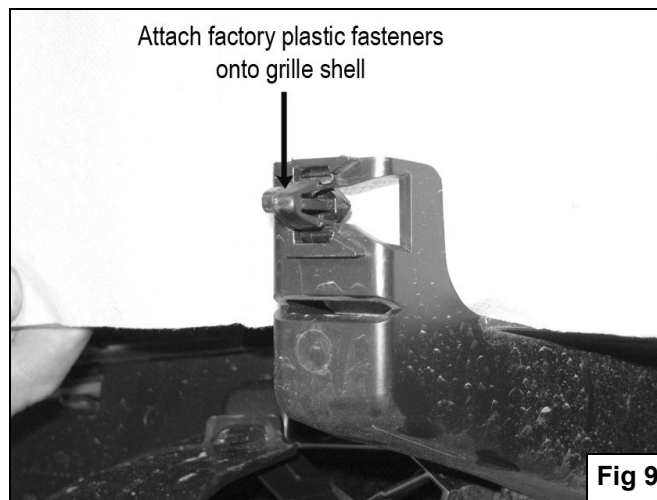


Fig 9

GRILL GUARD FOR 04-08 NISSAN TITAN INCLUDES PRO 4-X / 04-08 ARMADA

