



Installation Instructions

IN-CHANNEL RAIN GUARDS

For proper installation and best possible fit, please read all instructions **BEFORE** you begin.
For technical assistance or to obtain missing parts, please call Customer Relations at 1-800-241-7219.

Important Safety Information



- CAUTION - Before driving, ensure that the vent visor is properly secured to vehicle.
- Do not use automatic "brush-style" car washes.
- Do not use cleaning solvents of any kind.
- Periodically check all components for tightness.

Contents - 2 Piece Set

NOTE: Actual product may vary from illustration.



Front Driver
Side Visor



Front Passenger
Side Visor


Contents - 4 Piece Set



Front Driver
Side Visor



Front Passenger
Side Visor



Rear Driver
Side Visor



Rear Passenger
Side Visor

Tools Required



Car Wash Supplies



Clean Towel


Preparation Before Painting / Installation

- A trial fit is recommended to ensure proper positioning and fit.
- Check fit of parts before painting as we will not accept the return of modified or painted parts.
- Wash and dry your vehicle to remove any debris and/or dirt from the installation area.

Installation Steps

NOTE: Actual application may vary slightly from illustrations.


Roll down windows. Clean the inner window channels

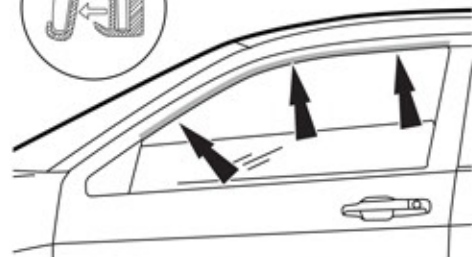

1

NOTE: visors will mount on the **inside** of the window channel.

Remove the tape liner from the front flange. Peel back 2" (5cm) of tape liner from each end of top flange.

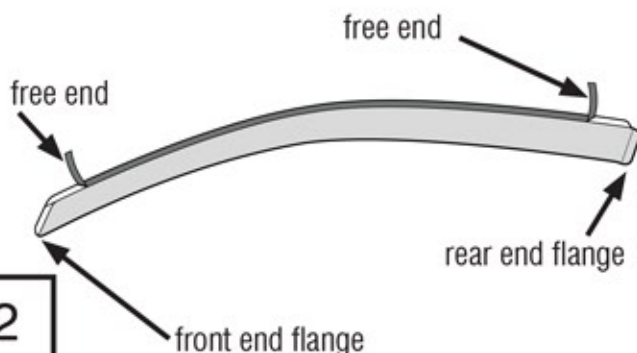

2

Installation Steps


NOTE: Actual application may vary slightly from illustrations.

Insert visor into window channel, rear flange first. Rear flange inserts between the trim and the exterior surface. The front and top flange slides into the window channel.

Remove remaining tape liner by pulling on free ends. Raise window slowly and leave up for 24 hours to secure visor in window channel.



4

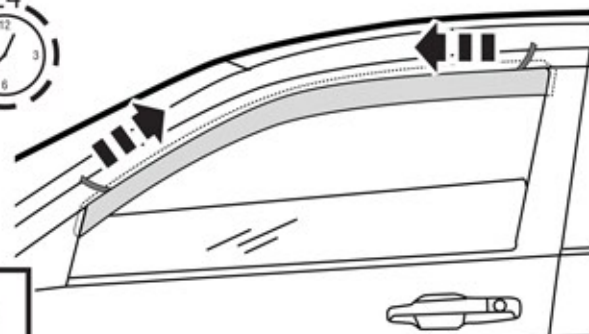

3

free end

free end

4 Piece Set

Install the rear visors using the same preparation and installation methods as the front visor. Note that front & rear flanges fit between the window trim & exterior surface.

NOTE: the rear flange of the rear visor should go **between** the thin metal strip and the rubber weatherstrip.

metal strip

weather strip

5

Repeat Steps 1 - 5 for Passenger Side

Care and Cleaning

- Wash only with mild soap & dry with a clean cloth.

Congratulations!