








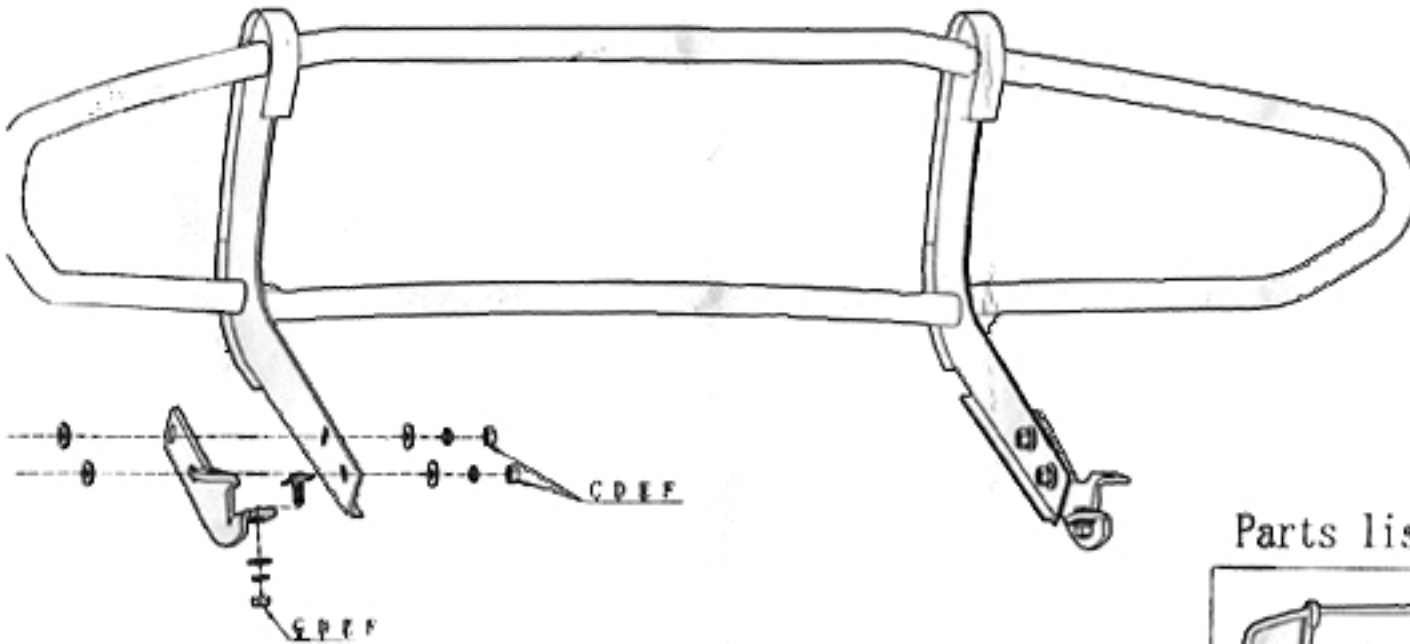


Installation Instruction  
 Name:Grille Guard  
 Item No:15HOCRSS



Parts list:

|  |   |   |
|--|---|---|
| <br>① grille guard (1 piece)           | <br>② mount bracket (2 pieces-lateral symmetry) |   |
| <br>③ M12X30 hex head bolt (4 pieces) | <br>④ M12 flat washer (10 pieces)              | <br>⑤ M12 lock washer (5 pieces) |
| <br>⑥ M12 nut (5 pieces)              | <br>⑦ M12X40 bolt (2 pieces)                   |   |

STEPS:

- 1. Check the parts in the box carefully if match above list .
- 2. Pls prepare the tools for installation, follow as: 17-19wrench, 19-22wrench.
- 3. Connect the mount bracket (B) and the girder of the car with M12X40 bolt (G), original bolt, then tighten it.
- 4. Connect the grille guard (A) and mount bracket (B) with M12X30 hex head bolt (C), then tighten it.