

# **INSTALLATION INSTRUCTION**

**SS Rear Bumper Guards DOUBLE LAYER**

**2013-2015 Nissan Pathfinder/**

**2013-2015 Infiniti JX35/**

**2014-2015 Infiniti QX60**

**PART # 8D110318SS-DL**



**BLACK HORSE  
OFF ROAD**


Attention:

- Please read this installation menu before installing this part. Protect your car properly in case there is any scratch might have.
- You may need to periodically to re-tighten all hardware for safety use after installation.
- Installation pictures are only for your reference, there might be some differences between pictures and real parts but no affect for your fitting.

#### PART LIST


| NO. | NAME          | QTY | REMARK     | NO. | NAME                       | QTY | REMARK     |
|-----|---------------|-----|------------|-----|----------------------------|-----|------------|
| ①   | Rear Bumper   | 1   |            | ⑥   | Hexagon Nut                | 4   | M12        |
| ②   | Bracket       | 2   |            | ⑦   | Hexagon Bolt (fine thread) | 4   | M10*30     |
| ③   | Hexagon Bolt  | 4   | M12*35     | ⑧   | Spring Washer              | 4   | φ10        |
| ④   | Large Washer  | 8   | φ12*30*3.0 | ⑨   | Large Washer               | 4   | φ10*30*2.5 |
| ⑤   | Spring Washer | 4   | φ12        |     |                            |     |            |

#### INSTALLATION PICTURE

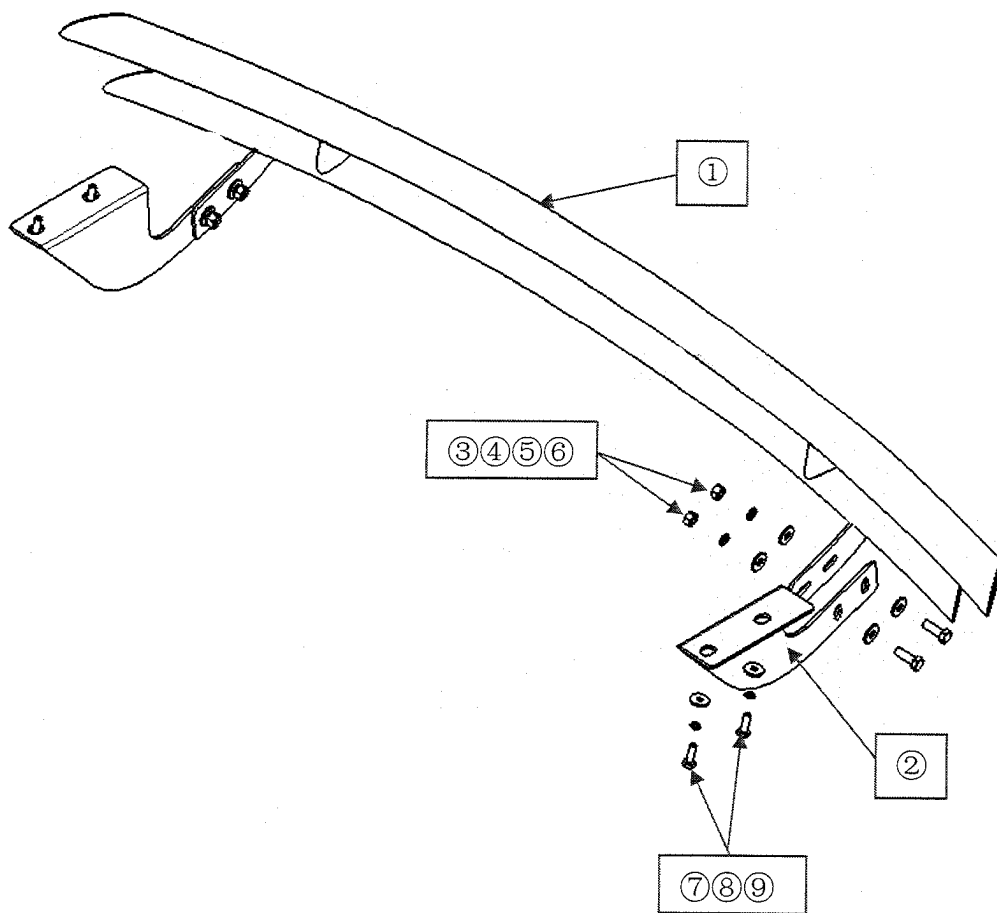


## INSTALLATION PROCEDURES


Pic 1A

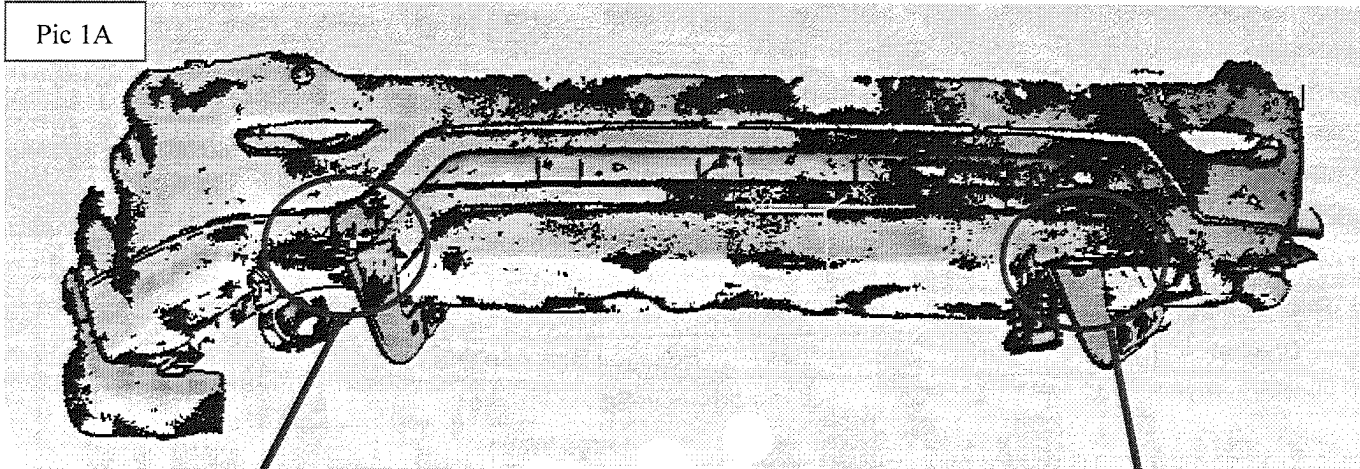

Pic 1B

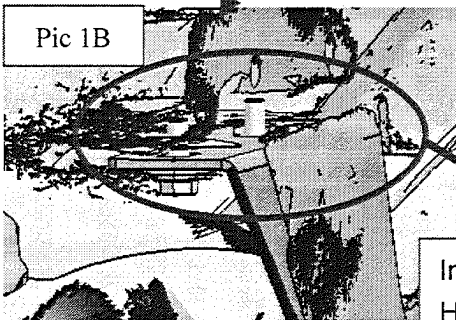


Pic 1C

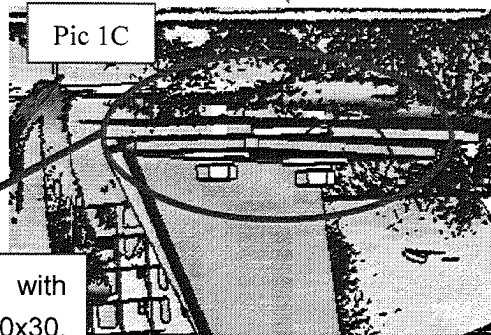


Install brackets on the girder with Hexagon Bolt (fine thread) M10x30, Large Washer  $\phi 10 \times 30 \times 2.5$ , Spring Washer  $\phi 12$


Pic 2A

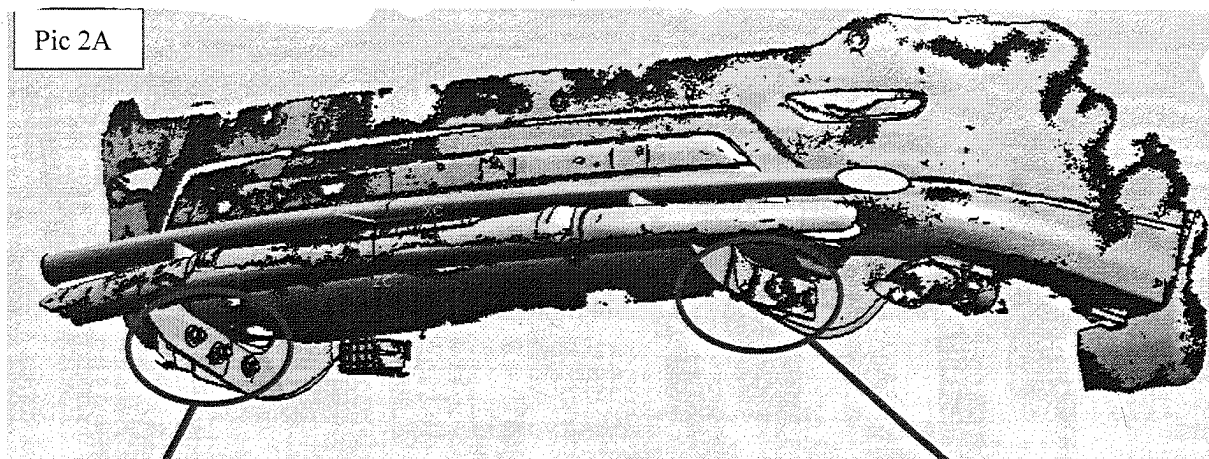

Pic 2B

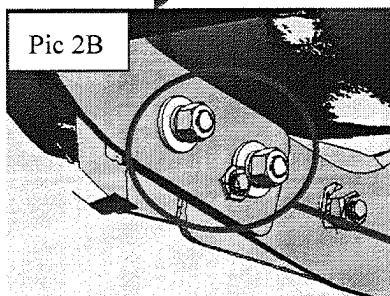

Pic 2C

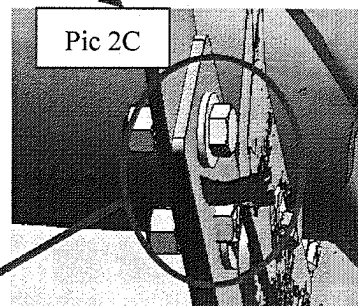

Install Rear Bumper on the girder with Hexagon Bolt M12x35, Large Washer  $\phi 12 \times 30 \times 3.0$ , Spring Washer  $\phi 12$ , Hexagon Nut M12