

BLACK MODULAR UNIVERSAL ROLL BAR FOR TOYOTA TACOMA 16-17 WITH ORIGINAL SIZE CARGO BASKET (FLAT BASE WITH LED BRAKE LIGHT)(MR STYLE)



INSTALLATION INSTRUCTIONS

**BLACK MODULAR UNIVERSAL ROLL BAR FOR TOYOTA TACOMA
15-19 WITH ORIGINAL SIZE CARGO BASKET (FLAT BASE WITH
LED BRAKE LIGHT)(MR STYLE)**

PART # ATRB-TOTAB

BLACK MODULAR UNIVERSAL ROLL BAR FOR TOYOTA TACOMA 16-17 WITH ORIGINAL SIZE CARGO BASKET (FLAT BASE WITH LED BRAKE LIGHT)(MR STYLE)

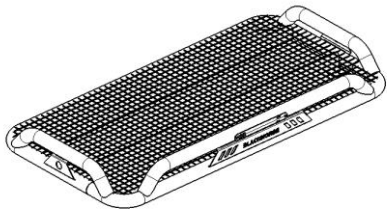
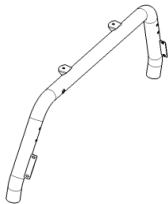
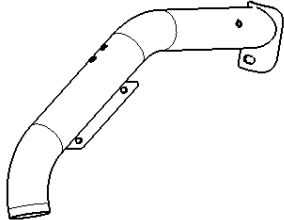
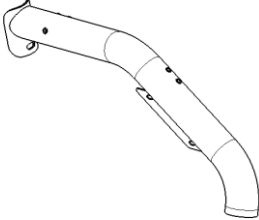
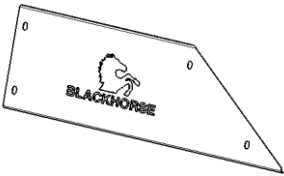
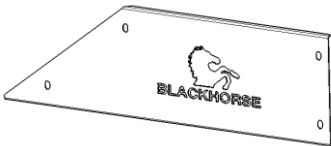
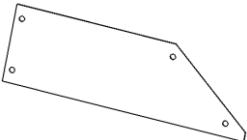
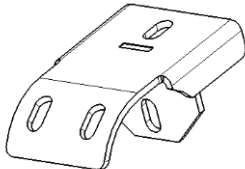
Before Installation

- Please read the instruction completely for easy installation, which will also help you to avoid scratches or other potential damages to your appealing car.
- The figures here are for reference only and may have differences with the actual product you received, however they share the same assembly way.

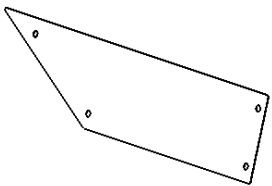
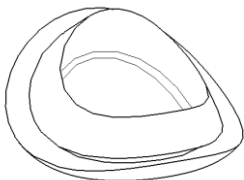
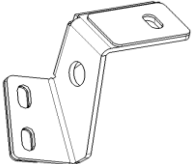
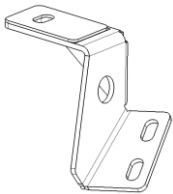
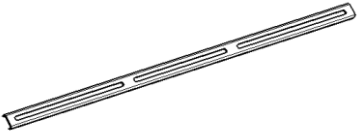

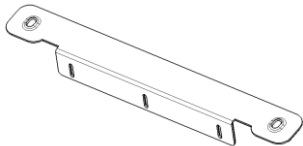



Care and Cleaning

- Mild soap may be used also to clean the Product.
- Please periodically check and retighten all the hardware and clean the investment for a refresh look.





Parts list

NO.	QTY	NAME	NO.	QTY	NAME
①	1	 Luggage frame (with LED light)	②	1	 Main tube 1
③	1	 Side tube-L	④	1	 Side tube-R
⑤	1	 Decoration plate-L	⑥	1	 Decoration plate-R
⑦	2	 Red decoration plate	⑧	2	 Connect bracket 1

BLACK MODULAR UNIVERSAL ROLL BAR FOR TOYOTA TACOMA 16-17 WITH ORIGINAL SIZE CARGO BASKET (FLAT BASE WITH LED BRAKE LIGHT)(MR STYLE)

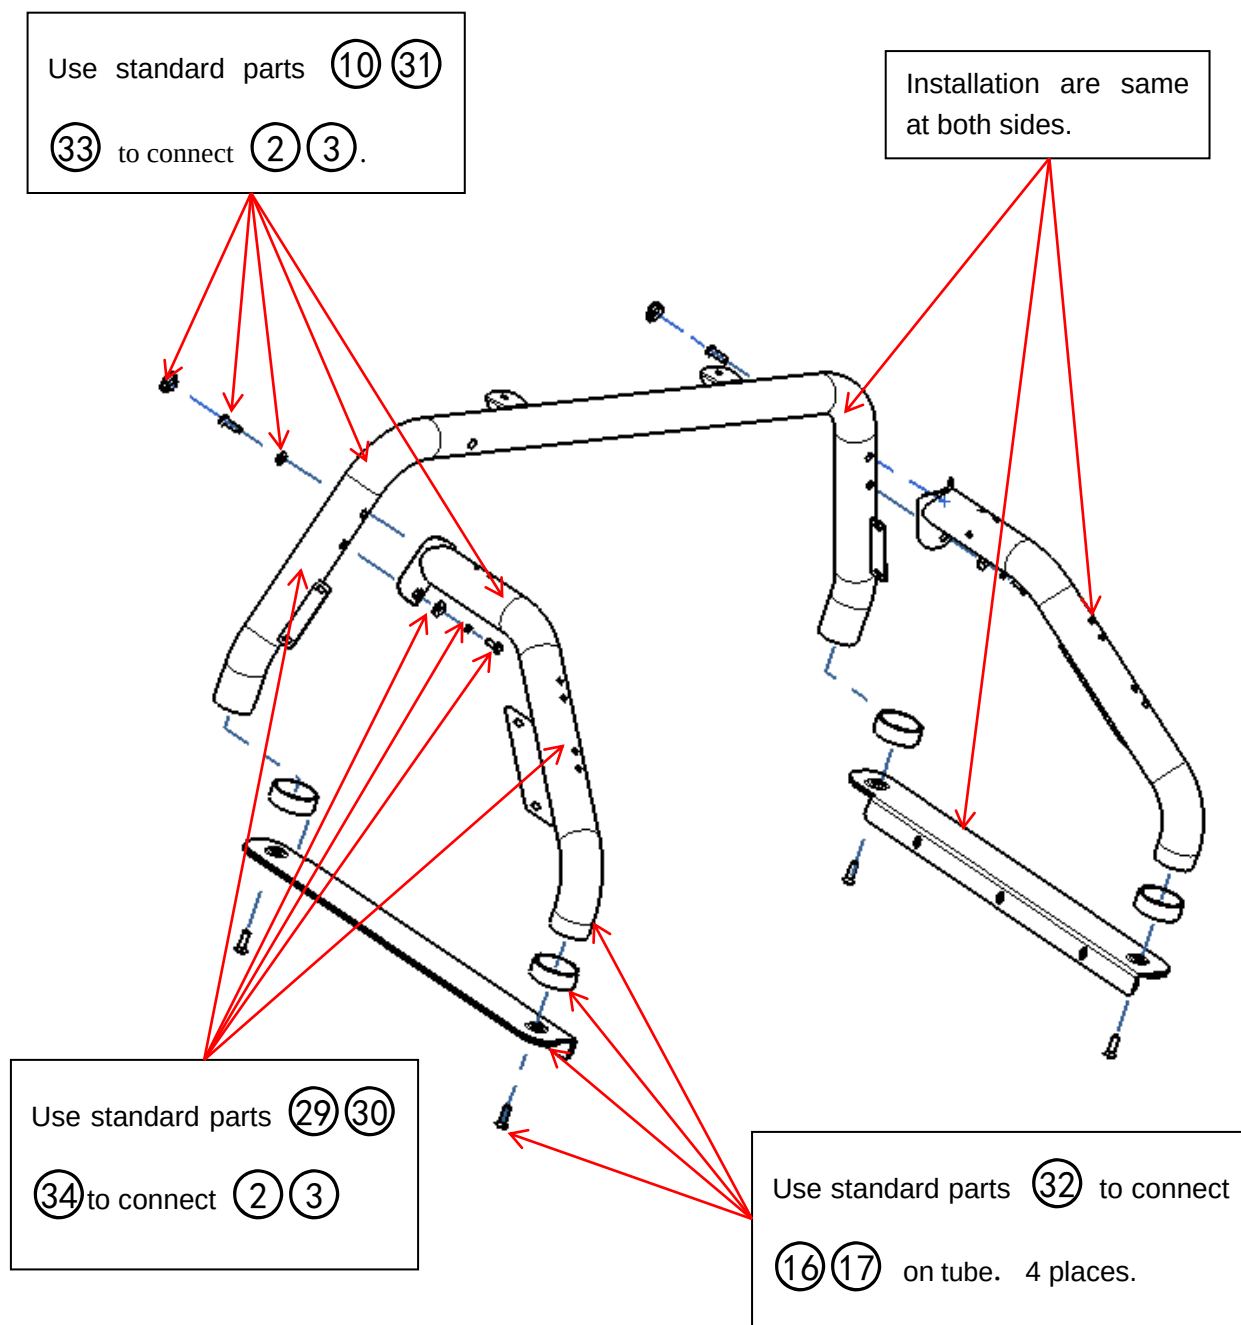
⑨	2	 Decoration plate backboard	⑩	2	 Rubber plug
⑪	1	 Connect bracket 2-L	⑫	1	 Connect bracket 2-R
⑬	1	 Connecting plate	⑭	2	 Block
⑮	1	 Allen wrench S=5	⑯	2	 Bracket
⑰	4	 Gum cover	⑱	8	 Flat washer D6
⑲	8	 Button head allen bolts M6_20	⑳	8	 Hex nut M6
㉑	2	 Button head allen bolts M8*30	㉒	8	 Flat washer D8
㉓	14	 Hex bolt M8*25	㉔	6	 Hex nut M8
㉕	2	 Spring washer D8	㉖	6	 Extra flat washer D8

BLACK MODULAR UNIVERSAL ROLL BAR FOR TOYOTA TACOMA 16-17 WITH ORIGINAL SIZE CARGO BASKET (FLAT BASE WITH LED BRAKE LIGHT)(MR STYLE)

②⑦	6	 T type bolt M8_28	②⑧	6	 Hex jam nut M8
②⑨	2	 Spring washer D10	③⑩	2	 Button head allen bolts M10_25
③①	2	 Button head allen bolts M12_40	③②	4	 Flat head allen bolts M12_40
③③	2	 Flat washer D12	③④	2	 Non-standard washer D10
③⑤	1	 Allen wrench S=8	③⑥	1	 Allen wrench S=6
③⑦	1	 Allen wrench S=4			

Installation Steps

Step1: Assemble tubes with standard parts. Lock all the standard parts after adjust the position.

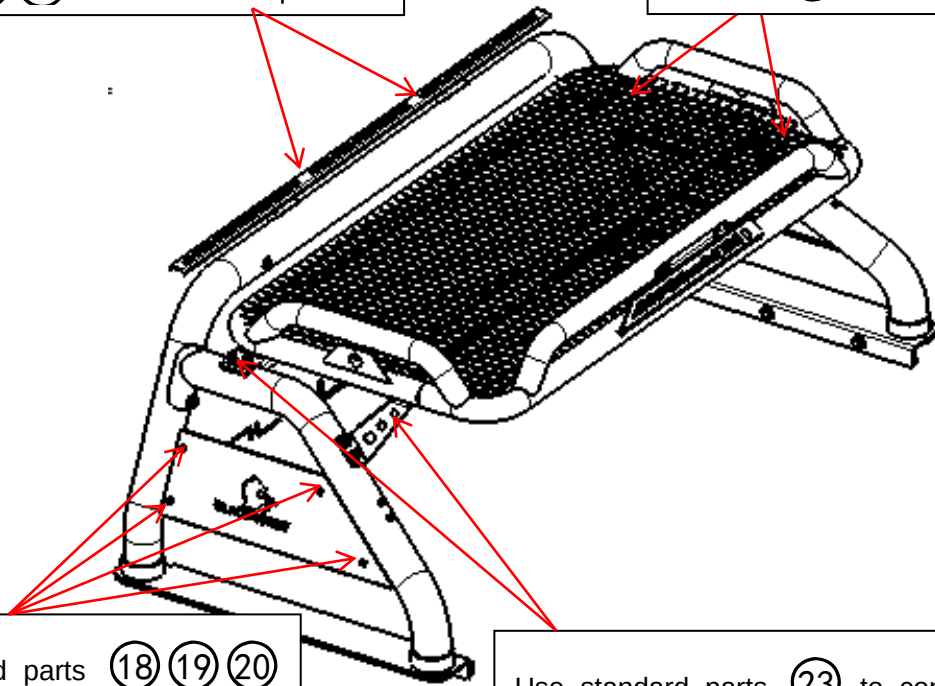


BLACK MODULAR UNIVERSAL ROLL BAR FOR TOYOTA TACOMA 16-17 WITH ORIGINAL SIZE CARGO BASKET (FLAT BASE WITH LED BRAKE LIGHT)(MR STYLE)

Step2: Assemble Luggage frame and tubes with standard parts. Lock all the standard parts after adjust the position.

Use standard parts ②① ②② ②④ ②⑤ to connect ①③ ①④ on the tubes. 2 places.

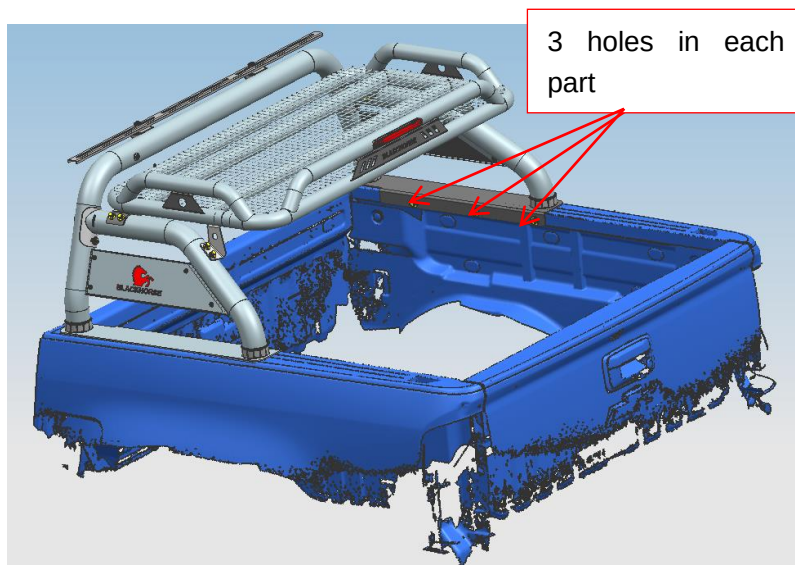
Use standard parts ②② ②③ ②④ to connect ① on the tubes. 4 places.



Use standard parts ①⑧ ①⑨ ②⑦ to connect ⑥ ⑦ ⑨ on the tubes. 8 places.

Use standard parts ②③ to connect ⑧ ⑪ ⑫ on the tubes. 8 places.

Step3: Put roll bar on the truck in an appropriate place. Use standard ②⑥ ②⑦ ②⑧ ②⑨ to fasten roll bar on the truck.



3 holes in each part

NOTE

Any damages and losses caused by improper installation and application, goes beyond our quality warranty.