



# **INSTALLATION INSTRUCTIONS**

**PART #: CBS-HYB6201**


**SAFARI BAR / BRACKETS**



**BLACK HORSE  
OFF ROAD**

## INSTRUCTIONS


APPLICATION: 2007-08 HYUNDAI SANTA FE

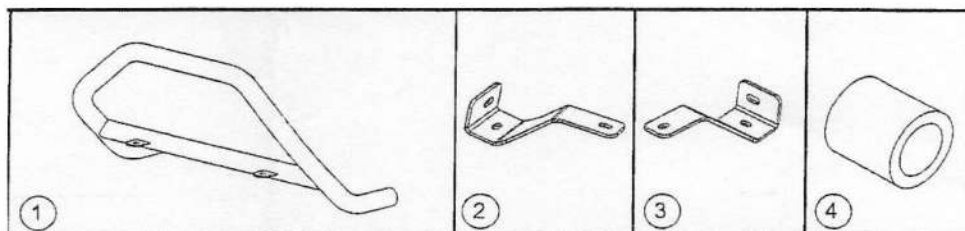


| ITEM | QTY | CONTENTS                                   | TOOLS                                                                                |
|------|-----|--------------------------------------------|--------------------------------------------------------------------------------------|
| 1    | 1   | SAFARI BAR ASSEMBLY (PURCHASED SEPARATELY) | 3/4" WRENCH<br>17MM SOCKET<br>13MM SOCKET<br>12MM SOCKET<br>RATCHET<br>TORQUE WRENCH |
| 2,3  | 2   | BRACKET, PASSENGER (2) AND DRIVER (3)      |                                                                                      |
| 4    | 2   | SPACER TUBE                                |                                                                                      |
| 5    | 2   | 1/2-13 X 2.00" HEX HEAD BOLT               |                                                                                      |
| 6    | 2   | 1/2" FLAT WASHER                           |                                                                                      |
| 7    | 2   | 1/2" LOCK WASHER                           |                                                                                      |
| 8    | 2   | M10-1.25 X 50MM HEX HEAD BOLT              |                                                                                      |
| 9    | 2   | M10 FLAT WASHER                            |                                                                                      |
| 10   | 2   | M10 LOCK WASHER                            |                                                                                      |
| 11   | 2   | M8-1.25 X 30MM HEX HEAD BOLT               |                                                                                      |
| 12   | 2   | 5/16" FLAT WASHER                          |                                                                                      |
| 13   | 2   | 5/16" LOCK WASHER                          |                                                                                      |

- STEP 1. Remove the contents from box and check for damage. Verify all parts are present. Read instructions completely before beginning.
- STEP 2. Remove factory shield by removing six 8mm bolts. Shield will not be reinstalled. **SEE FIGURE 1.**
- STEP 3. Remove factory 10mm bolts. **SEE FIGURE 2.**
- STEP 4. Determine passenger and driver brackets.
- STEP 5. Attach bracket using the supplied spacer tube, M10-1.25 x 50mm bolt, 3/8" flat washer and lock washer, M8-1.25 x 30mm bolt, and 5/16" flat washer and lock washer per side. **SEE FIGURE 3.**
- STEP 6. Attach Safari Bar to brackets using 1/2-13 x 2.00" hex head bolt, 1/2" flat washer and lock washer as shown. **SEE FIGURE 4.**
- STEP 7. Level and adjust Safari Bar as desired and tighten all fasteners. Recommended torque values are 45 Ft. Lbs. for 10mm bolts, 64 Ft. Lbs. for 1/2" fasteners and 23 Ft. Lbs. for 8mm bolts.

FACTORY SHIELD

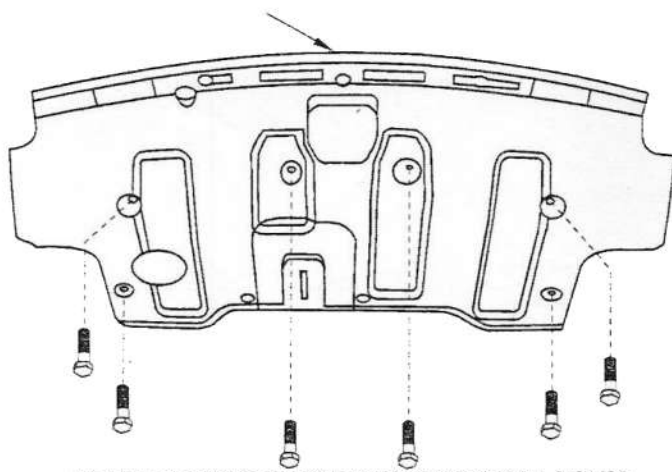

NOTE: REMOVE THESE 6 FACTORY 8MM BOLTS. SHIELD WILL NOT BE REINSTALLED.

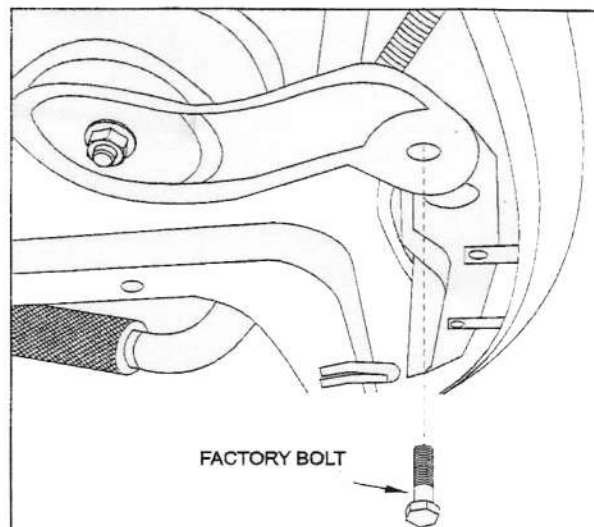

FACTORY BOLT

FIGURE 2 PASSENGER SIDE SHOWN

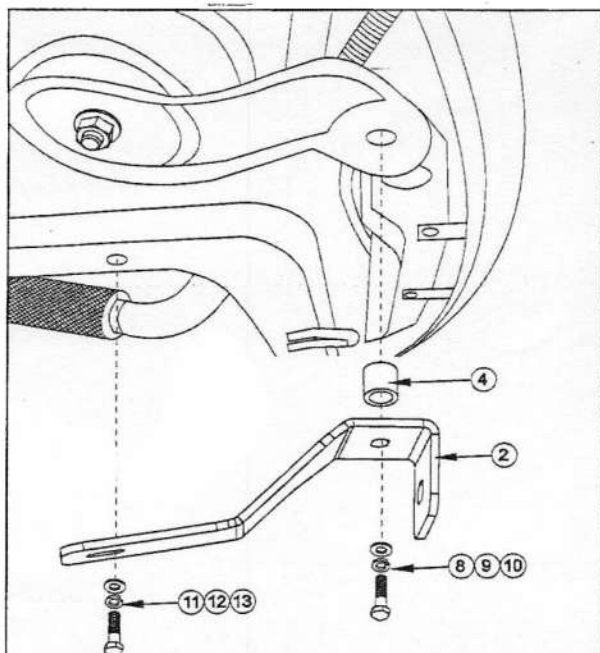


FIGURE 3 PASSENGER SIDE BRACKET SHOWN

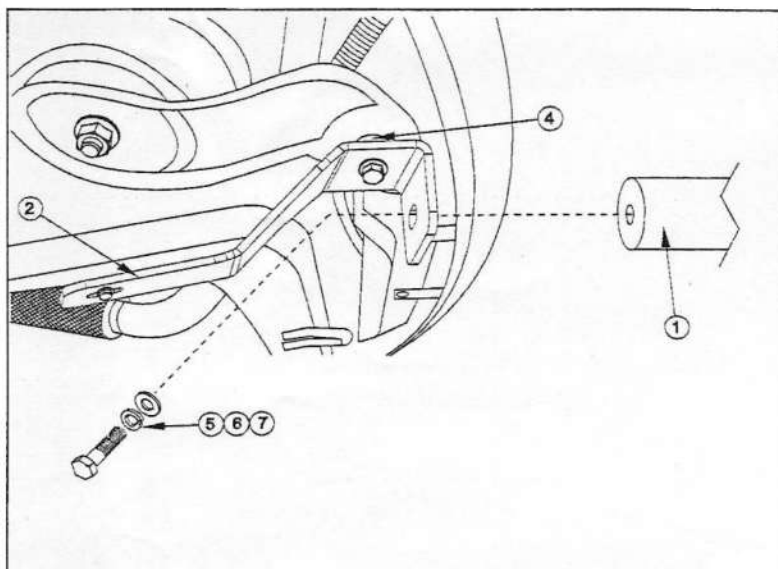


FIGURE 4 PASSENGER SIDE BRACKET SHOWN