



INSTALLATION INSTRUCTIONS

PART #: MBS-HYB6201


SPORT BAR / BRACKETS



**BLACK HORSE
OFF ROAD**

INSTRUCTIONS


APPLICATION: 2007-08 HYUNDAI SANTA FE

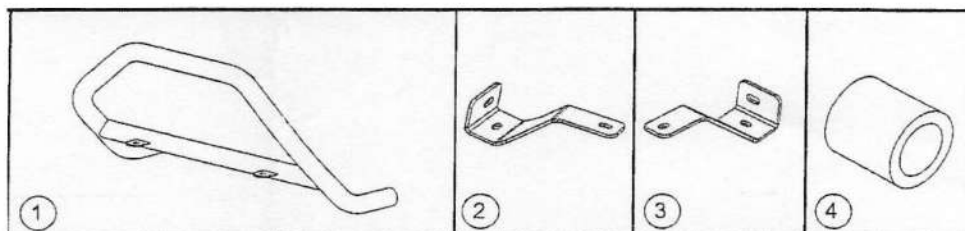

ITEM	QTY	CONTENTS	TOOLS
1	1	SAFARI BAR ASSEMBLY (PURCHASED SEPARATELY)	3/4" WRENCH 17MM SOCKET 13MM SOCKET 12MM SOCKET RATCHET TORQUE WRENCH
2,3	2	BRACKET, PASSENGER (2) AND DRIVER (3)	
4	2	SPACER TUBE	
5	2	1/2-13 X 2.00" HEX HEAD BOLT	
6	2	1/2" FLAT WASHER	
7	2	1/2" LOCK WASHER	
8	2	M10-1.25 X 50MM HEX HEAD BOLT	
9	2	M10 FLAT WASHER	
10	2	M10 LOCK WASHER	
11	2	M8-1.25 X 30MM HEX HEAD BOLT	
12	2	5/16" FLAT WASHER	
13	2	5/16" LOCK WASHER	


- STEP 1. Remove the contents from box and check for damage. Verify all parts are present. Read instructions completely before beginning.
- STEP 2. Remove factory shield by removing six 8mm bolts. Shield will not be reinstalled. **SEE FIGURE 1.**
- STEP 3. Remove factory 10mm bolts. **SEE FIGURE 2.**
- STEP 4. Determine passenger and driver brackets.
- STEP 5. Attach bracket using the supplied spacer tube, M10-1.25 x 50mm bolt, 3/8" flat washer and lock washer, M8-1.25 x 30mm bolt, and 5/16" flat washer and lock washer per side. **SEE FIGURE 3.**
- STEP 6. Attach Safari Bar to brackets using 1/2-13 x 2.00" hex head bolt, 1/2" flat washer and lock washer as shown. **SEE FIGURE 4.**
- STEP 7. Level and adjust Safari Bar as desired and tighten all fasteners. Recommended torque values are 45 Ft. Lbs. for 10mm bolts, 64 Ft. Lbs. for 1/2" fasteners and 23 Ft. Lbs. for 8mm bolts.

FACTORY SHIELD

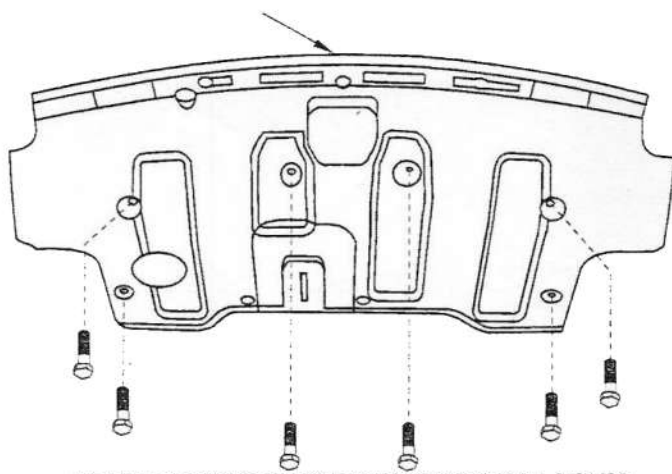

NOTE: REMOVE THESE 6 FACTORY 8MM BOLTS. SHIELD WILL NOT BE REINSTALLED.

FIGURE 1

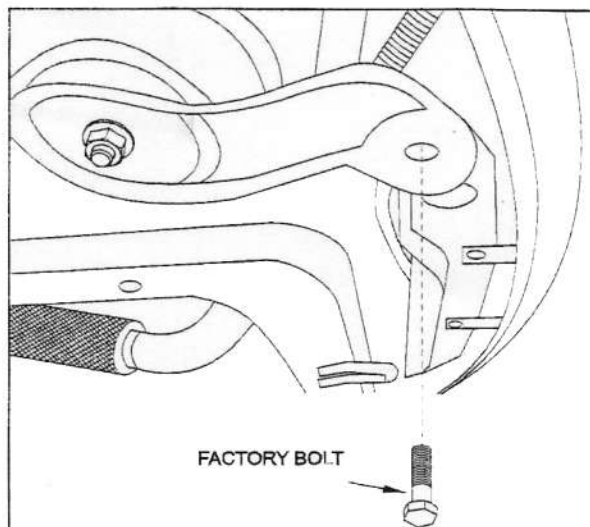

FACTORY BOLT

FIGURE 2 PASSENGER SIDE SHOWN

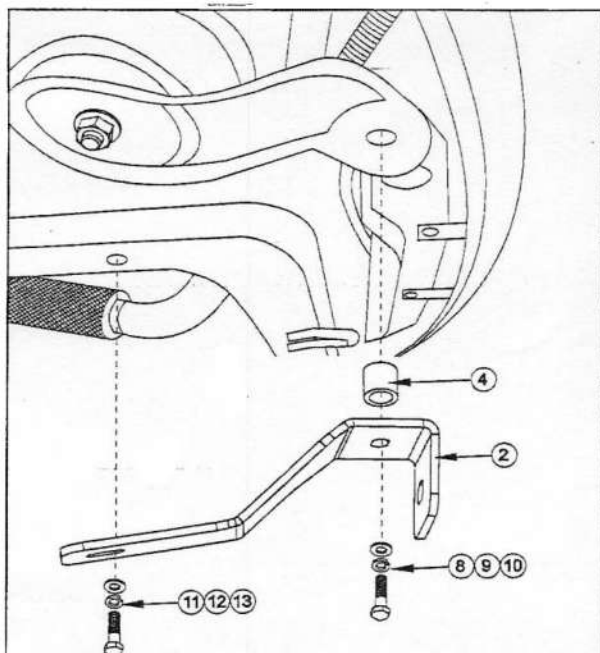


FIGURE 3 PASSENGER SIDE BRACKET SHOWN

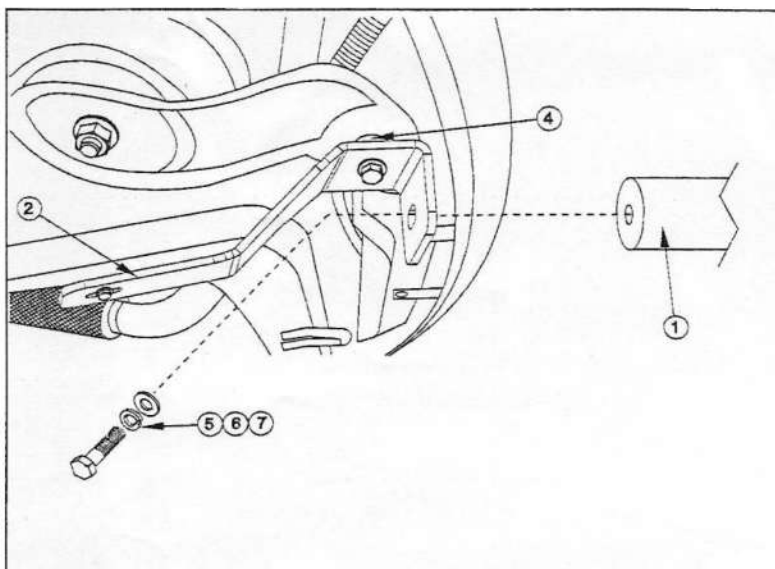


FIGURE 4 PASSENGER SIDE BRACKET SHOWN