



INSTALLATION INSTRUCTIONS

MAX T BULL BAR FOR 2020 KIA TELLURIDE

PART # MBT-MK612

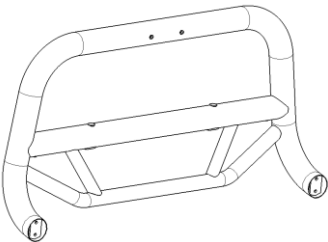
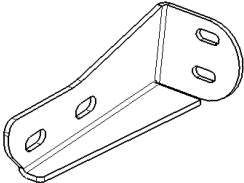
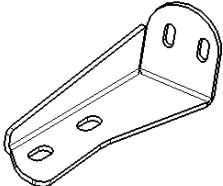
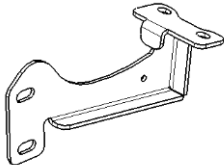
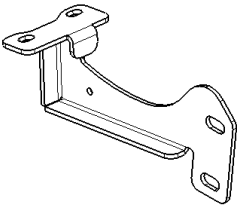
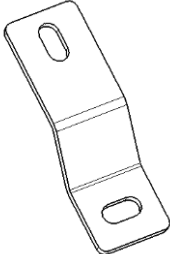
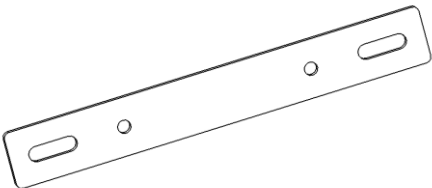
Before Installation

- Please read the instruction completely for easy installation, which will also help you to avoid scratches or other potential damages to your appealing car.
- The figures here are for reference only and may have differences with the actual product you received, however they share the same assembly way.

Care and Cleaning

- Mild soap may be used also to clean the Product.
- Please periodically check and retighten all the hardware and clean the investment for a refresh look.

Parts list

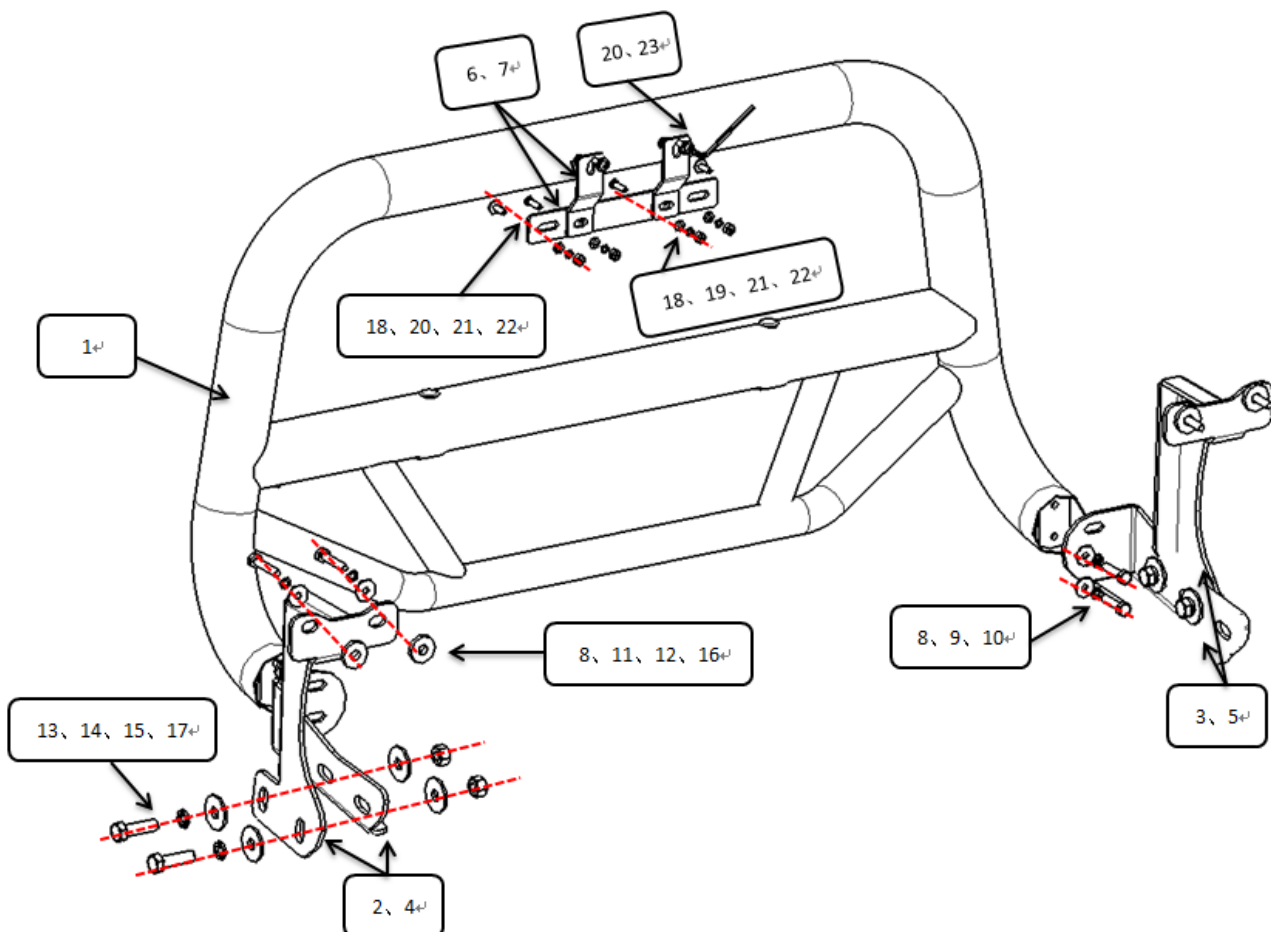
NO.	QTY	NAME	NO.	QTY	NAME
①	1	 Bull Bar	②	1	 Bracket 1 (L)
③	1	 Bracket 1 (R)	④	1	 Bracket 2 (L)
⑤	1	 Bracket 2 (R)	⑥	2	 License Plate Bracket 1
⑦	1	 License Plate Bracket 2			

Standard Parts List:

⑧	8	Spring Washer D8	⑨	4	Hex Bolt M8_35
⑩	4	Flat Washer D8	⑪	4	Large Flat Washer D8
⑫	4	Hex Bolt M8_40	⑬	4	Hex Bolt M12_40
⑭	4	Spring Washer D12	⑮	8	Large Flat Washer D12
⑯	4	Flat Washer D12	⑰	4	Hex Nut M12
⑱	4	Hex Nut M6	⑲	2	Hex Button Head Bolt M6_20
⑳	4	Assembly Bolt M6_20	㉑	4	Spring Washer D6
㉒	4	Flat Washer D6	㉓	1	Allen Wrench S=4

Installation Steps

Installation Figure:

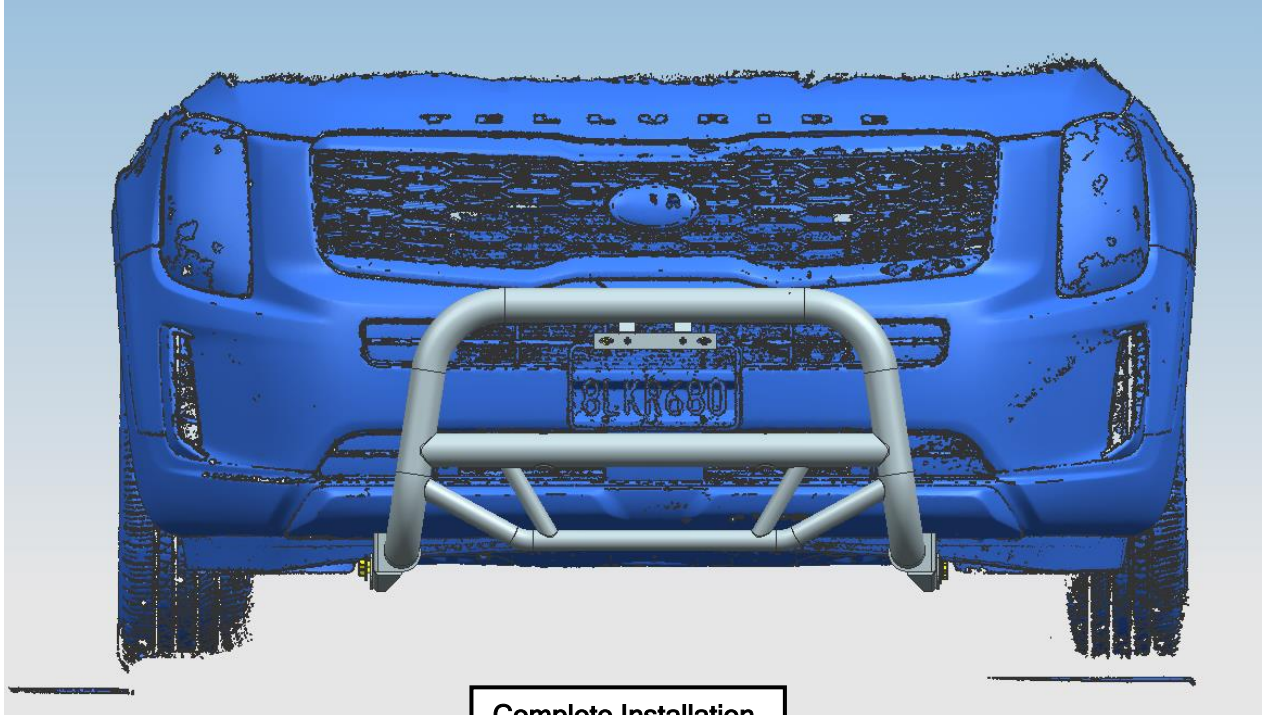


Step 1: Verify that all parts are present according to the manual.

Step 2: Install the MAX bull bar and brackets to the vehicle follow installing picture.

Step 3: Test and make sure that the MAX bull bar is steadily fixed, fully tighten all hardware.

Step 4: Installation is finished, pick up all tools.



Complete Installation

NOTE

Any damages and losses caused by improper installation and application, goes beyond our quality warranty.