



INSTALLATION INSTRUCTIONS


2021 2023 Nissan Rogue

PART # PIN170

- **866-926-2867**
- Email: info@blackhorseoffroad.com
 - Mon-Fri 9AM-6PM EST
 - **Headquarters**
- 39 ST. MARY'S PLACE FREEPORT, NY 11520

PARTS LIST:

Qty	Description	Qty	Description
1	Driver/Left Front Mounting Bracket	12	Lock Washer D6
1	Passenger/Right Front Mounting Bracket	2	Lock Washer D8
1	Driver/Left Center Mounting Bracket	14	Lock Washer D10
1	Passenger/Right Center Mounting Bracket	12	Extra Flat Washer D6 (6*22*2mm)
1	Driver/Left Rear Mounting Bracket	4	Flat Washer D8 (8*24*2mm)
1	Passenger/Right Rear Mounting Bracket	14	Flat Washer D10 (10*27*3mm)
1	Driver/Left Rear Support Bracket	12	Hex Nut M6
1	Passenger/Right Rear Support Bracket	2	Hex Nut M8
2	T Bolt (M10x35 Hex Bolt)	14	Hex Nut M10
12	T Bolt (M10x35 Bolt)	2	Hex Bolt M8_25
12	T Bolt M6x20		

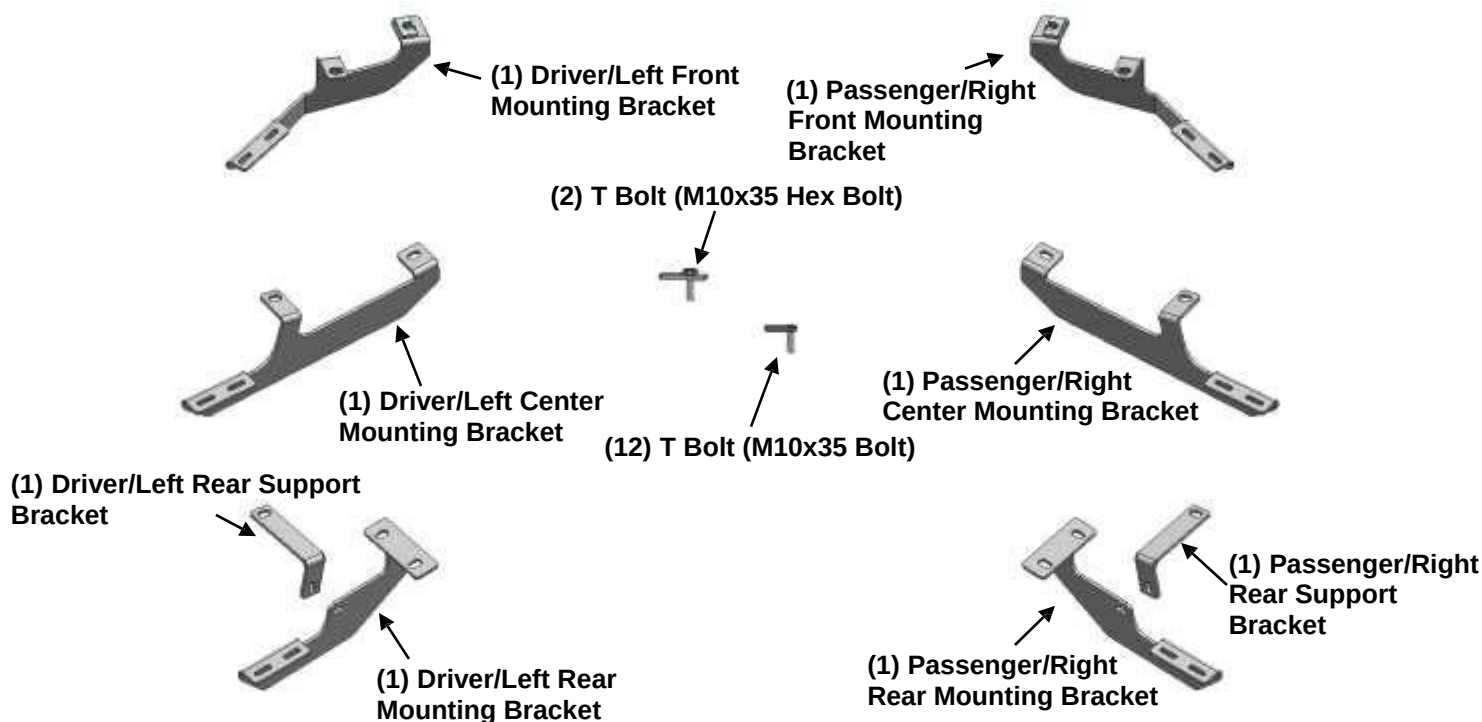

PROCEDURE:

- REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT. READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION.**
- Select the driver side front mounting bracket. Place (2) T Bolt (M10x35 Bolt) in the front brackets mounting hole as below figure shown. **(Figure 1).**
- Bolt the driver side front mounting bracket to the back with (2) Lock Washer D8, (2) Flat Washer D8 (8*24*2mm) and (2) Hex Nut M8 **(Figure 2)**. Leave hardware loose at this time.
- Pls remove the carpet and trim the carpet cover **(Figure3)** of the original car before install center brackets (the diagram is for reference only, and the cutting area should be adjusted by the actual loading situation)
- Place (2) T Bolt (M10x35 Bolt) in the mounting hole **(Figure 4)**, Select the driver side Center Support Bracket. Hang the Support Bracket from the outer Bolt Plate with (2) Lock Washer D10, (2) Flat Washer D10 (10*27*3mm) and (2) Hex Nut M10, (Figure 4A).
- Place (2) T Bolt (M10x35 Bolt) and (1) T Bolt (M10x35 Hex Bolt) in the corresponding position **(Figure5)**. Select the driver side Rear Support Bracket. Hang the Bracket from the outer Bolt Plate with (3) Lock Washer D10, (3) Flat Washer D10 (10*27*3mm) and (3) Hex Nut M10, install rear mounting




brackets and rear support brackets with (1) Hex Bolt M8_25, (2) Flat Washer D8(8*24*2mm) ,(1) Lock Washer D8 and (3) Hex Nut M8(Figure 5A), Leave hardware loose at this time.

7. Carefully un-wrap the driver side Running Board. Insert (6) 6mm T-Bolts into the slots in the end of the channels, (3 T-Bolts per channel), on the bottom of the Running Board. Hold the Running Board up in approximate position and slide the T-Bolts down to line up with the (3) Mounting Brackets. Tilt the Board up at a slight angle and push back against the vehicle until the T-Bolts fit into the slots in the Brackets. Loosen Bracket hardware and tilt Brackets downward if necessary. Secure the Running Board to the Brackets with (6) 6mm Flat Washers, (6) 6mm Lock Washers and (6) 6mm Hex Nuts. Do not tighten hardware.
8. Level and adjust the Sidebar properly and tighten all hardware.
9. Repeat **Steps 3 – 10** for passenger side Running Board installation.

To protect your investment, wax this product after installing. Regular waxing is recommended to add a protective layer over the finish. Do not use any type of polish or wax that may contain abrasives that could damage the finish.


For stainless steel: Aluminum polish may be used to polish small scratches and scuffs on the finish. Mild soap may be used also to clean the Running Board.

Driver Side Installation Pictured

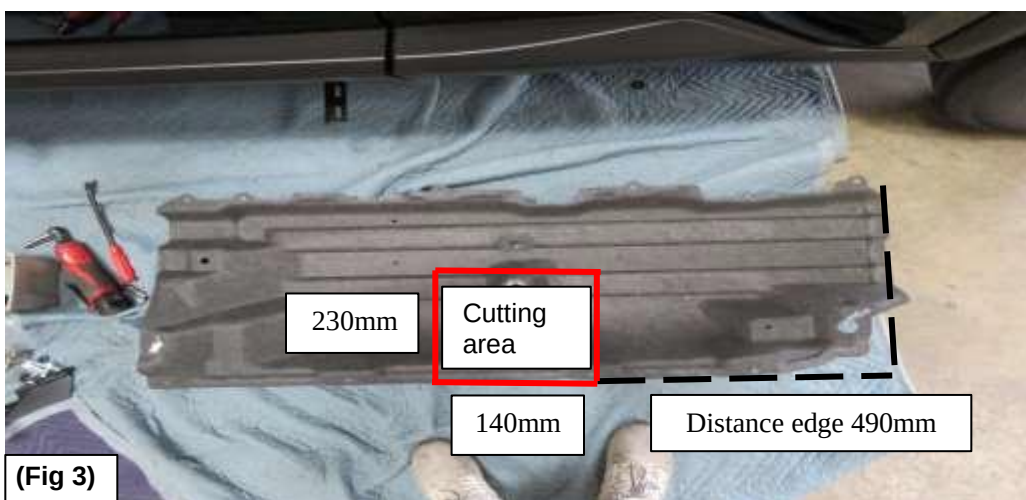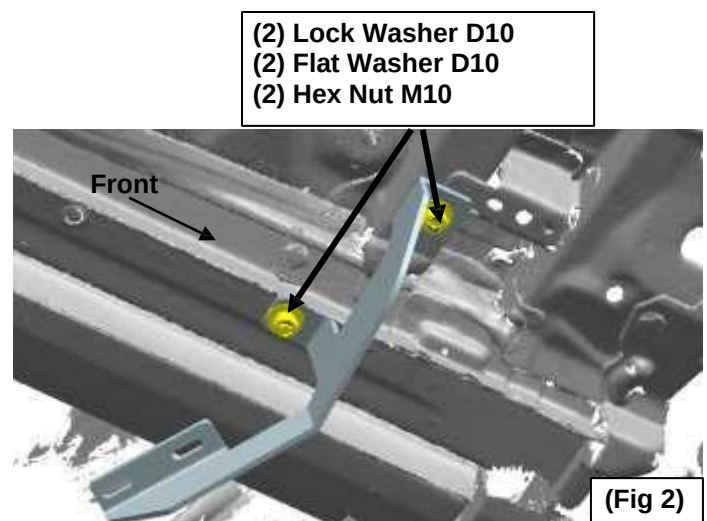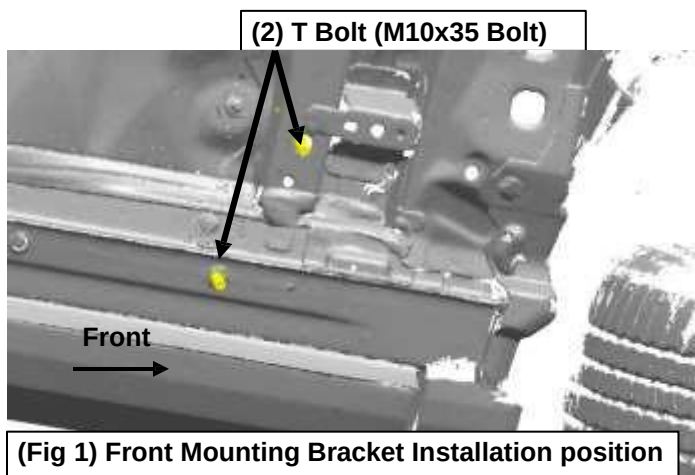


**PREMIUM RUNNING BOARD BRACKET FOR NISSAN ROGUE 2021
Driver Side Installation Pictured**

(2) T Bolt (M10x35 Bolt)

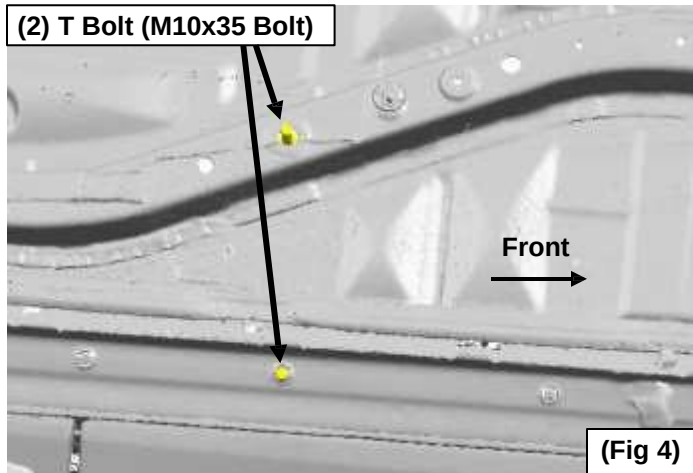


(Fig 4)

(2) Lock Washer D10
(2) Flat Washer D10
(2) Hex Nut M10

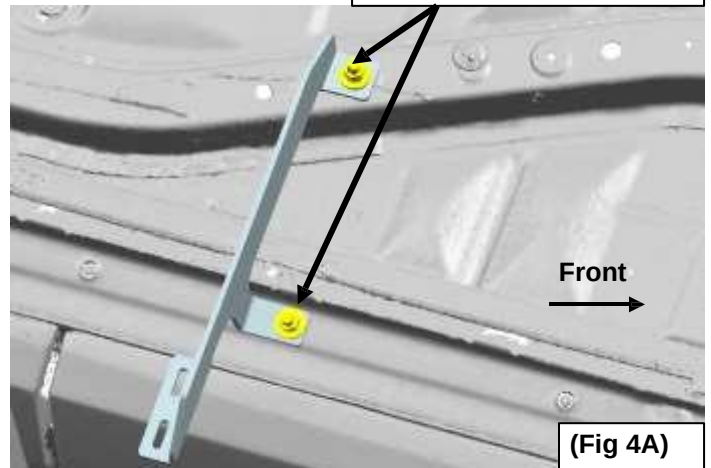


(Fig 4A)

(2) T Bolt (M10x35 Hex Bolt)

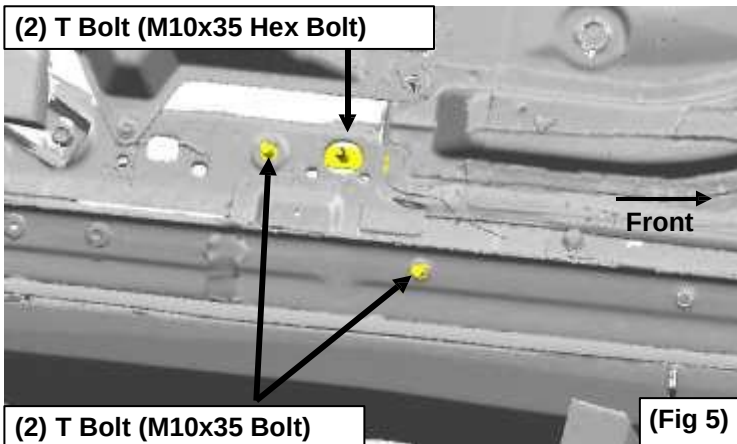

(Fig 5)

(2) Lock Washer D10
(2) Flat Washer D10
(2) Hex Nut M10

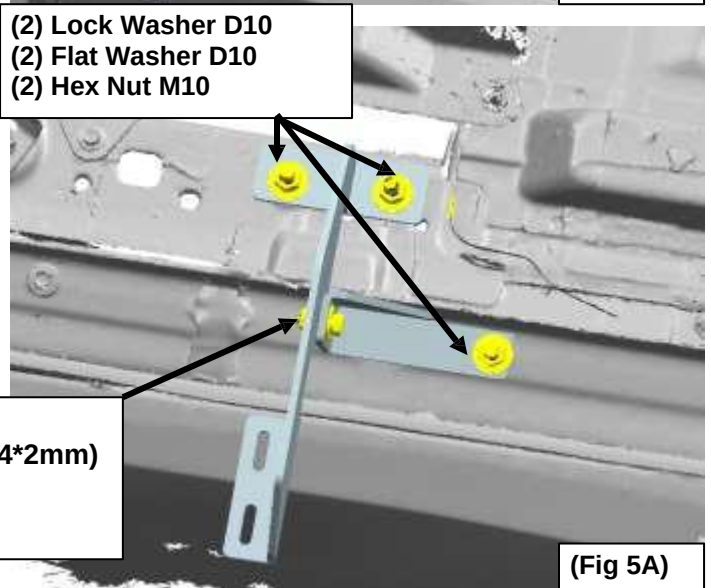

(Fig 5A)

(1) Hex Bolt M8_25
(2) Flat Washer D8 (8*24*2mm)
(1) Lock Washer D8
(3) Hex Nut M8



(Fig 6) Install running board and lock all the standard parts



(Fig 7) Complete Installation