














INSTALLATION INSTRUCTIONS


OE STYLE RUNNING BOARD FOR HONDA HRV 2017

PART# RHOHR

OE STYLE RUNNING BOARD FOR HONDA HRV

PARTS LIST

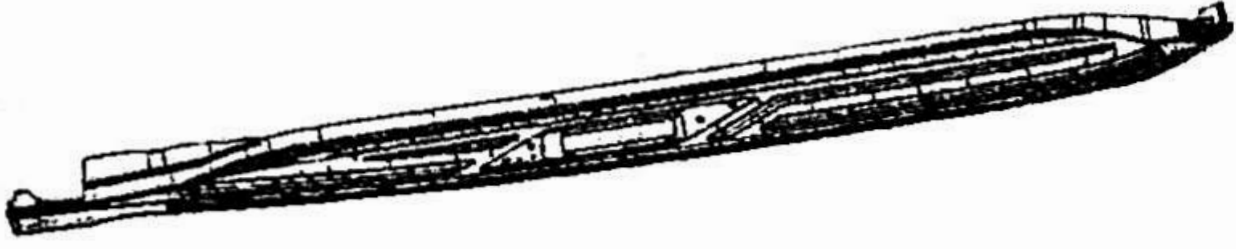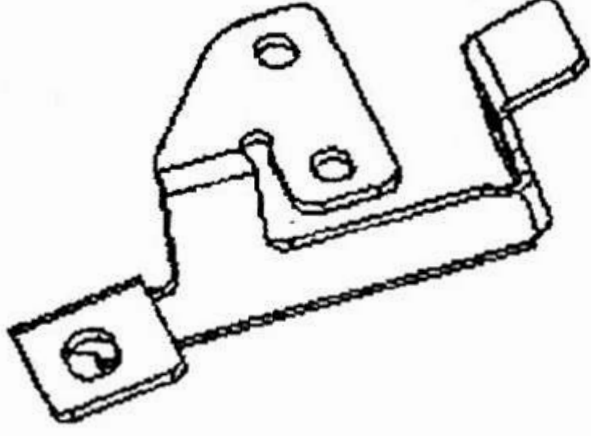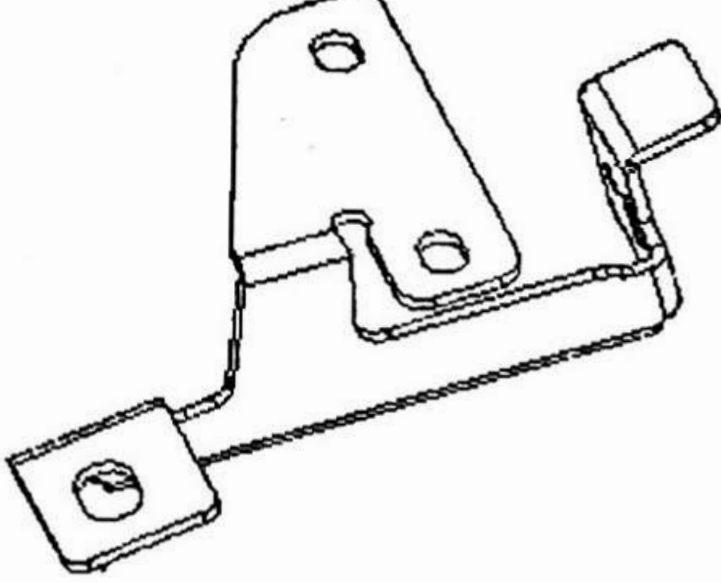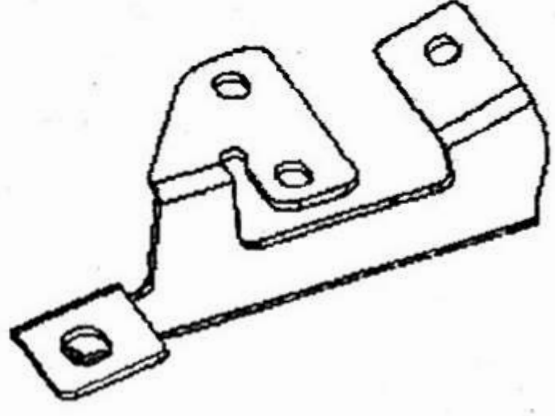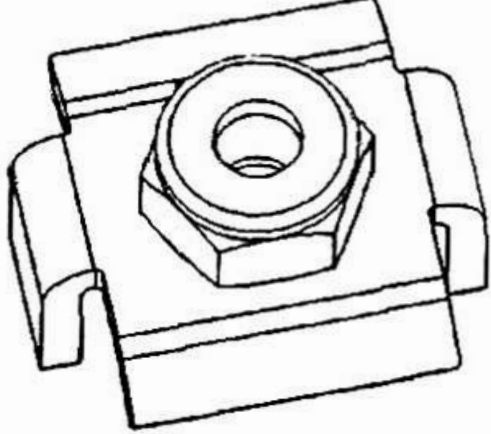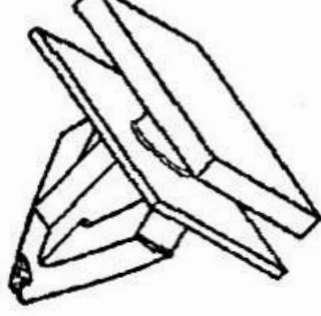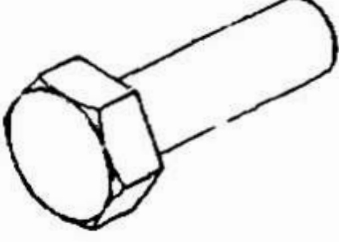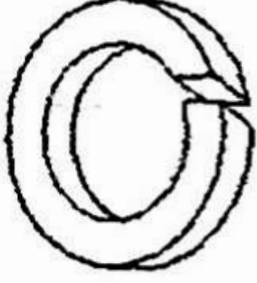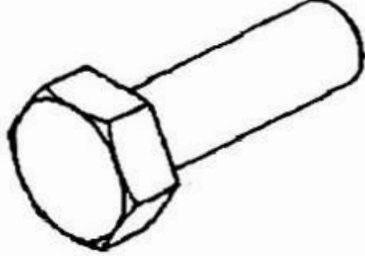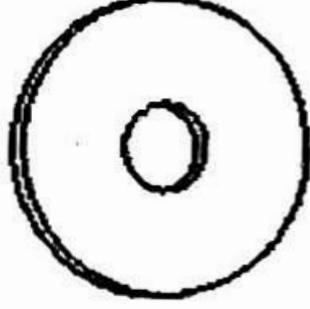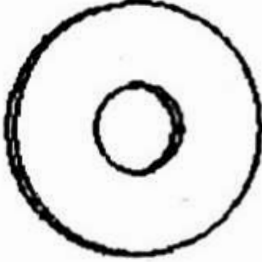
QTY	PHOTO	QTY	PHOTO
2	 BOARD (L&R)	2	 FRONT BRACKET (L&R)
2	 MIDDLE BRACKET (L&R)	2	 REAR BRACKET (L&R)
4	 CLIPNUT BRACKET	20	 PLASTIC BUCKLE
20	 HEX BOLT M8_25	24	 SPRING WASHER D8
4	 HEX BOLT M8_35	6	 SUPER LARGE WASHER D8
14	 LARGE WASHER D8	4	 FLAT WASHER D8

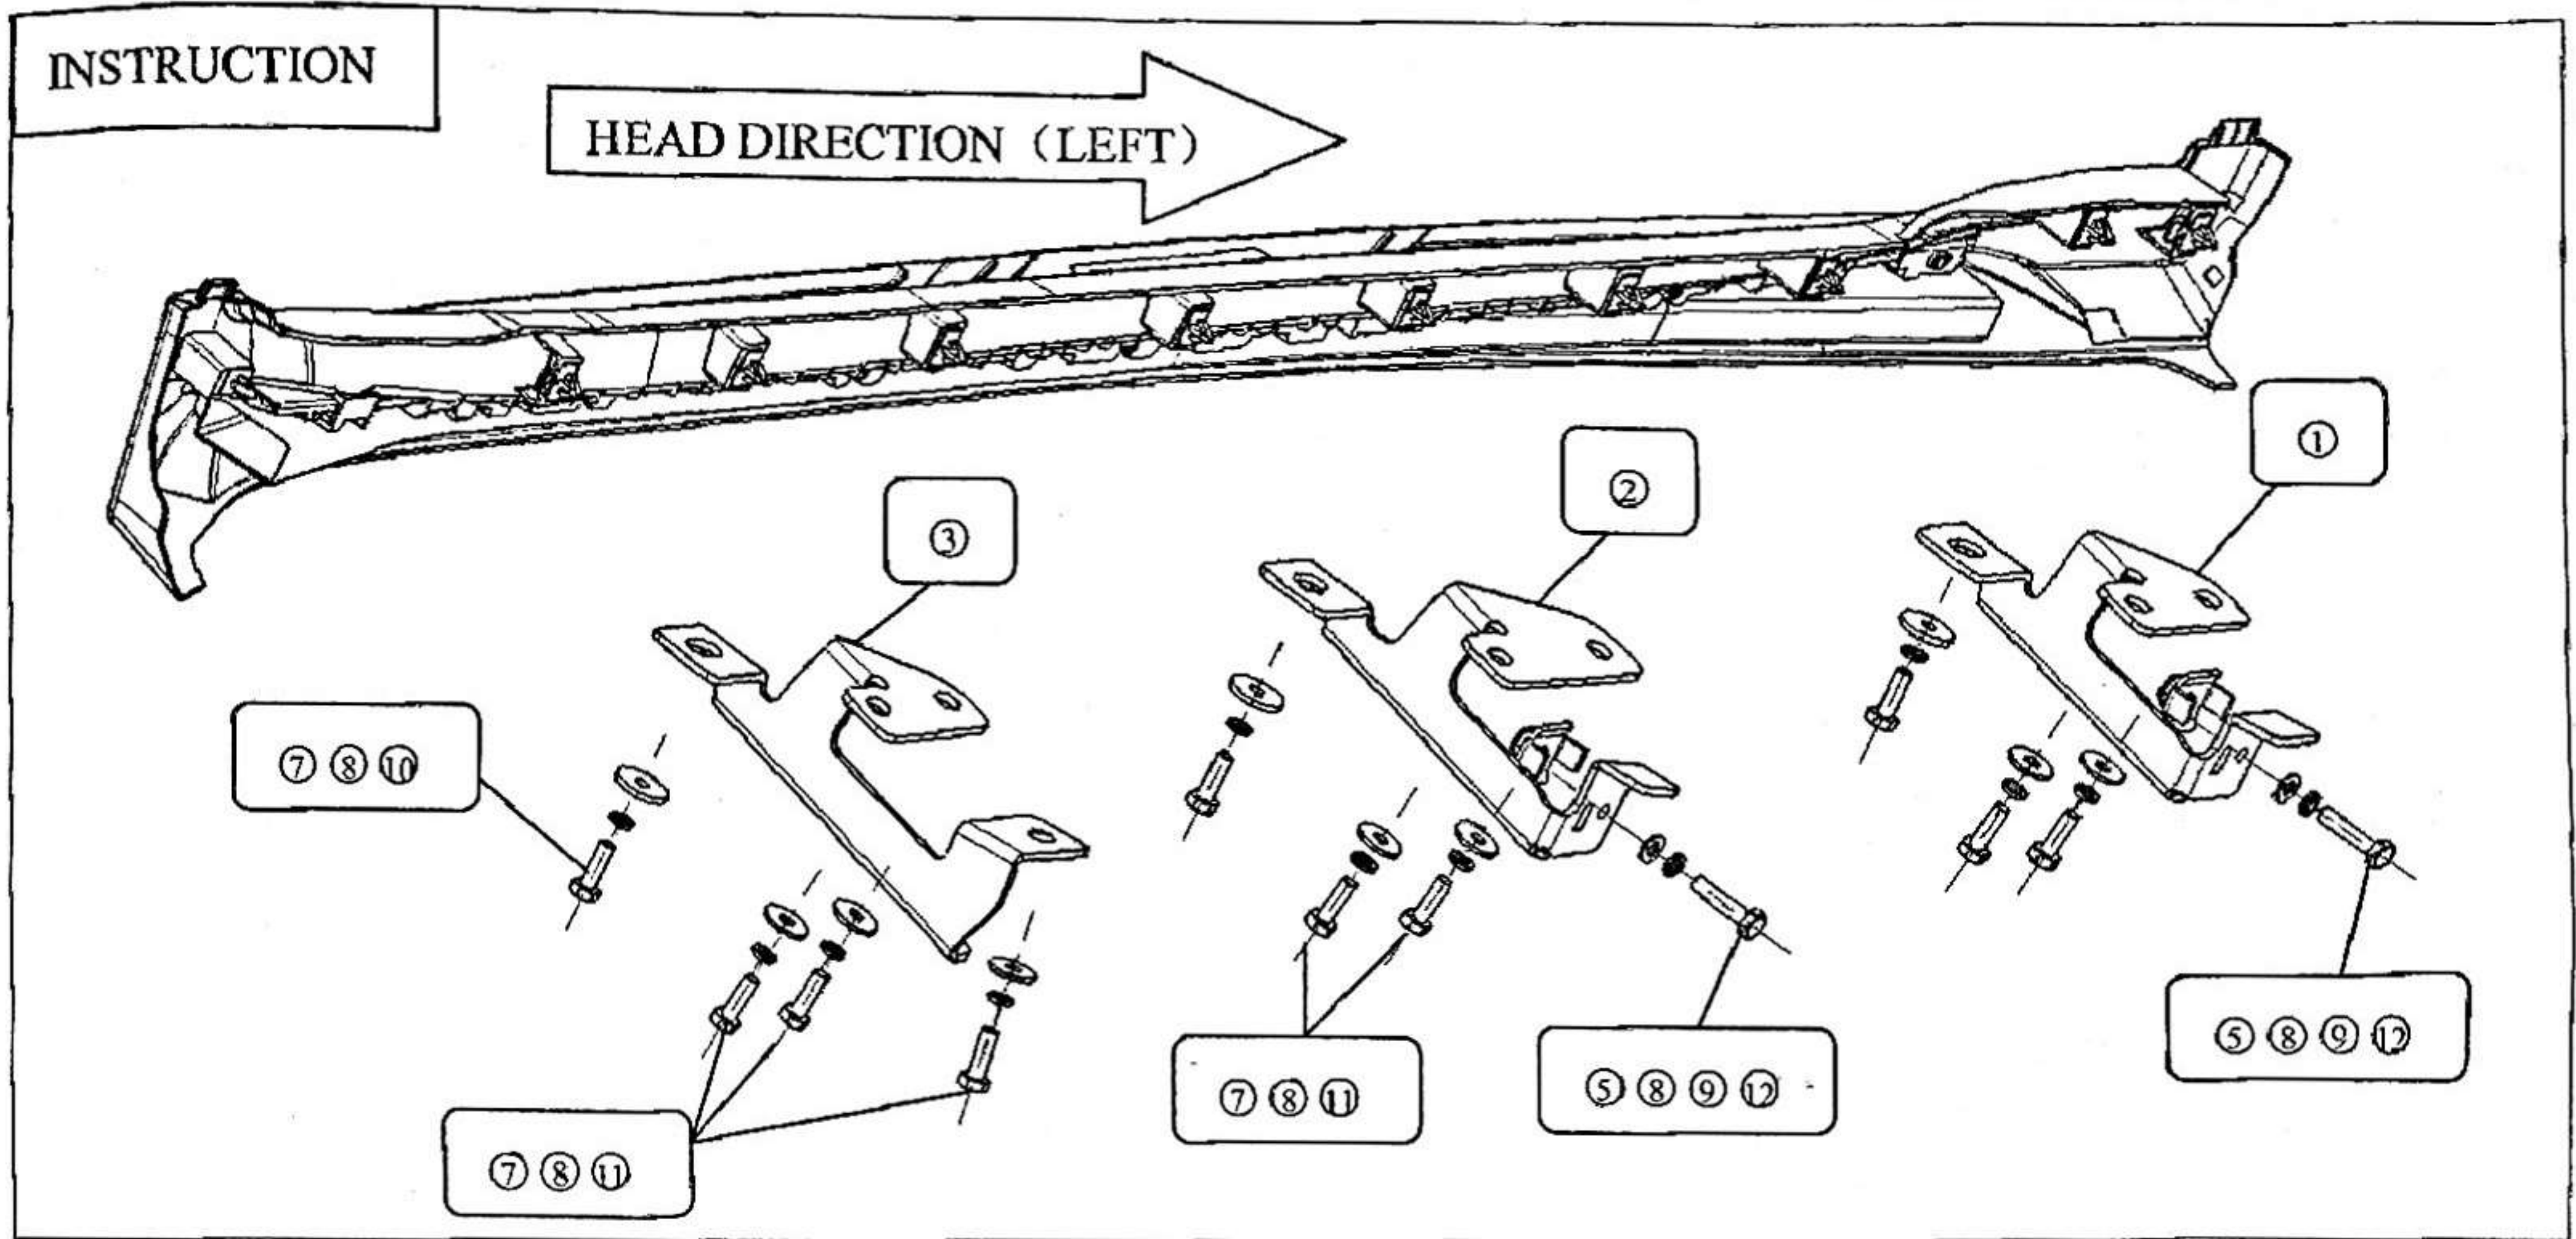


INSTALLATION STEPS (WORK FOR BOTH SIDES)

STEP 1 : Verify that all parts are present according to the manual and illustration. Make sure you don't mix the sides.
(sit in the driving position to identify)

STEP 2: Disassemble the original side skirt and secure all the accessories (as below figure shows)

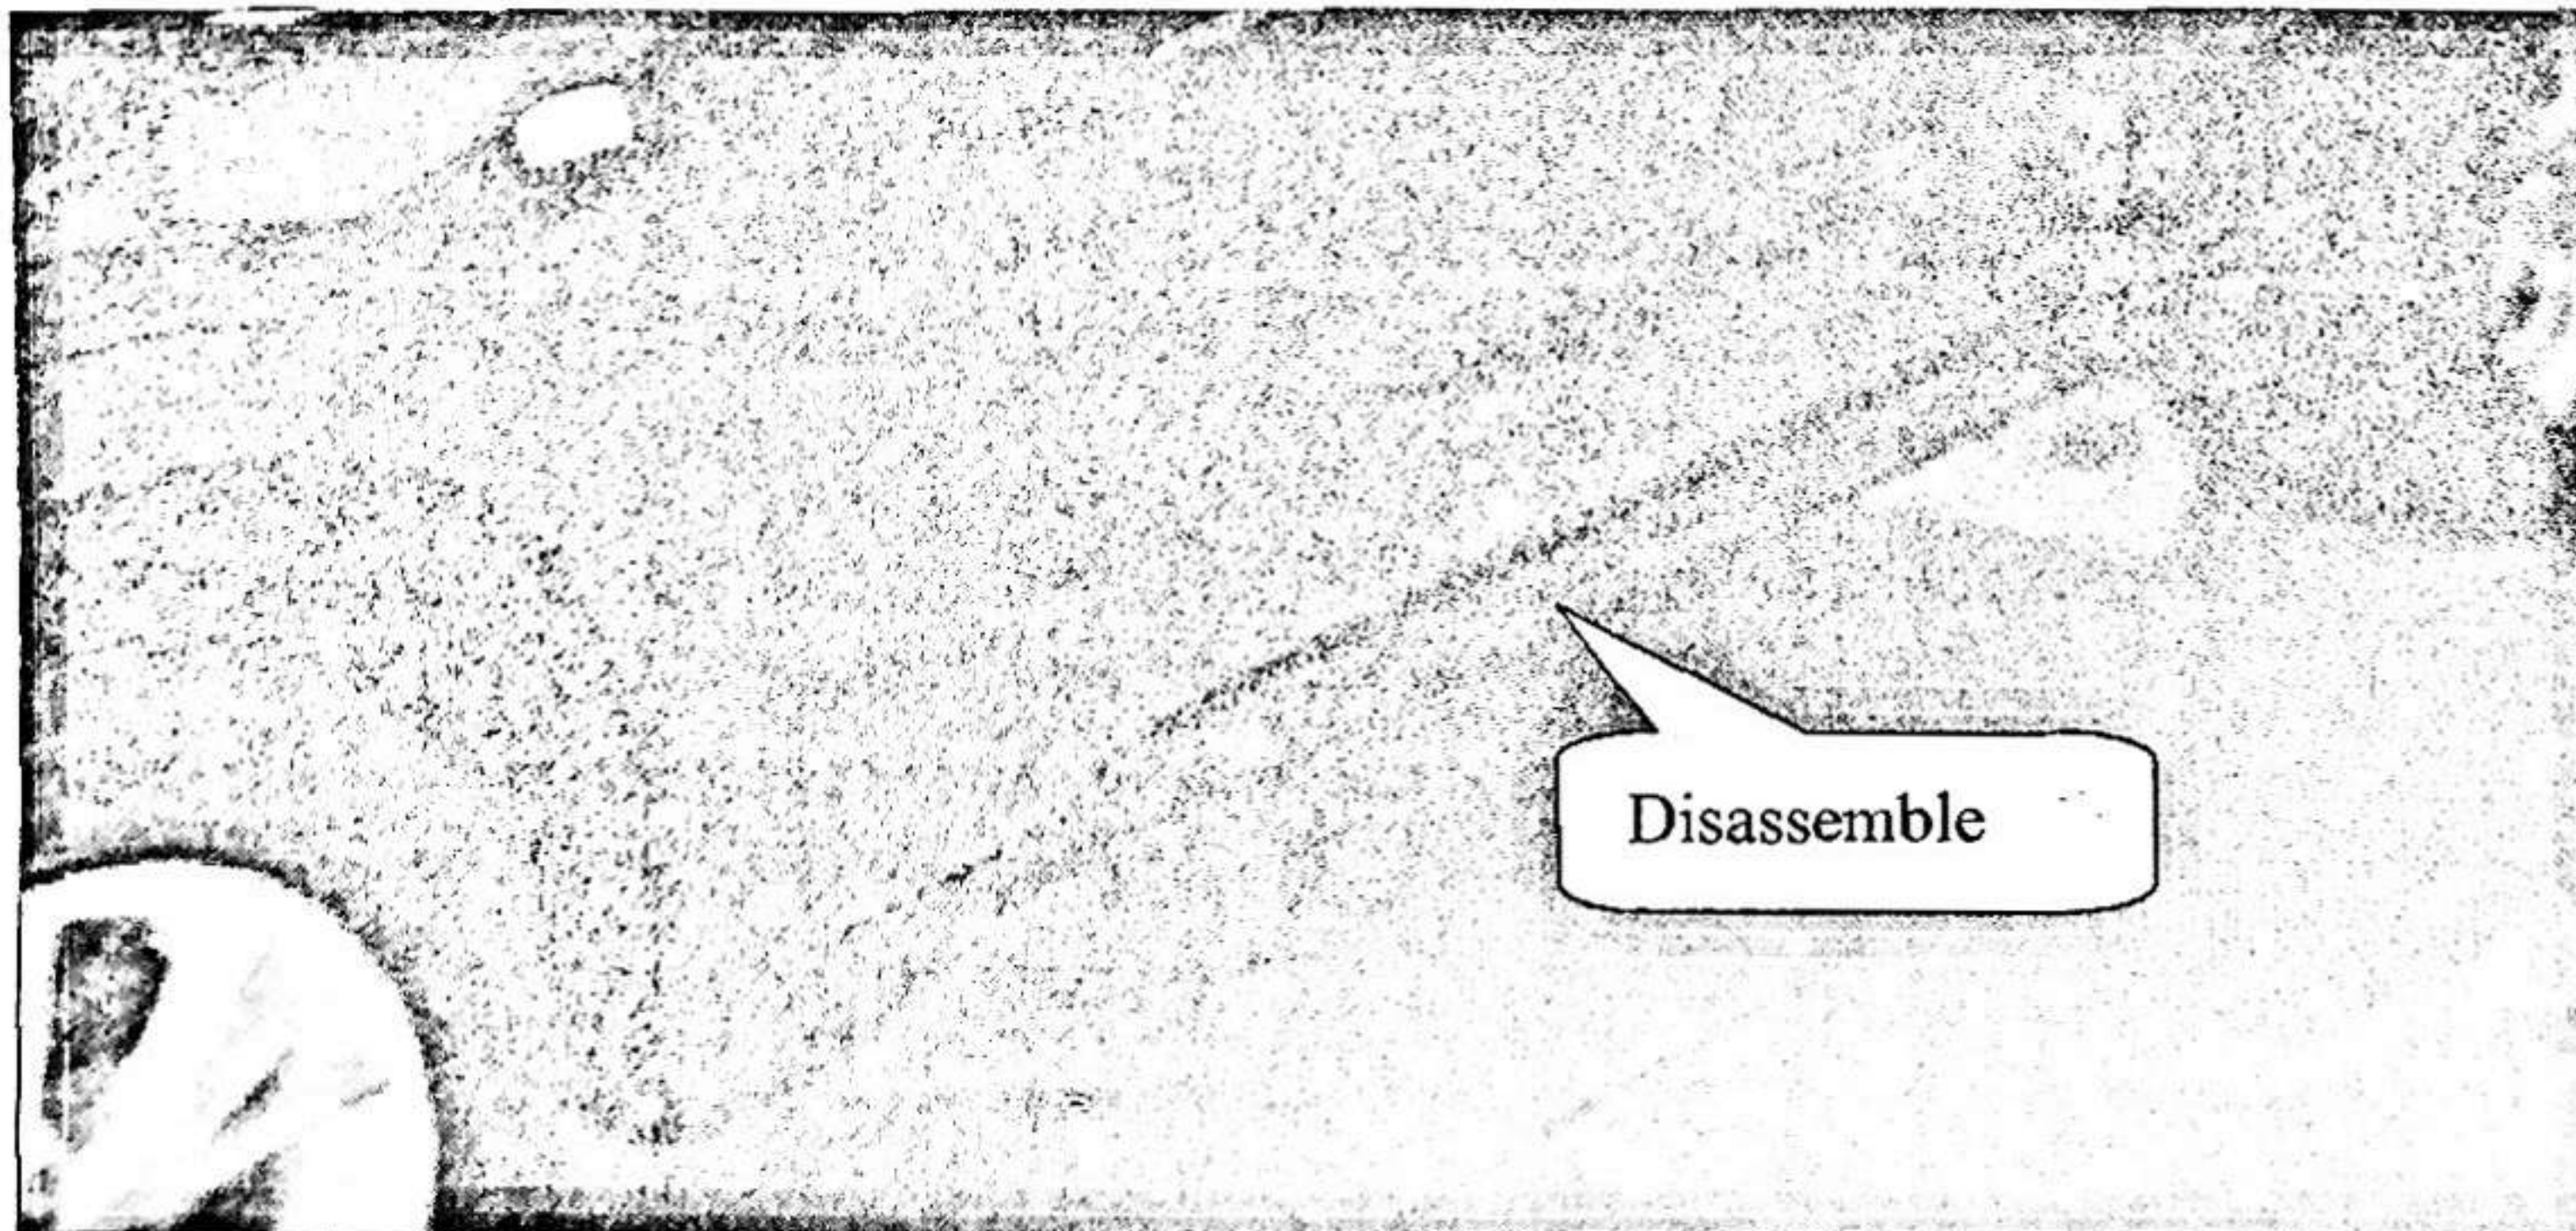


STEP 3: FIND THE MOUNTING HOLES TO INSTALL THE BRACKETS; (as the below photos)

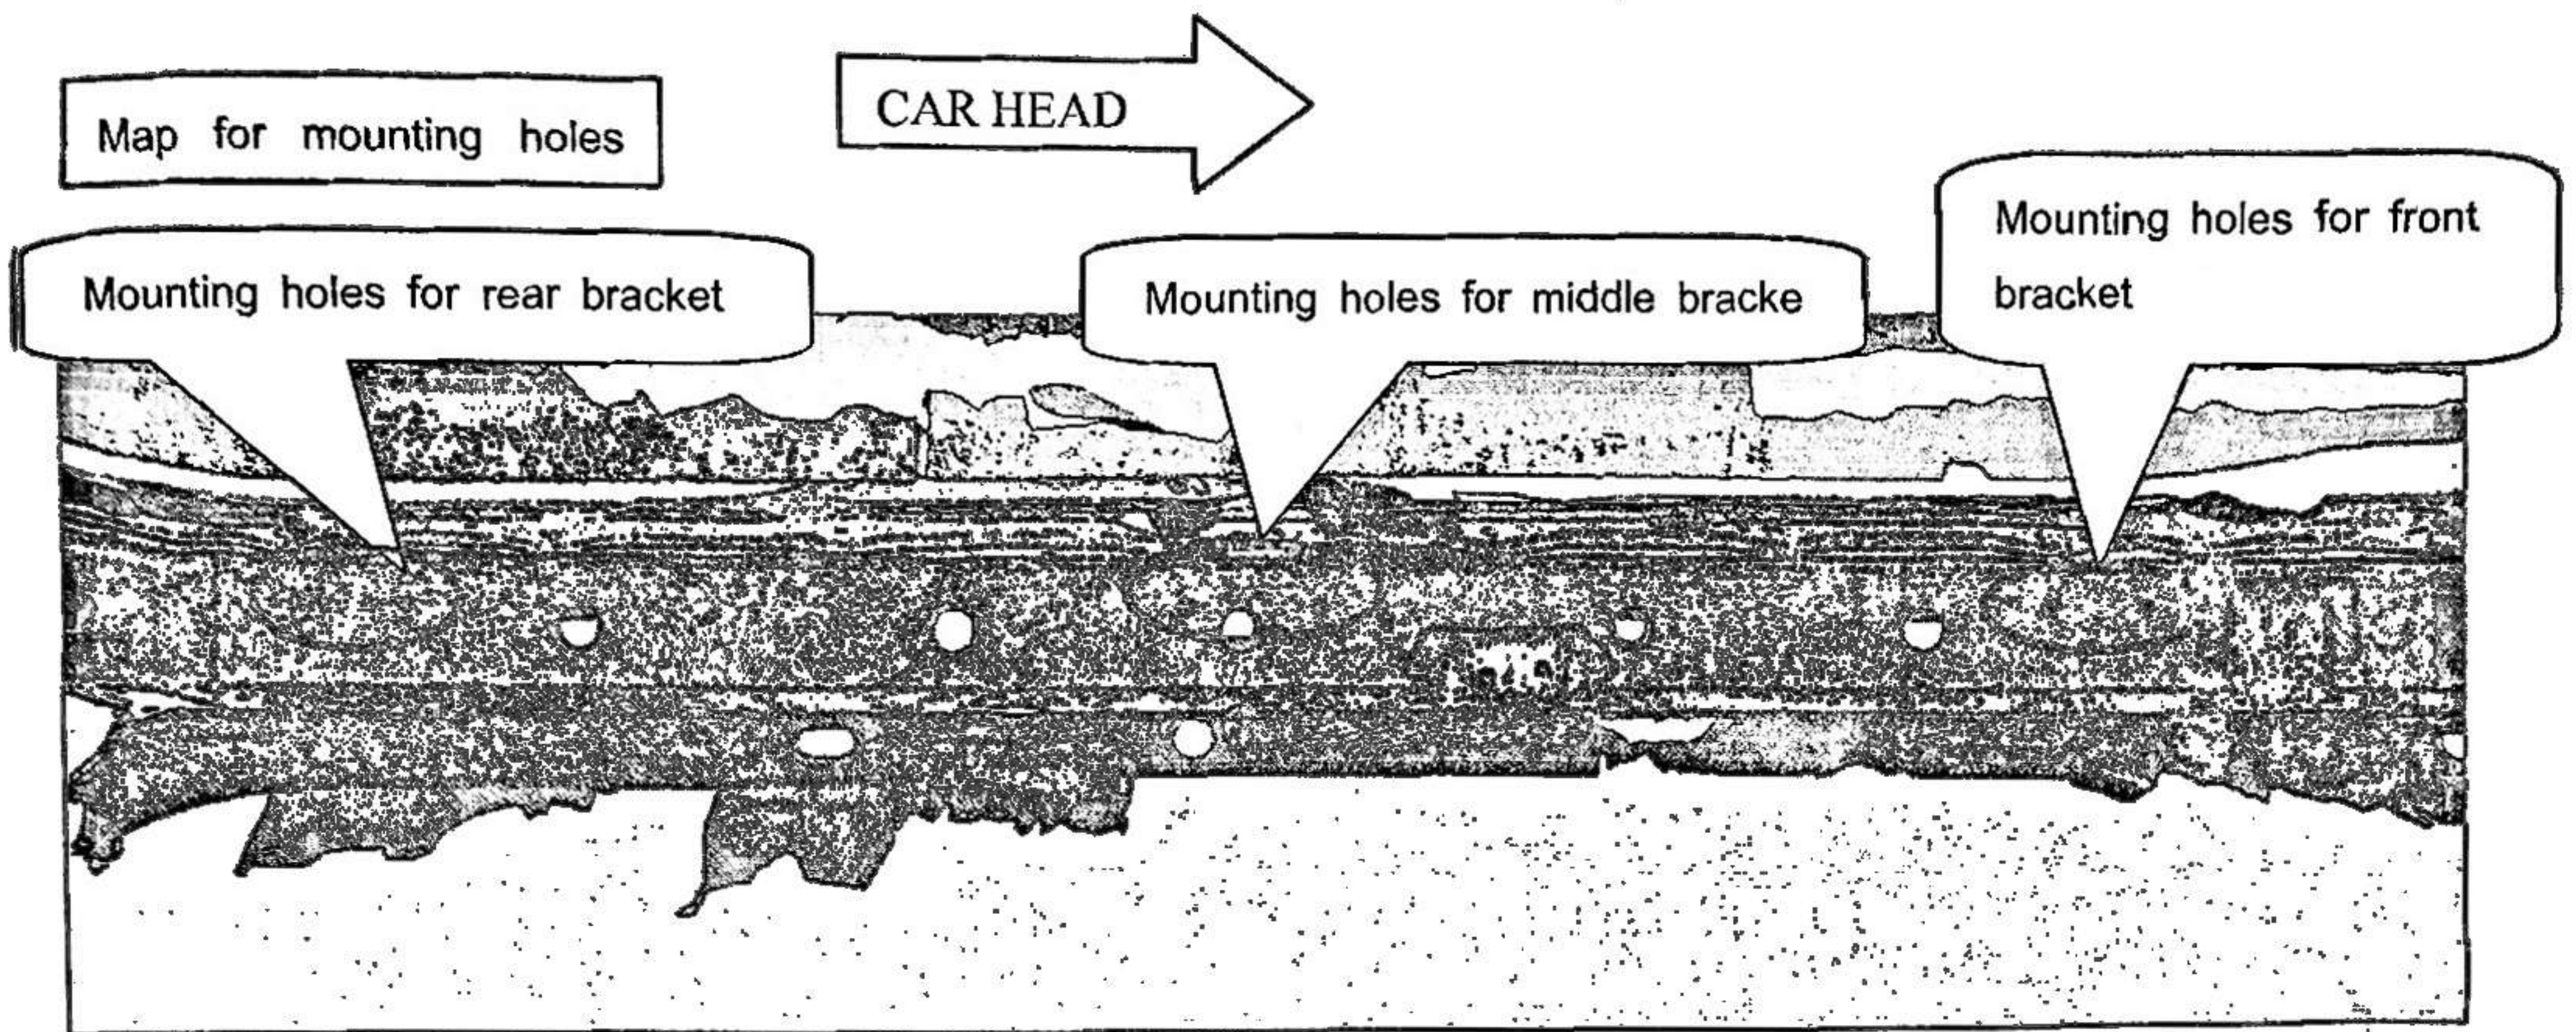

STEP 4: INSTALL THE BRACKETS


1. INSTALL THE FRONT BRACKET

FIND THE MOUNTING HOLE FOR FRONT BRACKETS, CONNECT THE FRONT BRACKET WITH 2 HEX BOLTS M8_25+2 FLAT WASHER D8+2 SPRING WASHER D8.AND CONNECT THE FRONT BRACKET AND THE SIDE SKIRT WITH CLIPNUT BRACKET, AND INSTALL THE PARTS (HEX BOLT M8_35+FLAT WASHER D8+SPRING WASHER D8), BUT DON'T FULLY TIGHTEN.(AS THE BELOW PICTURES)

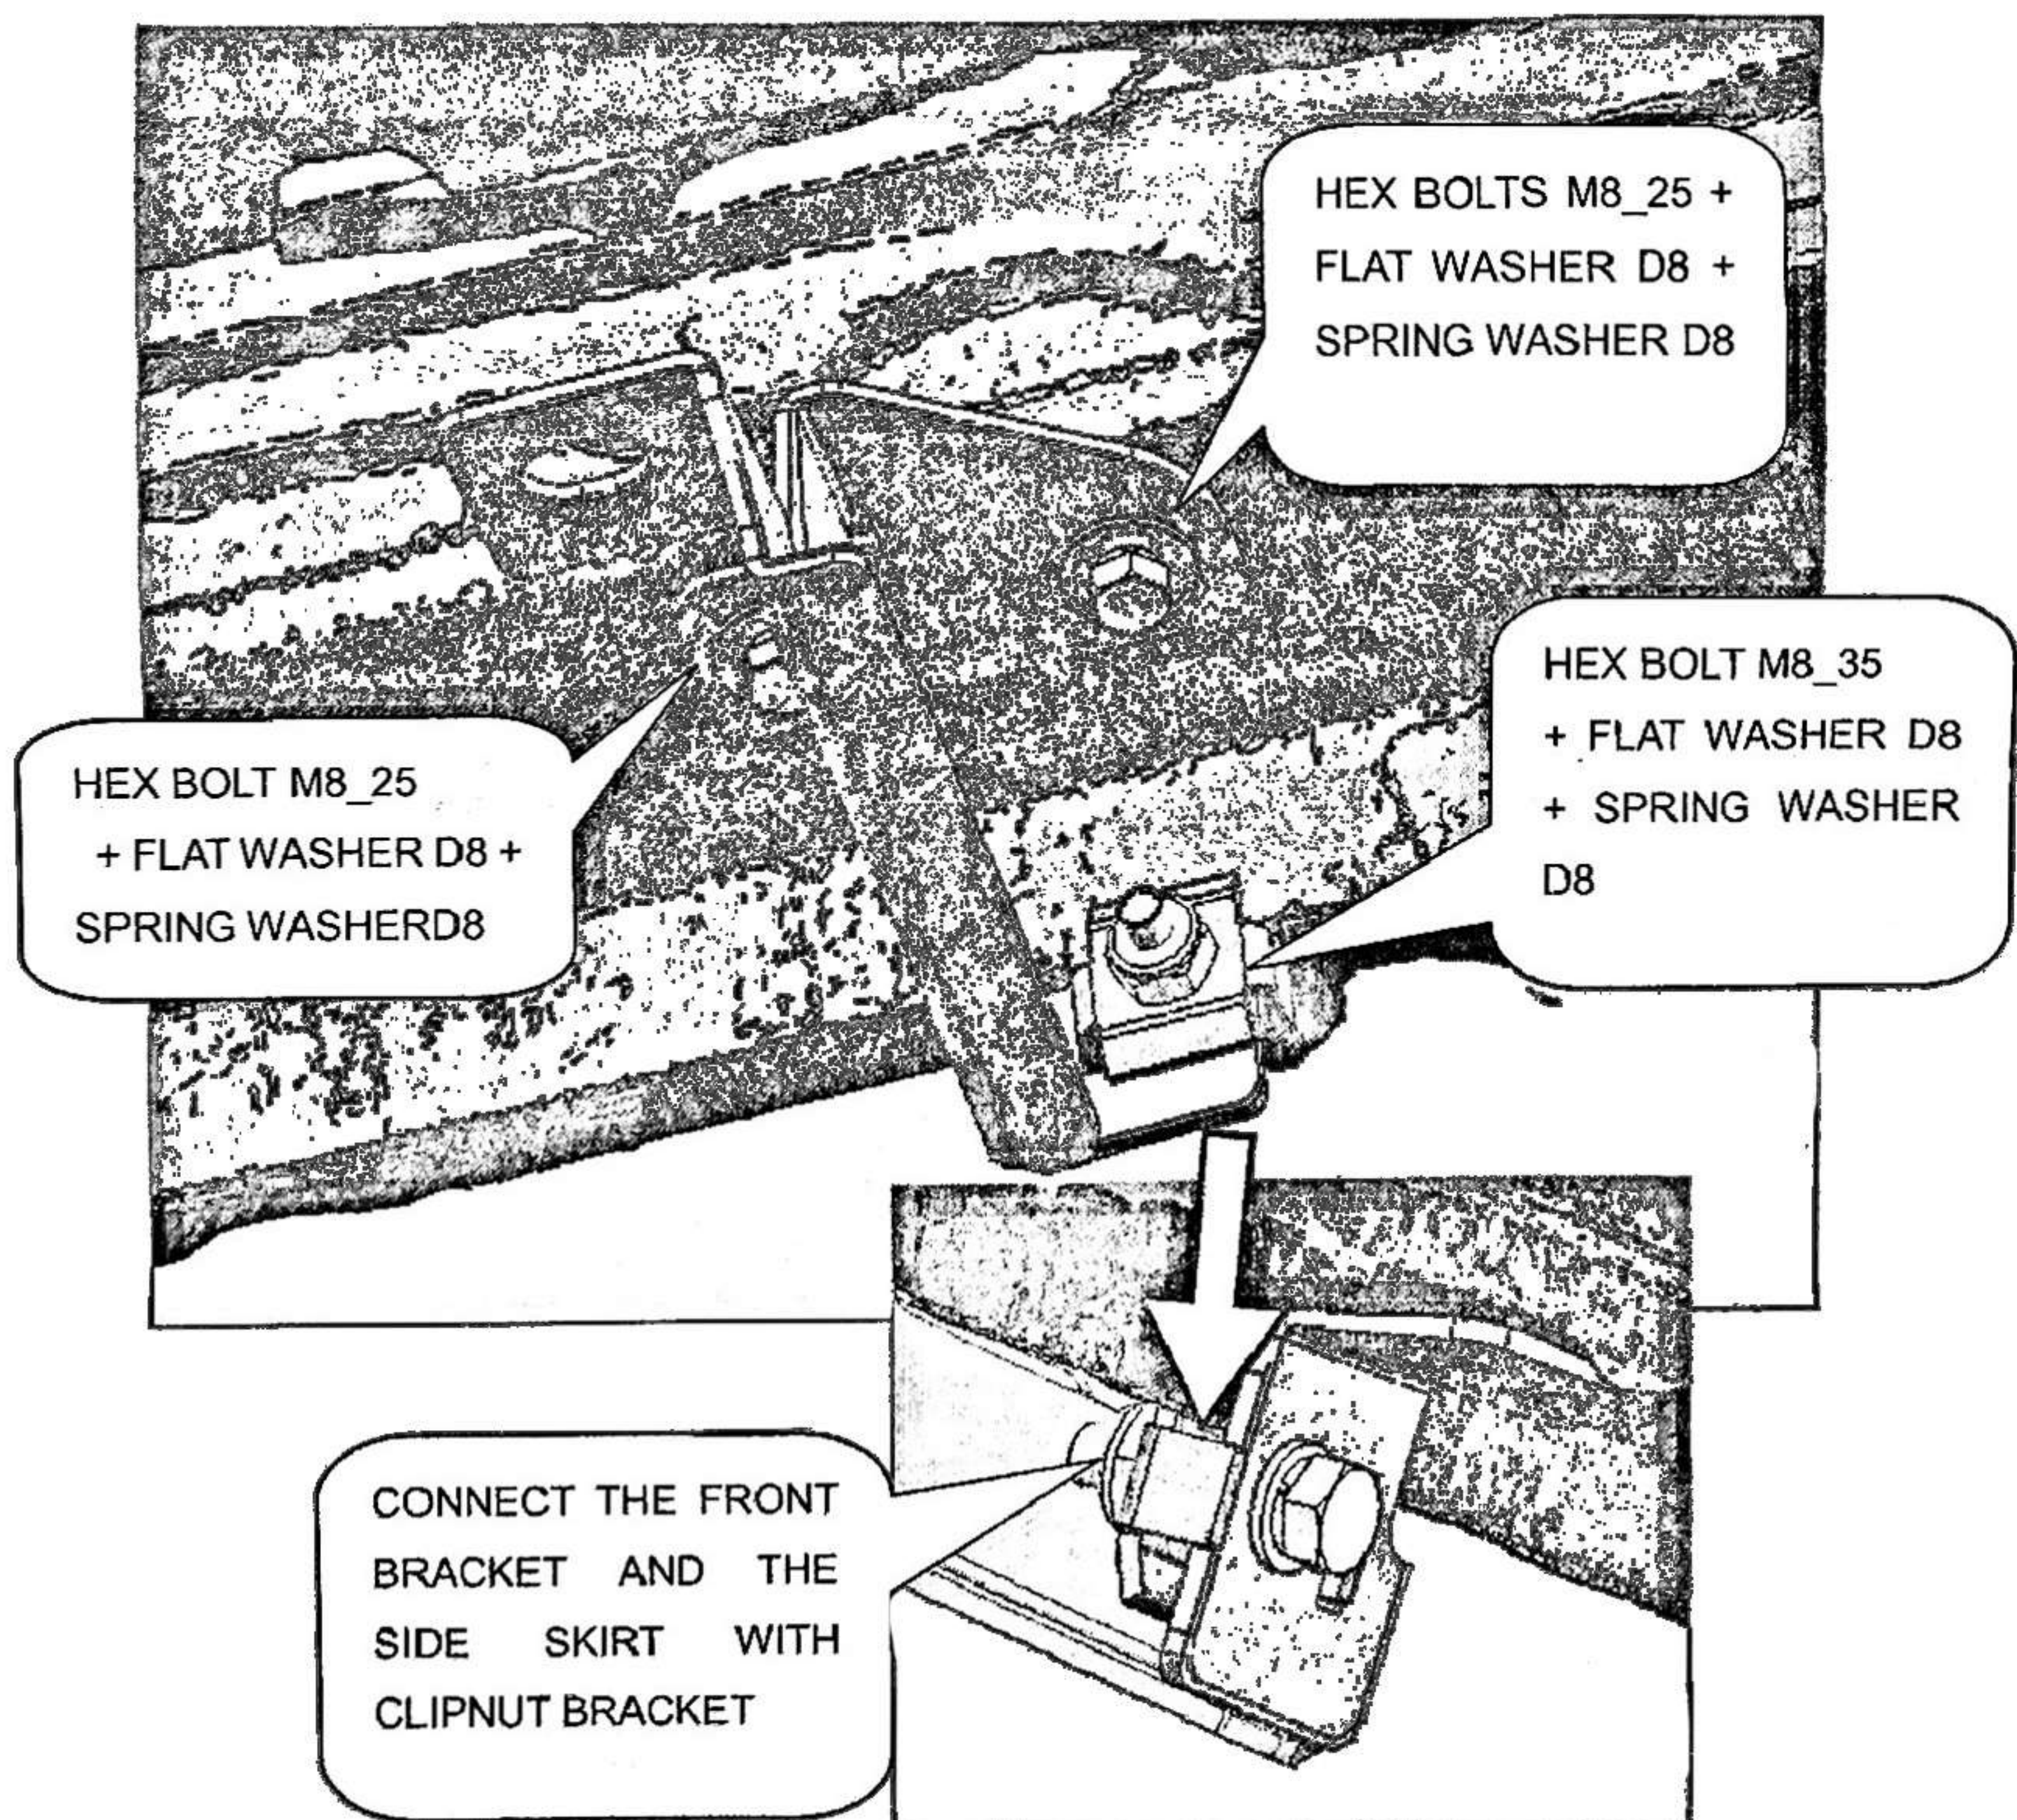


2. INSTALL THE MIDDLE BRACKET

SAME AS THE WAY TO INSTALL THE FRONT BRACKET, FIND THE MOUNTING HOLE FOR MIDDLE BRACKETS, CONNECT THE FRONT BRACKET WITH 2 HEX BOLTS M8_25+2 FLAT WASHER D8+2 SPRING WASHER D8.AND CONNECT THE MIDDLE BRACKET AND THE SIDE SKIRT WITH CLIPNUT BRACKET, AND INSTALL THE PARTS (HEX BOLT M8_35+FLAT WASHER D8+SPRING WASHER D8), BUT DON'T FULLY TIGHTEN.(AS THE BELOW PICTURES)


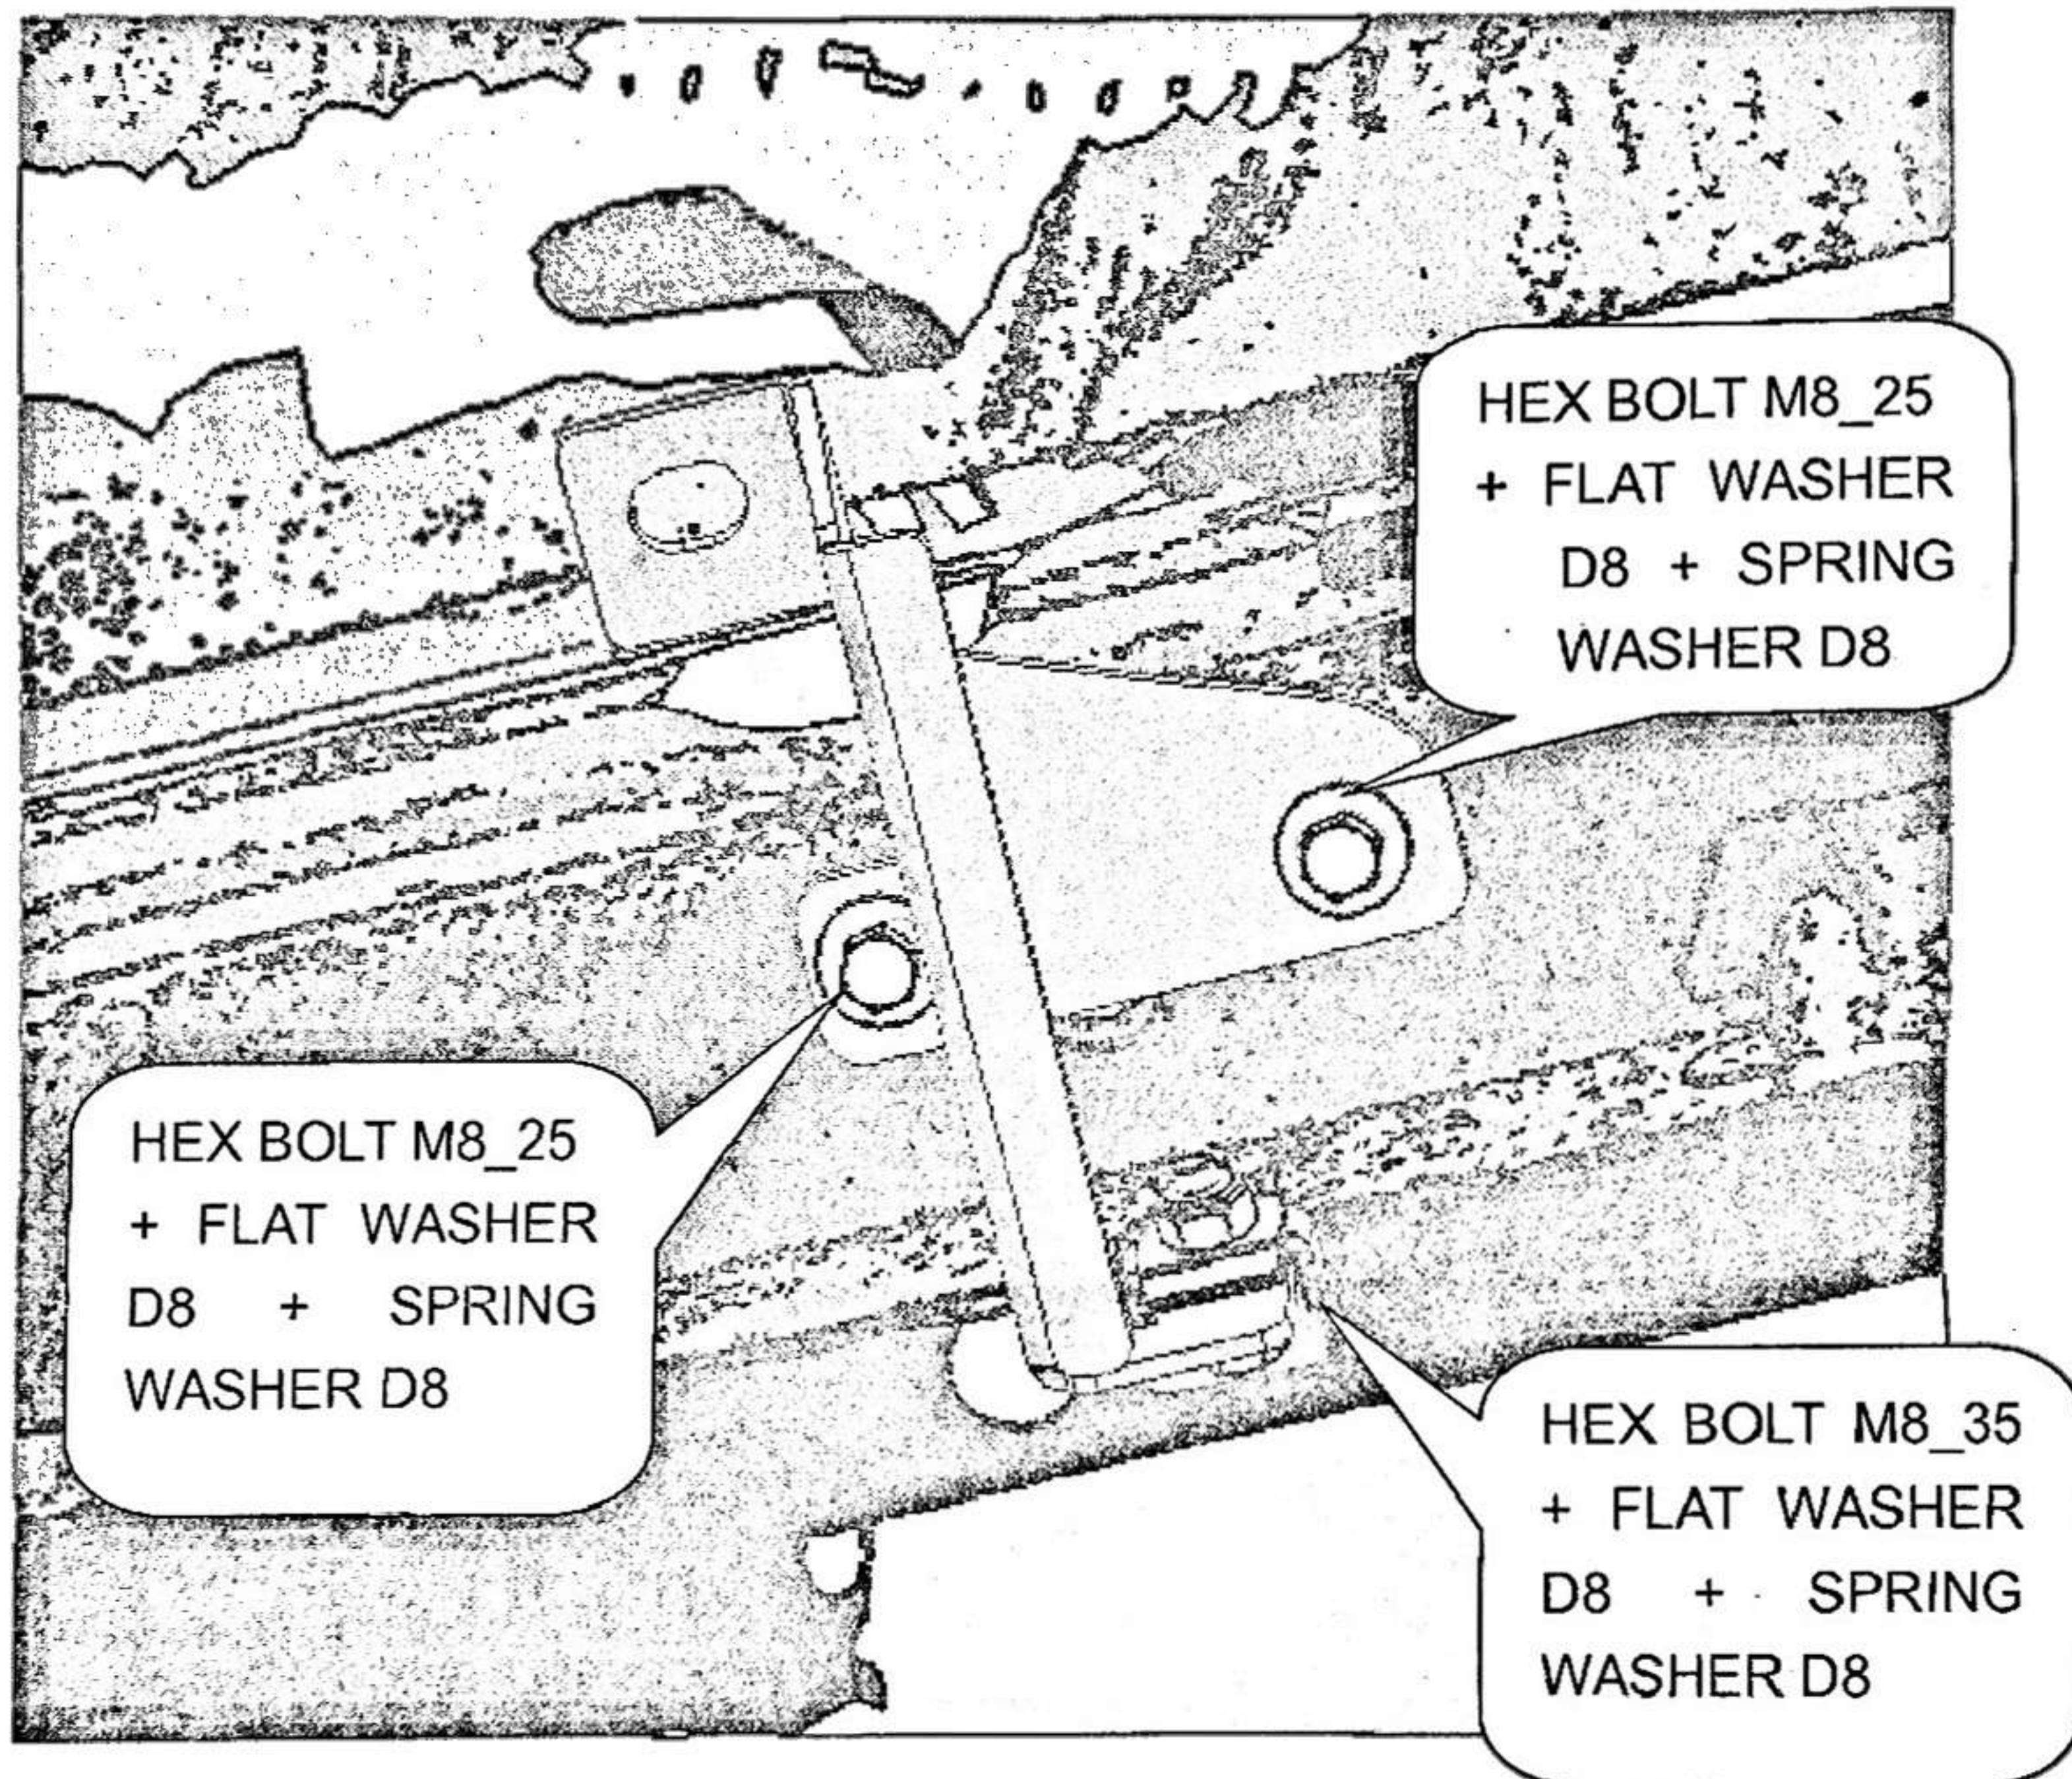


3. INSTALL THE REAR BRACKET


INSTALL THE REAR BRACKET IN THE MOUNTING HOLES FOR REAR BRACKETS, AND INSTALL THE PARTS (HEX BOLT M8_25+FLAT WASHER D8+SPRING WASHER D8)BUT DON'T FULLY TIGHTEN.(AS THE BELOW PICTURES)

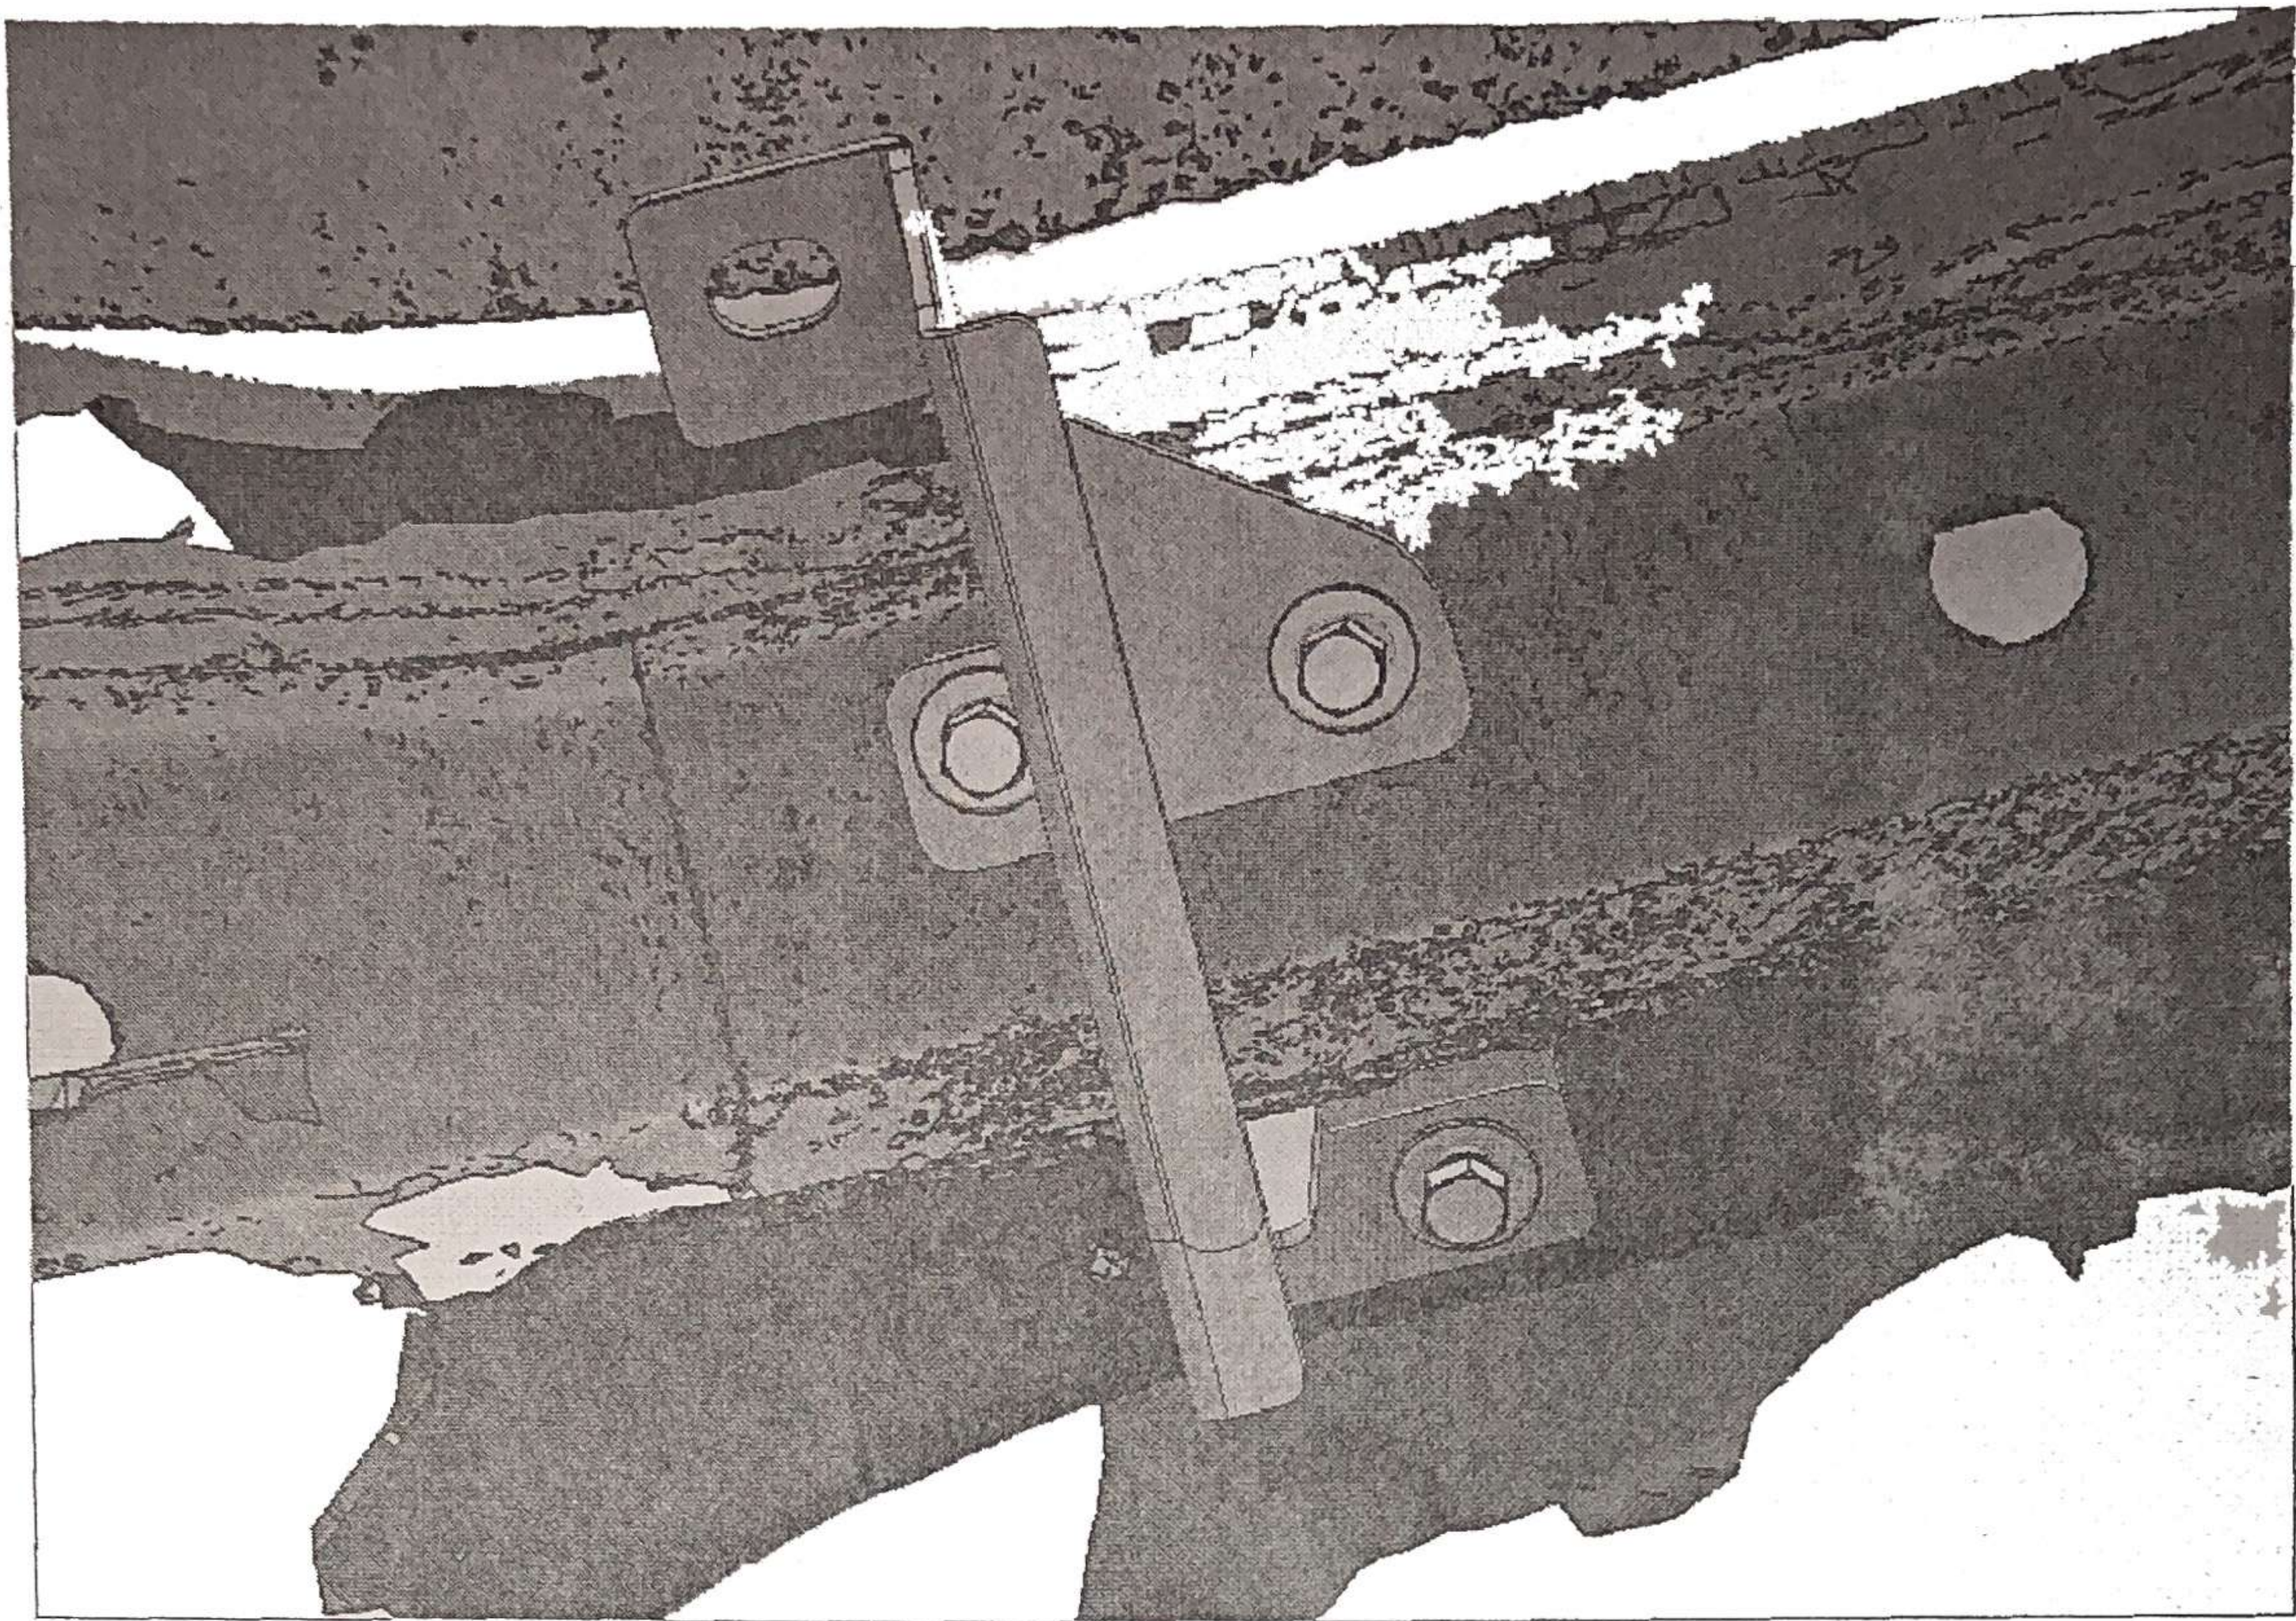


STEP 5: INSTALL THE PLASTIC BUCKLES AT THE INNER SIDE OF THE BOARDS (AS THE BELOW PICTURES)

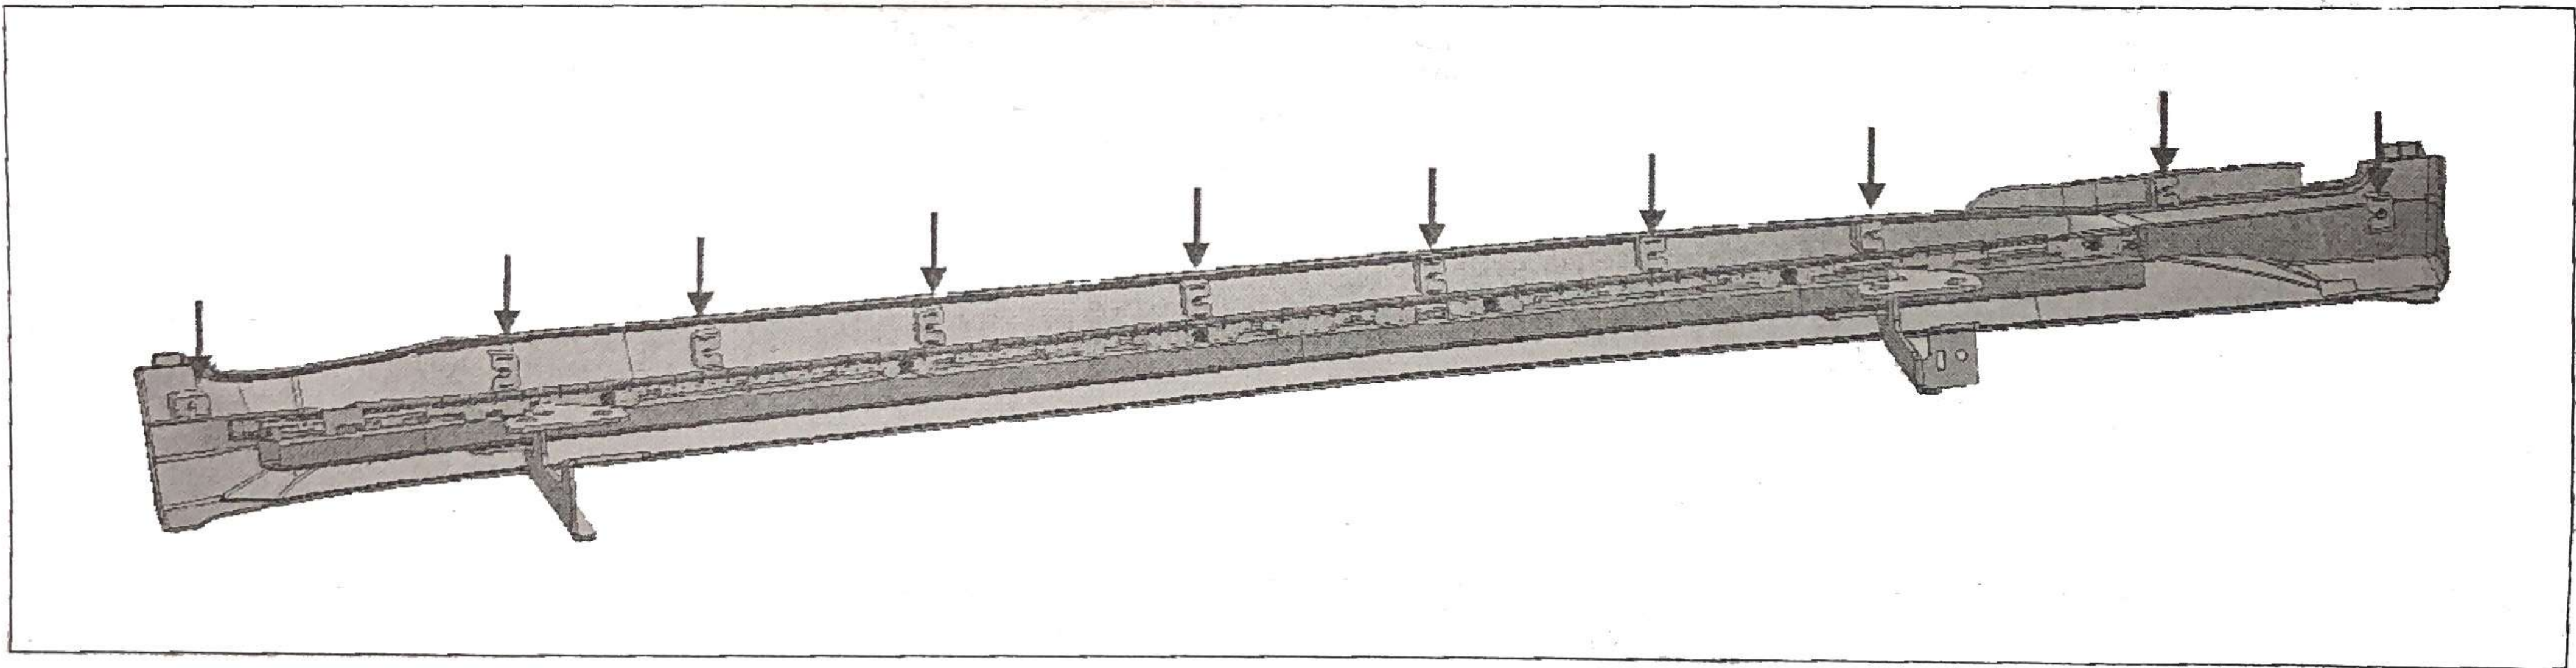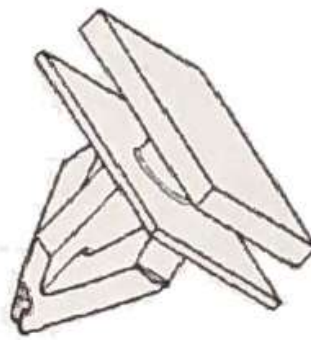


STEP 6: INSTALL THE BOARDS
①CONNECT THE RUNNING BOARD AND CAR BODY WITH THE BUCKLES, (AS THE BELOW PICTURES)

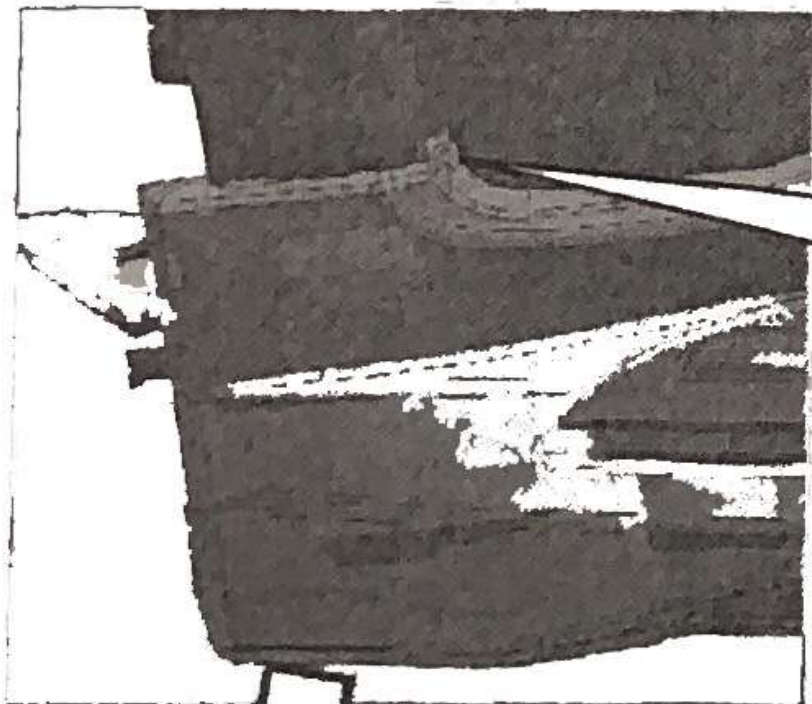


CLIP IN THE FRONT AND REAR ENDS OF THE BOARD TO THE CAR BODY.

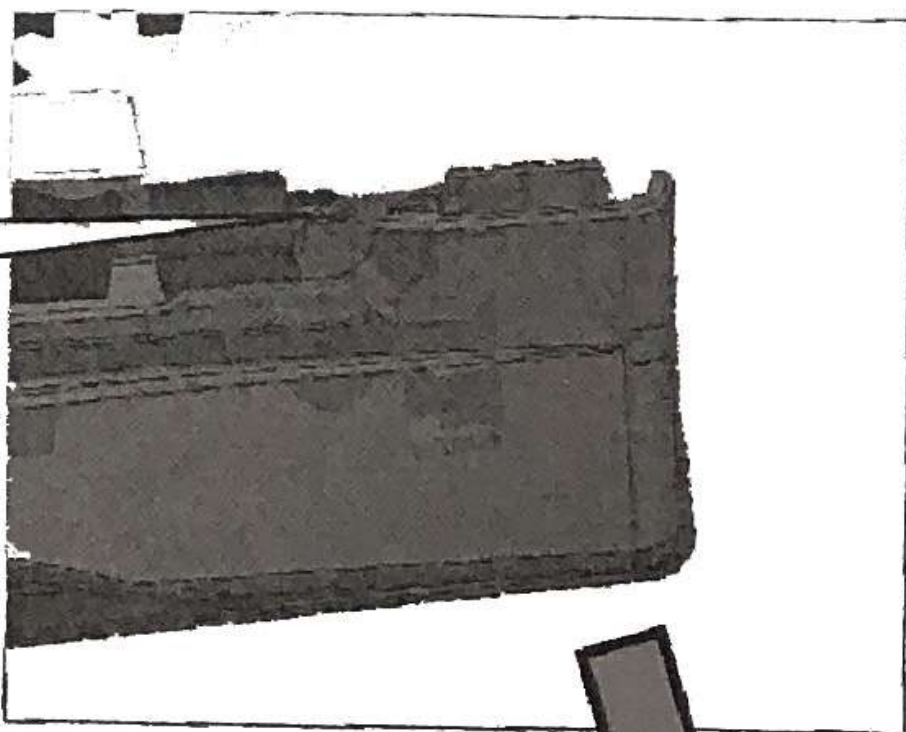

OE STYLE RUNNING BOARD FOR HONDA HRV

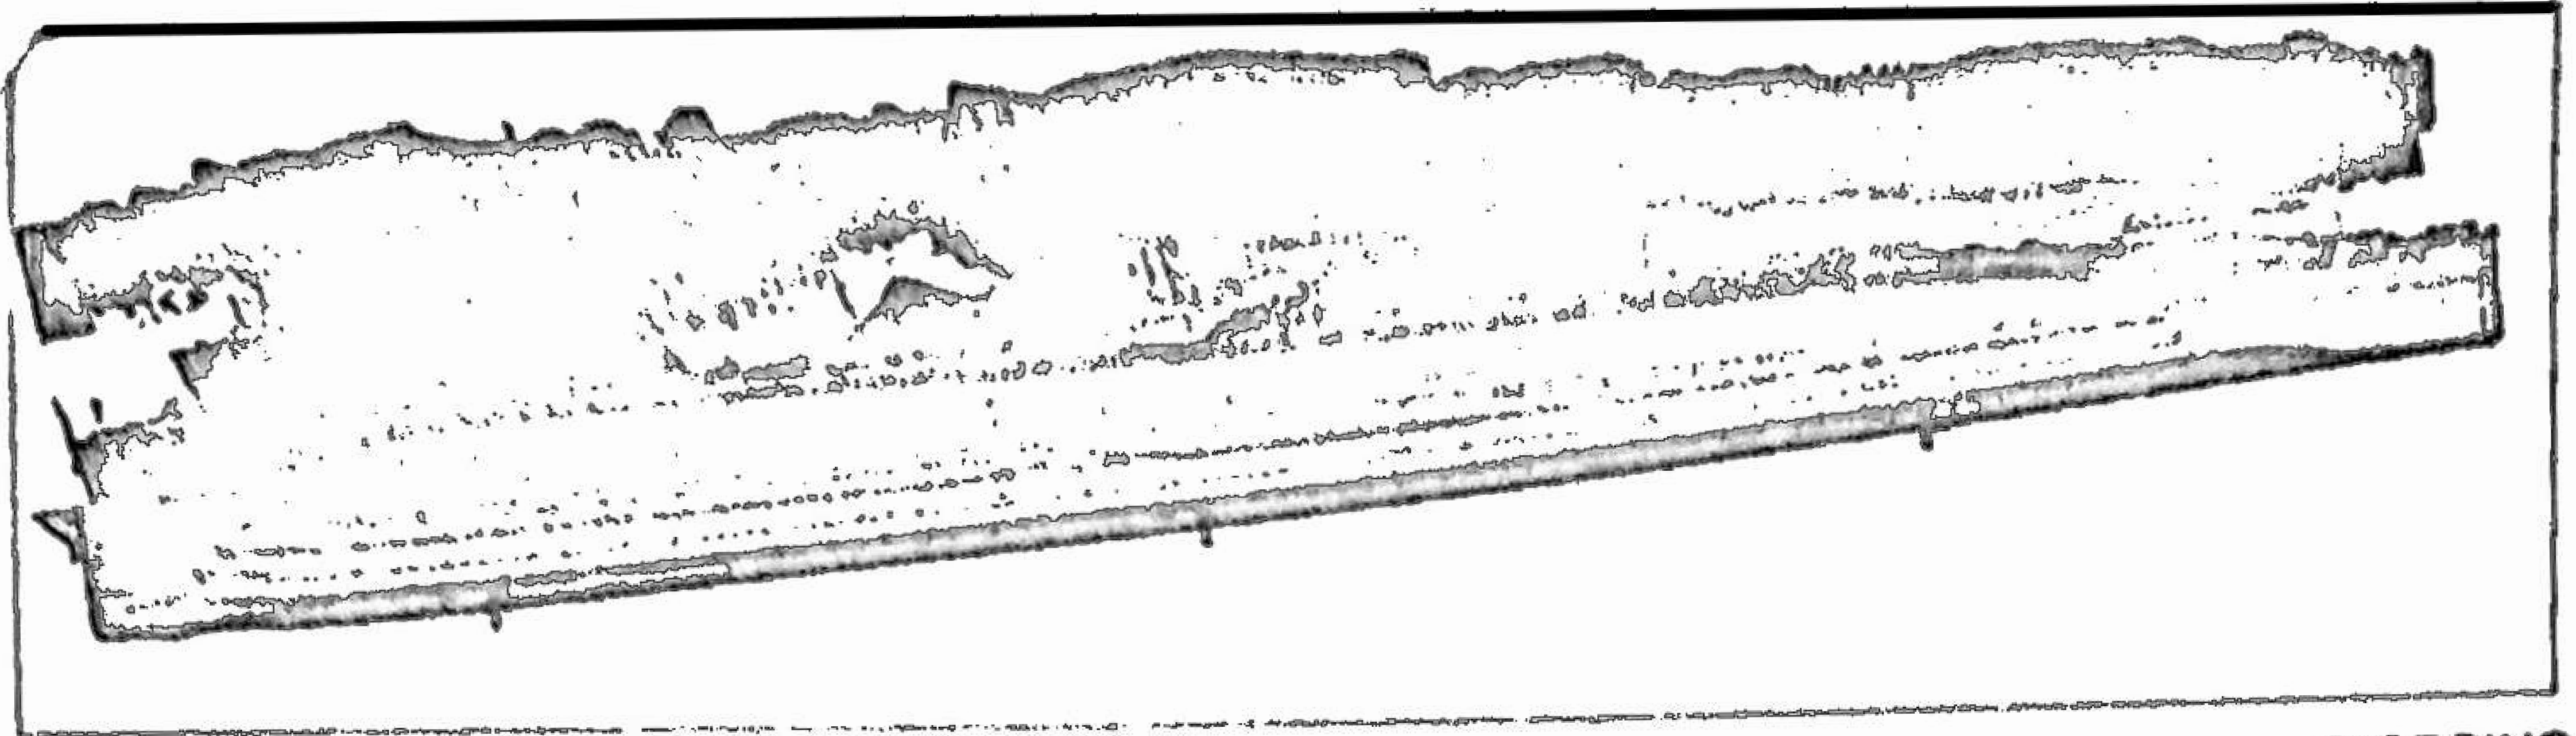

⌚ LOCK THE BOTTOM OF THE BOARD WITH HEX BOLT M8_25+SUPER LARGE WAHSER D8+SPRING WAHSER D8, THEN ADJUST THE POSITION OF THE BOARD AND FULLY TIGHTEN THE PARTS; (AS THE BELOW FIGURES)

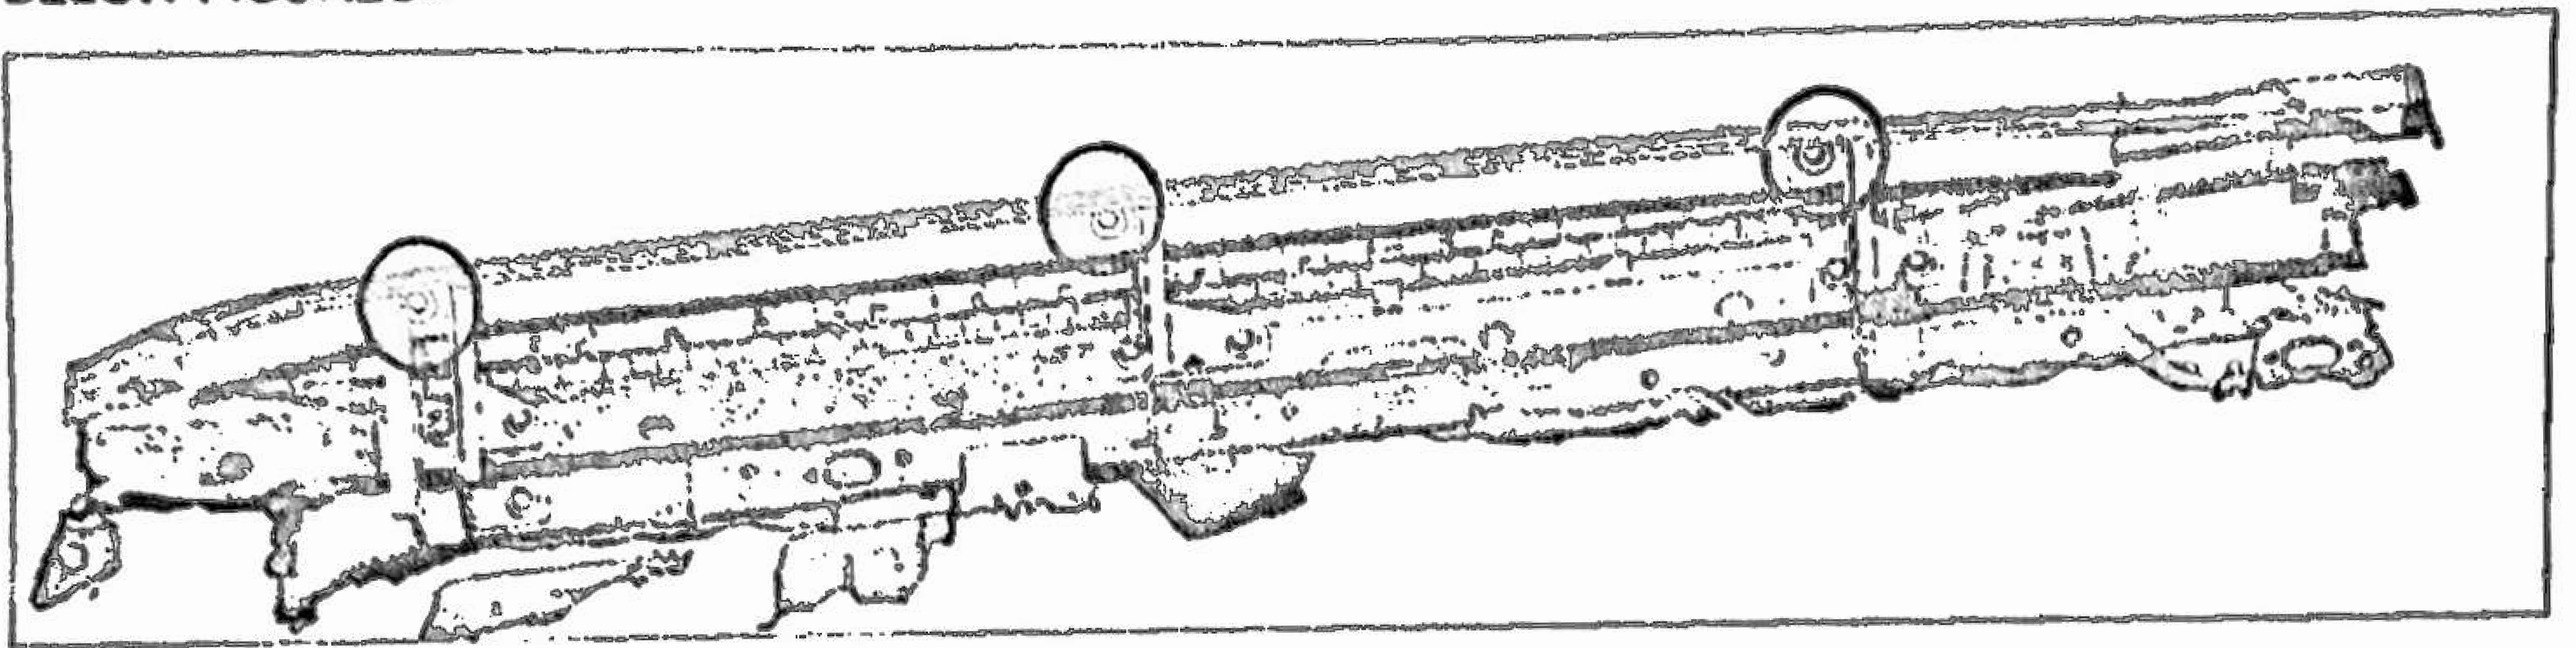

STEP 7: FULLY TIGHTEN ALL PARTS, PICK UP ALL TOOLS

Disclaimer:

Any problems caused by improper installation or use are not include in the scope of our quality warranty.