

# HOW TO INSTALL:

## 2019+ FORD RANGER BUMPER KIT



CALI RAISED  
LED




### STEP 1:



Remove the 5 body clips that hold the front trim piece in place. Using a body panel removal tool or flat head screwdriver.

### STEP 2:

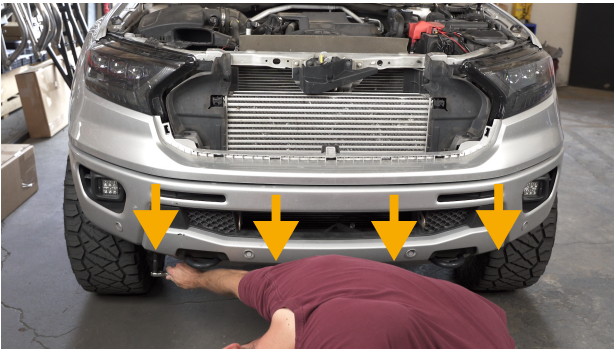

Remove the (5) 8mm bolts that attach the trim to the bumper

### STEP 3:



Pull the center trim panel away from the truck. It is held in place with tension clips. Unplug the parking sensor wire before completely removing.

### STEP 4:



Remove the 1 bumper nut closest to the center of the truck with a 21mm socket.

### STEP 5:



Install the bracket to the truck so that the LED mounting hole is below the nut. Put on snug.

### STEP 6:



Remove your LED from the box and using the new hardware included with your mounts, install the LED to the mounts.

### STEP 7:



Slide your bumper cover over the LED and lightly install in place to check left to right adjustment. Once the LED is centered, remove the cover.

### STEP 10:



In reverse order from above, install the bumper cover. Then install the LED to the mounts. 10. Complete the wiring to your specifications.

### STEP 8:



Once the LED is centered, remove the cover.



### STEP 9:



Now tighten the large bumper nuts to hold the mounts in place. Remove the LED from the mounts.

