

Quality and Style that Endures


CARR GRAB HANDLE INSTALLATION INSTRUCTIONS

Part No. 200031

WARNINGS!

- The manufacturer and distributor of this product are in no way responsible for the consumer's failure to adhere to the warnings and directions of these instructions in the event of damage to the consumer's vehicle, other properties and or personal injury.

1. Select the area you want to install your Grab Handle.
2. Place the Grab handle in the selected area and using the square holes as a guide, mark the square holes on the mounting surface.
3. Center-punch the marked holes.
4. Take your drill motor with the 11/32" drill bit and drill out both holes going completely through the tube. (See Diagram)
5. Remove any burrs from the drilled holes.
6. Apply some Silicone to both sides of the mounting surface for moisture protection.
7. Take the 5/16" Carriage bolts with the flat washers and Nylon lock nuts and securely mount the Grab Handle to the vehicle's tubing.
8. Repeat these steps for installing other Grab Handles.
9. Your Grab Handle is ready for use!

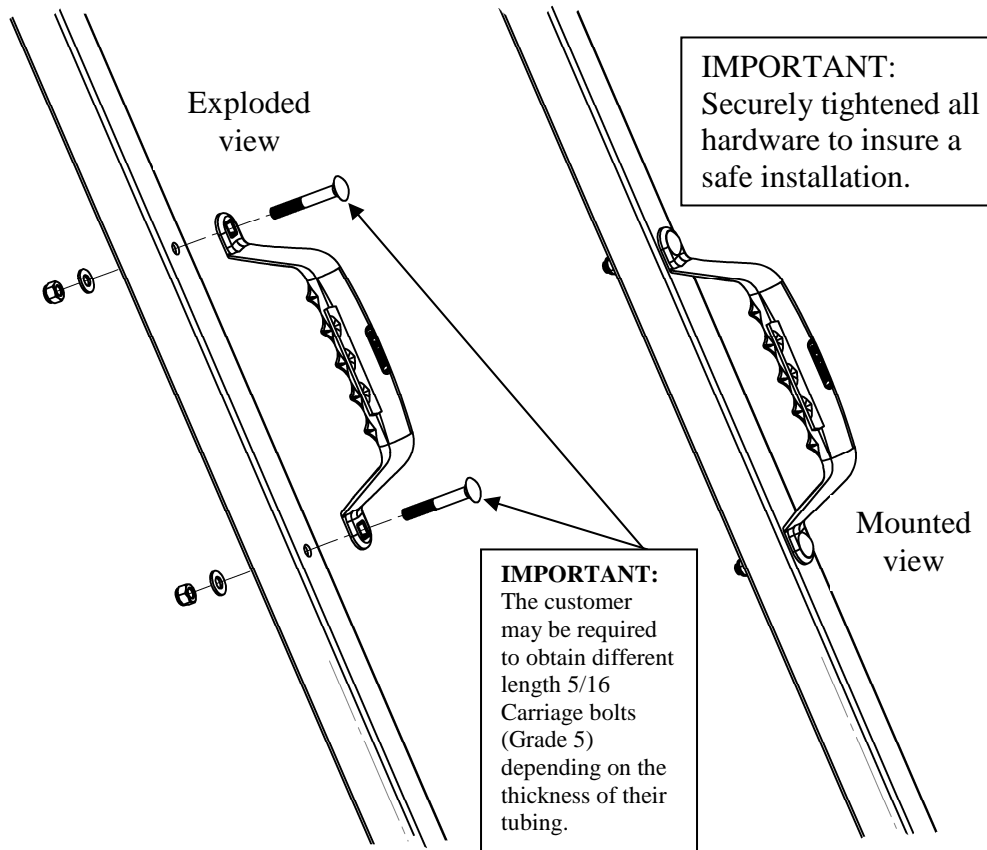

Materials Furnished:

Grab Handle, 2-5/16"X2" Carriage bolts (Grade 5), 2-5/16" Nylon lock nuts

Materials Needed:

Exterior use Silicone.

Tools Needed:

Drill Motor, 11/32 drill bit, Center Punch, 1/2" Wrench.