

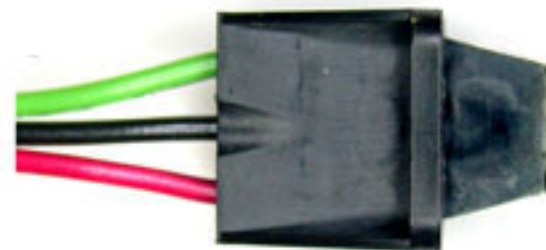



**Two connectors (four wires)
plug into this end**

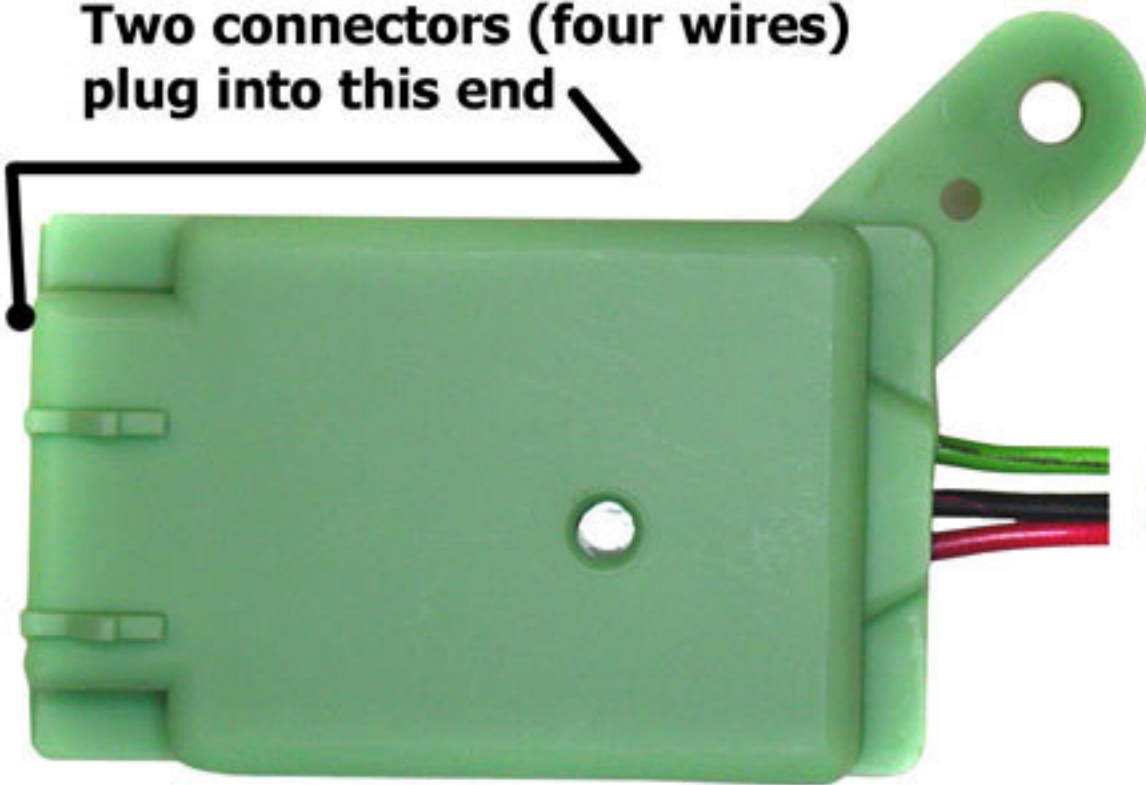

VSS Buffer

**Optical Transceiver
Attaches to speedometer
cluster (rear) next to cable**

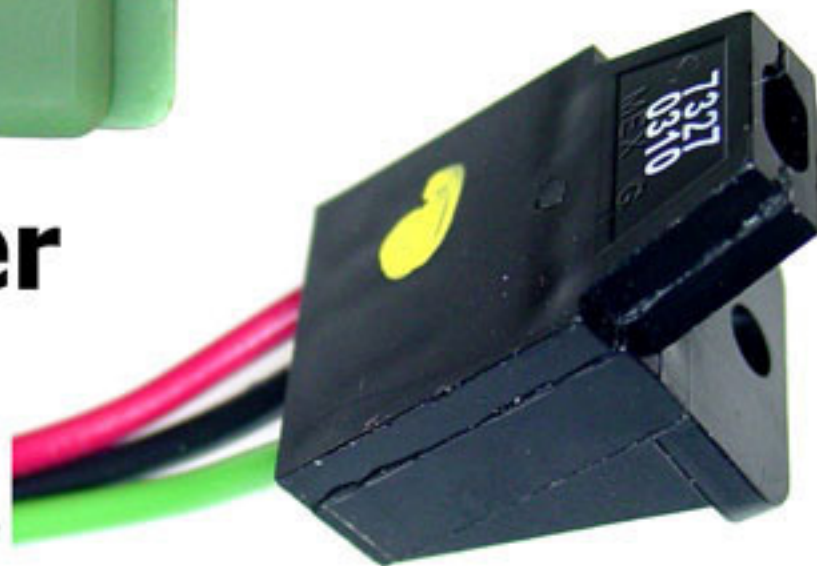

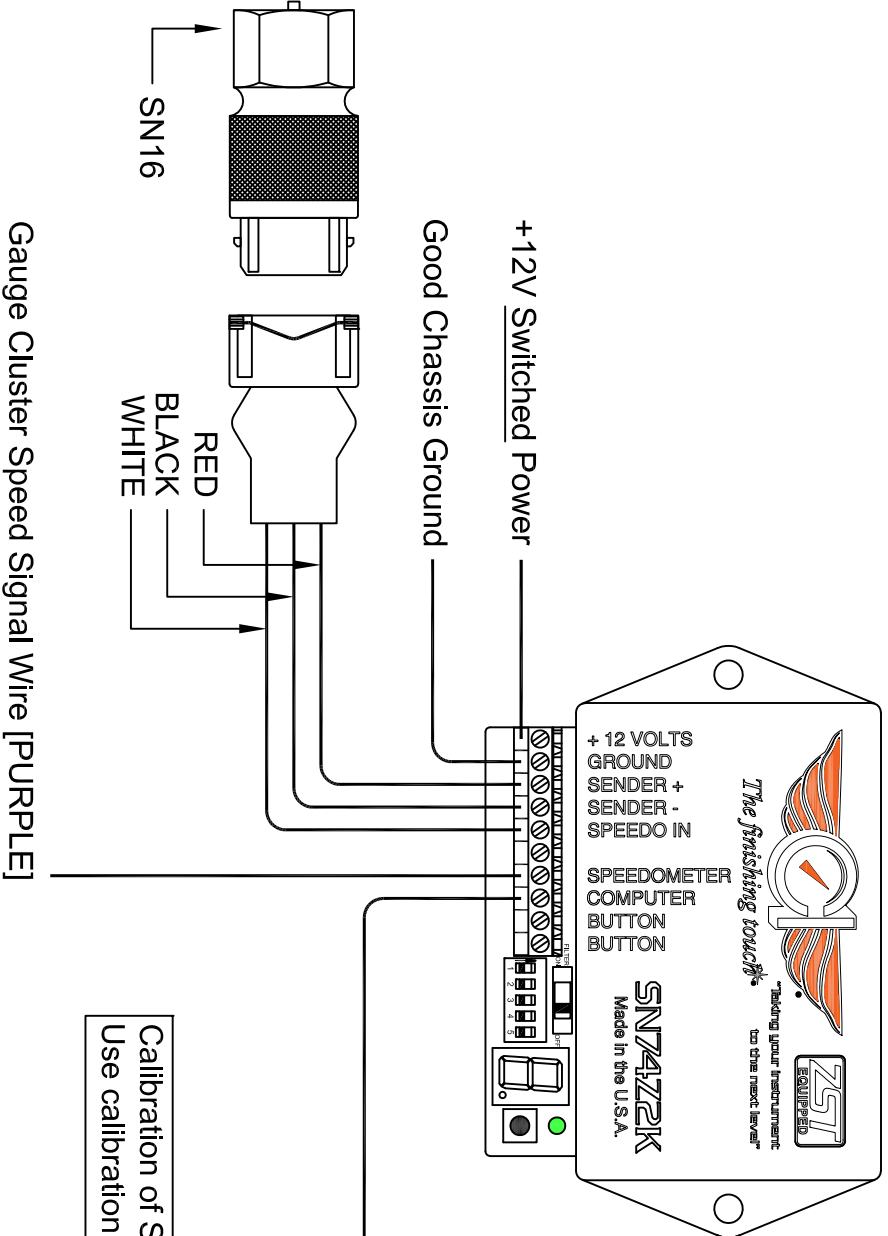


GREEN wire from Optical Transceiver on OE cluster
*(cut the Green wire going to the "optical transceiver" and
 connect the end going to vss buffer box to "COMPUTER"
 position on SN74Z2K)*

Calibration of SN74Z2K not required.
 Use callbration on speedometer.

Gauge Cluster Speed Signal Wire [PURPLE]

 CLASSIC INSTRUMENTS		Customer Name	-
826 Moll Drive - Boyne City, Michigan 49712		Description	1985-1987 TBI Truck ECM Speed Signal
Date	8/7/24	CSO	-