




JK Trailer Hitch Installation Instructions **Replaces Part Number: 52060290K**

Kit Contents:

- 1 – Trailer Hitch
- 4 – 7/16 - 20 x 4.5” Bolts
- 4 – 7/16 Lock Washers

1. Ensure that all components in kit are accounted for.
2. If the vehicle has a tow hook, it must be removed.
3. Clean the cross member and all holes in it to ensure a tight fit and to prevent rust.
4. Raise hitch into position and loosely install all 4 fasteners. Once all 4 fasteners have been started and the hitch is straight, torque the fasteners to 70 Ft. Lbs.
5. Install trailer wiring and secure away from hot or moving objects.
6. Re-torque all hardware after 500 miles.

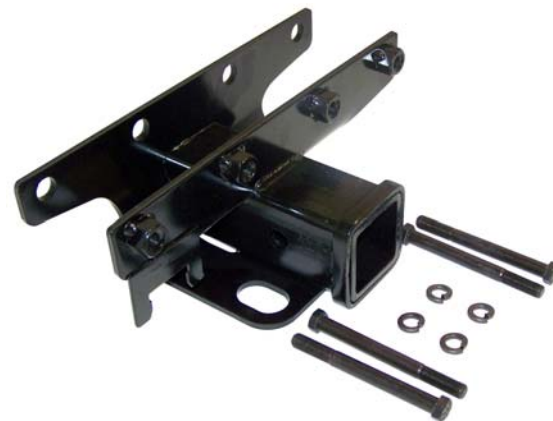

| Do Not Exceed Lower of Towing Vehicle Manufacturer's Rating or | | |
|---|----------------------------------|---------------------------|
| Hitch Type | Max Gross Trailer WT (LB) | Max Tongue WT (LB) |
| Weight Carrying Ball Mount | 3500 (1589 Kg) | 350 (159 Kg) |

While every attempt is made to ensure that the information contained in these instructions is correct, no liability can be accepted by the authors for loss, damage, or injury caused by any errors in, or omissions from the information given. All service should be performed by qualified mechanics. Crown Automotive Sales Co., Inc. cannot be held responsible for any mechanical work performed. Standard and accepted safety precautions should be used in every procedure.