



INSTALLATION INSTRUCTIONS

Boom Mat Speaker Baffles

KIT CONTENTS:

#050310 - 4" Round	#050350 - 4" x 6" Oval
#050311 - 4" Round Slim	#050351 - 4" x 6" Oval Slim
#050320 - 5-1/4" Round	#050360 - 5" x 7" Oval
#050321 - 5-1/4" Round Slim	#050361 - 5" x 7" Oval Slim
#050330 - 6-1/2" Round	#050370 - 6" x 8" Oval
#050331 - 6-1/2" Round Slim	#050371 - 6" x 8" Oval Slim
#050340 - 6-3/4" Round	#050380 - 6" x 9" Oval
#050341 - 6-3/4" Round Slim	#050381 - 6" x 9" Oval Slim

NOTES:

Minor trimming may be required for proper installation

TOOLS:

Pen, Scissors, Boom Mat blade lock knife (050216), awl and Silicone Sealant.



INSTRUCTIONS:

1. Test fit the speaker into the baffle.

2. Perforate screw holes using an awl or other pointed tool. Use care not to tear the baffle material.




Baffle with
holes
perforated





3. To install speaker wire it may be necessary to penetrate the baffle housing to route the wire.

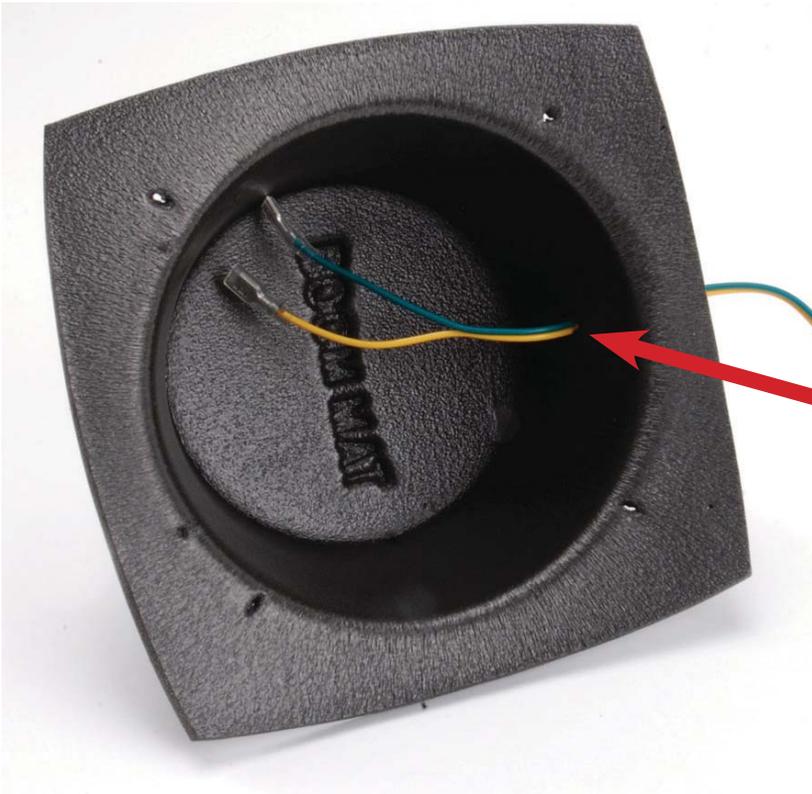

4. Using silicon sealant or similar, seal the opening around the wire to maintain a water tight seal.

5. Install speaker and baffle assembly as per speaker manufacturer directions.