

# Installation Instructions


Part Numbers:

**Hyundai Tucson**  
**Kia Sportage**

**75561**

**87447**

**44582**

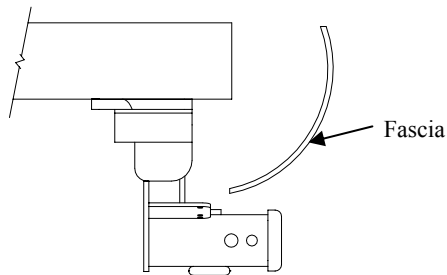

**Do Not Exceed Lower of Towing Vehicle  
Manufacturer's Rating or**

Hitch type	Max Gross Trailer WT (LB)	Max Tongue WT (LB)
Weight Distributing	<b>Not For Use With Spring Bars</b>	
Weight Carrying Ball Mount	<b>3500 (1589 Kg)</b>	<b>350 (159 Kg)</b>

## Hitch Shown In Proper Position

### Equipment Required:

**Fastener Kit:** 75561F

**Wrenches:** 13mm, 14mm, 17mm



**Drill Bits:** None

### Wiring Access Location:

KIA Sportage 4 Cyl. Models – SUV1,2

KIA Sportage 6 Cyl. Models – SUV5

HYUNDAI TUCSON – SUV1,2

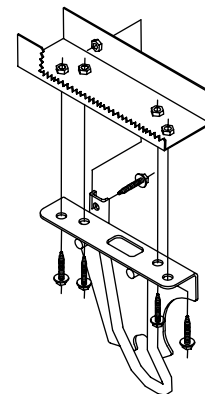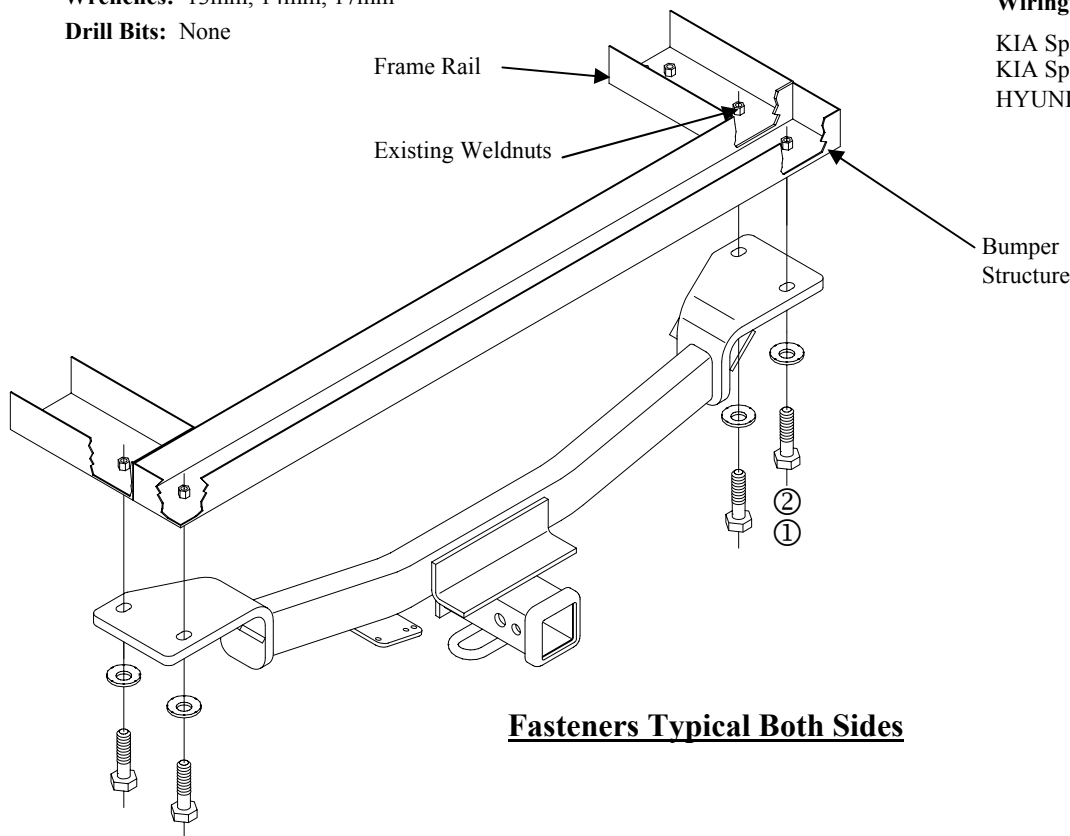

### Fasteners Typical Both Sides

**Figure 2**

①	Qty. (4)	M10 X 1.25 X 40mm CL 8.8	②	Qty. (4)	3/8 Conical Toothed Washer
---	----------	--------------------------	---	----------	----------------------------

1. Lower exhaust by removing two (2) rubber exhaust hangers on the driver's side of the vehicle and one (1) on the passenger's side of the vehicle.
2. Remove tow hook bracket (see figure 2) by removing five (5) M10 bolts and return to vehicle owner.
3. Raise hitch into position and install four (4) M10 X 1.25 X 40mm bolts and conical toothed washers provided with hitch, two (2) per side.
4. Tighten all fasteners to the required torque specification.
5. Raise exhaust back into position and re-install rubber isolators

Tighten all M10 CL8.8 fasteners with torque wrench to 42 Lb.-Ft. (57 N\*M)

Note: check hitch frequently, making sure all fasteners and ball are properly tightened. If hitch is removed, plug all holes in trunk pan or other body panels to prevent entry of water and exhaust fumes. A hitch or ball which has been damaged should be removed and replaced. Observe safety precautions when working beneath a vehicle and wear eye protection. Do not cut access or attachment holes with a torch.