

Installation Instructions for Set # 3-4150

2001 - 02 Chevy Silverado 2500 HD Standard Cab & Extended Cab Pickup



Note: It is recommended that this set be professionally installed if you are unfamiliar with this type of work, and a factory service manual be purchased prior to performing any work on your vehicle for proper disassembly, reassembly, and torque specs. These instructions are intended for bushing removal and install of Energy Suspension polyurethane bushings, once you have removed the factory component from your vehicle.


Removal

Note: When disassembling, note the quantity and positions of any shims that may have been inserted for body alignment. These shims will have to be reused to insure proper body alignment.


Remember: Only raise body high enough to remove & replace mounts. Always watch the fan shroud for sufficient clearance when raising the body. When jacking the body use a long enough 2X4 or 4X4 for maximum support. Never put jack directly on body panels.

Install mounts one side at a time with bolts on other side loosened only.

Retorque to factory specs.

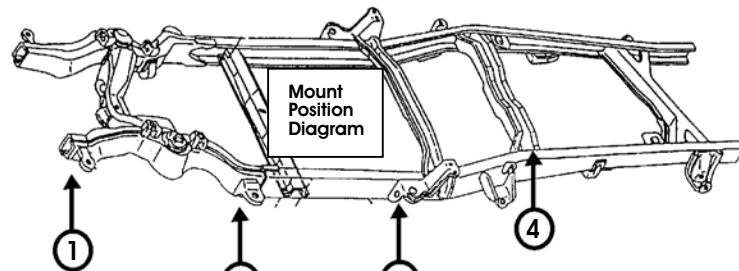

**Must reuse
factory
sleeves and
fasteners.**

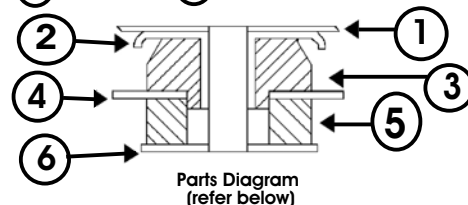

Position # 1-4

1. Body
2. Factory washer with Sleeve
3. 4200
4. Frame
5. 4201
6. Supplied washer