

Installation Instructions for Set # 5-3120 & Set # 5-3131

Must use existing outer metal shells. DO NOT REMOVE FROM CONTROL ARMS!

NOTE: Make sure the bolts fit in the new sleeves before removing the rubber bushings from the control arms!

Remove old metal sleeve and rubber from the shell I.D.

Make sure the I.D. of the shells are clean and free of any old rubber.

Apply a light coat of grease to the I.D. of the metal shell.


Apply a light coat of grease to the I.D., O.D. and bushing flange.

Apply a light coat of grease to the O.D. of the new inner metal sleeve.

Install the bushings in the shell and install the inner sleeve last.

Apply a light coat of grease to the faces of the bushing flanges that contact metal surfaces.

Reinstall control arms onto vehicle, torque bolts to factory specs.

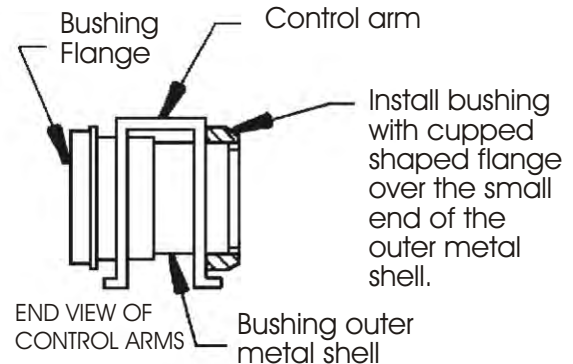

Set # 5-3120 1994-99 Dodge Ram

Position	Part #
1 & 3	3302 bushing (15.10.148.39 INNER SLEEVE .750 O.D. x .480 I.D. x 2.35 Lg.)
2 & 4	3301 bushing (15.10.237.39 INNER SLEEVE .875 O.D. x .563 I.D. x 2.60 Lg.)
5 & 7	3300 bushing
6 & 8	3303 bushing

Set # 5-3131 2000-02 Dodge Ram

Position	Part #
1 & 3	3302 bushing (15.10.504.39 INNER SLEEVE .750 O.D. x .563 I.D. x 2.35 Lg.)
2 & 4	3301 bushing (15.10.396.39 INNER SLEEVE .875 O.D. x .640 I.D. x 2.60 Lg.)
5 & 7	3300 bushing
6 & 8	3303 bushing

