



**6" LIFT SYSTEM**

**2009 – 2013 DODGE RAM 2500 & 3500 4WD**

**2009 – 2013 2500 MEGA CAB**

**FTS23032**



**6" BASIC LIFT SYSTEM**  
**2009 – 2013 DODGE RAM 2500 & 3500 4WD**  
**2009 – 2013 2500 MEGA CAB**  
**FTS23032**

<b>FTS23032</b>			<b>FTS23020BK</b>		
<b>Qty</b>	<b>Part Number</b>	<b>Description</b>	<b>Qty</b>	<b>Part Number</b>	<b>Description</b>
		<b>Box Kit</b>			<b>6" Coil Spring Box "Diesel"</b>
2	FT3400-111	Frt. Bump Stop	1	FT44102DBK	Coil Spring 6" Drv.
1	FT44172	Pitman Arm	1	FT44102PBK	Coil Spring 6" Pass
2	FT44103BK	Upper Link Arm	4	FT748U	U-Bolt
2	FT44104BK	Lower Link Arm	1	FT916H	U-Bolt Hardware
1	FT44198BK	Trac Bar Bracket			
2	FT30153	Sway Bar End Link		<b>" OR "</b>	
2	FTBK41	Lift Blocks			
1	FT44058	Hardware Kit		<b>FTS23014BK</b>	<b>6" Coil Spring Box "Gas V8"</b>
1	FT44178	Hdwr Sub-Assembly Kit	<b>Qty</b>	<b>Part Number</b>	<b>Description</b>
			1	FT44107PBK	Coil Spring 6" Pass
	<b>FT44178</b>	<b>Hdwr Sub-Assembly Kit</b>	4	FT744U	U-Bolt
2	FTS50	Jam Nut 3/4"	1	FT58H	U-Bolt Hardware
2	FT160	Block Pin Sleeve			
2	FTS98003	3/4" Heim			
4	FT95066	Mis-Alignments		<b>FT44177</b>	<b>Hardware Kit</b>
4	FT90051	Sway Bar Bushing	2	50133001081	1/2"-13 x 3" Bolt
4	FT90050	Sway Bar Washer	2	50130004152	1/2"-13 C-Lock Nut
1	FT90112	Bushing Kit	4	50000005081	1/2" SAE Flat Washer
1	FT44045	Trac Bar Brkt Nut Tab	2	50133001882	1/2"-13 x 3" Btn Hd Bolt
1	FTREGCAR D	Reg. Card	2	56123001081	9/16"-12x3" Hex Cap Bolt
1	FTAS12	Fabtech Sticker	2	56120004182	9/16" – 12 C-Lock
1	FTAS16	Driver Warning	8	FT84	Grease Fitting
2	FT23032i	Instruction Sheet	1	63113501082	5/8"-11 x 3 1/2" Hex Cap Bolt
2	FT186	1.000x.719x2.620 Sleeve	1	62110003382	5/8"-11 C-Lock Nut
			2	62000005081	5/8" SAE Flat Washers
	<b>FT90112</b>	<b>Bushing Kit</b>			
4	FT76	1.000x.563x2.230 Sleeve			
2	FT77	1.000x.630x2.620 Sleeve			
4	FT1037	Link Bushing			
12	FT1038	Link Bushing			
2	FTLUBE	Bushing Lube			

**YOU MUST INSTALL THE PROPER TRANSMISSION BRACKET WITH THIS KIT. SEE LIST BELOW FOR PROPER APPLICATION. CONTACT FABTECH FOR BRACKET AVAILABILITY.**

<b>FTS93007</b>	Gas Auto 2500 4wd
<b>FTS93008</b>	Diesel (6.7L) Auto 2500 4wd

<b>FT44058 Hardware Kit</b>		
<b>Qty</b>	<b>Description</b>	<b>Location</b>
1	9/16"-12 x 3" Bolt	Trac Bar
1	9/16"-12 Nylok Nut	
2	9/16" SAE Flat Washer	
5	7/16"-14 x 1 1/4" Bolt	Trac Bar Bracket
4	7/16"-14 Nylok Nut	
9	7/16" SAE Flat Washer	
1	7/16" Split Washer	
1	14mm-2.0 x 150mm Bolt	Pass. Upper Link Arm
1	14mm-2.0 C-Lock Nut	
2	14mm Flat Washer	

**TOOL LIST: (NOT INCLUDED)**

- FLOOR JACK
- JACK STANDS
- ASSORTED METRIC AND S.A.E SOCKETS, & ALLEN WRENCHES
- PITMAN ARM PULLER
- GREASE GUN
- DIE GRINDER WITH CUT OFF WHEEL
- DRILL w/ ASSORTED DRILL BITS

**READ ALL INSTRUCTIONS THOROUGHLY FROM START TO FINISH BEFORE BEGINNING INSTALLATION!**

**VEHICLES THAT WILL RECEIVE OVERSIZED TIRES SHOULD CHECK BALL JOINTS, TIE RODS ENDS AND IDLER ARM EVERY 2500-5000 MILES FOR WEAR AND REPLACE AS NEEDED**

**THIS KIT MUST BE INSTALLED WITH A FABTECH 6" LIFT COIL SPRING KIT, FRONT SHOCKS AND REAR SHOCKS.**

**THIS SYSTEM COMES WITH A 4" LIFT BLOCK FOR THE REAR, DUE TO DIFFERENT CAB & MOTOR CONFIGURATIONS YOU MAY NEED TO CONTACT YOUR FABTECH DEALER TO PURCHASE A LARGER BLOCK TO LEVEL YOUR TRUCK. MOST MODLES REQUIRE A 4" LIFT BLOCK TO LEVEL THE TRUCK.**

**DODGE ¾ TON TRUCKS CAME WITH TWO DIFFERENT REAR U-BOLT SIZES. THEY DIFFER DEPENDING ON IF YOUR MODEL IS A GAS OR DIESEL. THE U-BOLTS ARE SUPPLIED IN THE COIL SPRING BOX KIT.**

**THIS KIT ALLOWS THE USE OF 37X12.50R17 TIRES ON A 17X9 RIM W/ 5" BACK SPACING. SOME MINOR TRIMMING MAY BE REQUIRED ON SOME MODELS.**

**LONG BED MODELS MAY REQUIRE LENGTHENING OF REAR DRIVELINE.**

**FRONT INSTRUCTIONS:**

- |   |   |
|---|---|
| <ol style="list-style-type: none"> <li>1. Disconnect the negative terminal on the battery. Jack up the front end of the truck and support the frame rails with jack stands. <b><u>NEVER WORK UNDER AN UNSUPPORTED VEHICLE!</u></b> Remove the front tires.</li> <li>2. Support the front axle with 2 floor jacks. Remove the bolts attaching the brake line tabs to the front axle. Remove the</li> </ol> | <ol style="list-style-type: none"> <li>front sway bar end links from the axle mount. Remove the bolts securing the sway bar mounts to the frame and set the sway bar aside, save all sway bar hardware.</li> <li>3. Remove the hardware attaching the drag link to the pitman arm and separate the tie rod end from the pitman arm. Save the hardware.</li> </ol> |
|---|---|

4. Remove the nut securing the track bar to the frame and separate. Save the track bar hardware.
5. Remove the top nuts on the front shocks and the lower bolts securing the shock to the axle. Leave the shock loose inside the factory coil spring at this time. Save the lower hardware and discard the upper.
6. Loosen the bolts securing the link arms to the frame and front axle, **DO NOT REMOVE THE BOLTS**. Lower the jacks supporting the front axle and remove the coil springs. Save the upper rubber insulator and discard the coil springs and shocks. **USE EXTREME CARE WHEN WORKING WITH COILS THAT ARE UNDER LOAD!**
7. Locate FT44198BK Track Bar bracket and drill out the two 9/16" holes in the track bar bracket to 5/8". Install the track bar bracket into the factory frame track bar mount. Attach the new bracket to the original frame hole using the original hardware. Leave loose at this time. Using the supplied FT44045 nut tab along with the supplied 7/16" x 1 1/4" bolt, flat washer and split washer, attach to the inboard hole of the new track bar bracket to the frame. (**Note on some models this hole will need to be drilled.**) Torque the 7/16" bolt to 50 ft. lbs. and the 5/8" bolts to 100 ft. lbs
8. Remove the nut securing the pitman arm to the steering box. Using a pitman arm puller, remove the pitman arm from the steering box. Slide the new FT44172 pitman arm onto the steering box shaft, making sure to line up the splines properly. Reinstall the original lock washer and nut and torque to 220 ft-lbs.
9. Remove the original rubber bumpstops from the frame and install the supplied FT3400-111 urethane bump stops. SEE PHOTO BELOW.



10. Locate FT44103 upper link arms. (**This link is 18" from the center of the barrel to the center of the barrel**). Press one FT1037 small bushing and one large FT1038 bushing

into each end of the upper link arms. **Be sure to check offset of bushings so that zerk fitting is not covered.** Locate FT76 upper link arm sleeve and press one into each end of the link arms. Use the supplied FTLUBE on the surfaces of the bushings and sleeves before installing. Install one of the supplied FT84 grease fitting into each barrel on the link arms.

11. Locate FT44104 lower link arms. (**This link is 19 11/16" from the center of the barrel to the center of the barrel**). Press two FT1038 large bushings into each end of the links arms. Locate FT77 and FT186 lower link arm sleeves and press one into each end of the lower link arms. Use the supplied FTLUBE on the surfaces of the bushings and sleeves before installing. Install one of the supplied FT84 grease fitting into each barrel on the link arms.
12. Remove the bolts attaching the lower link arms to the front axle and then the frame. Save the factory bolts and discard the links. Locate the assembled FT44104 lower link arms. Attach the link arms to the axle mounts first then to the frame mounts using the original hardware. The end of the link arm with the FT186 sleeve should be used at the axle mounts. **NOTE: when installing the link arms onto the truck, make sure the gussets on the lower arms face down. Also when reinstalling the alignment cam bolts in the lower axle pivot, make sure they are set in the center of their adjustment. Both factory lower link arms will need to be removed before installing the Fabtech links.** Leave the link arm bolts loose at this time
13. Remove the bolts attaching the upper link arms to the front axle and then the frame. Save the factory bolts and discard the links. Locate the assembled FT44103 upper link arms. Attach the link arms to the factory frame pocket using the original hardware (DO NOT ATTACH TO AXLE MOUNT AT THIS TIME). **Note: Both factory upper link arms will need to be removed before installing the Fabtech links. Also when installing the upper links, make sure the gussets are face up.** Leave the link arm bolts loose at this time. **ON PASS. SIDE OF THE TRUCK, THE UPPER LINK ARM BOLT AT THE FRAME MOUNT WILL NEED TO BE CUT OUT FOR EASY OF REMOVAL, A NEW 14MM BOLT NUT AND WASHER IS SUPPLIED FOR THAT MOUNT.**
14. Take one of the new coil springs FT44102P and FT44102D driver and passenger and locate the top of the coil spring (smaller diameter end). Locate FTS7189 front shocks (not supplied with this kit) and place one shock inside each coil spring **BEFORE INSTALLING ON THE TRUCK**. The shocks must be placed inside the coil spring before it is installed. Place the original coil spring insulator on top of the coil spring and place the coil spring onto the front axle. Align the coil spring in the upper and lower pockets and raise the jacks supporting the front axle. Raise the axle just enough to compress the coil spring 1/4". **USE CARE TO NOT LIFT THE TRUCK OFF OF THE SUPPORT STANDS.** Attach the new upper link arm to the axle using

the original hardware. Torque the all of the link arm bolts to 95 ft - lbs.


15. Connect the track bar to the new drop bracket using the supplied 5/8" hardware. SEE PHOTO BELOW.



16. Attach the front shocks to the upper and lower mounts. You will use the supplied hardware for the upper mount and factory lower hardware. Torque the upper hardware to 35 ft. lbs. and the lower hardware to 60 ft. lbs

17. Connect the drag link to the new drop pitman arm. Torque the original nut to 45 ft-lbs.

18. Locate FT30153 Billet Sway Bar End Links. Attach one FTS98003 heim joint and one Jam nut to each end of the end links. You will want to thread the jam nuts all the way down the heim joints and the heims all the way into the billet end links. Position one end of the end link with two of the supplied FT95066 mis-alignments against the rear lower shock mount. Using the supplied 9/16 -12 x 3" bolt and flat washers, attach the end link to the factory sway bar mount. SEE PHOTO BELOW

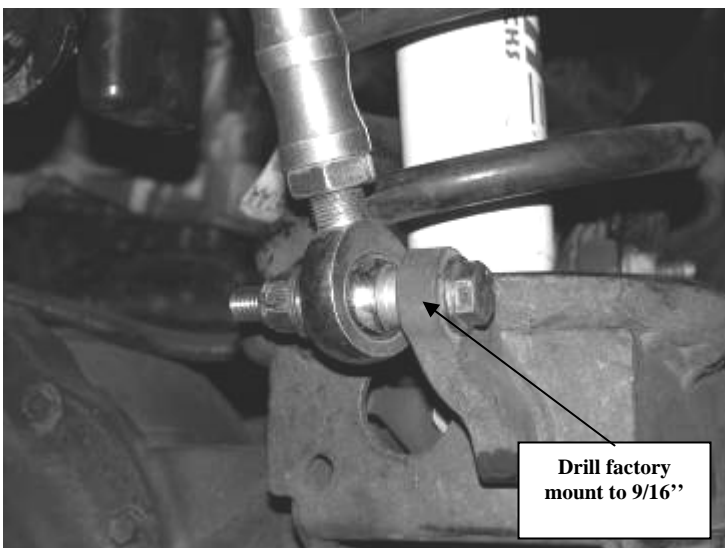

19. Locate the supplied 1/2" button head bolts and the sway bar bushing along with the cup washers. Attach the bushing end of the sway bar end links to the sway bar, leave loose at this time. **At times this may be easier to attach when the truck is completed and on the ground.** SEE PHOTO ON NEXT PAGE



20. Attach the brake line tab back to the original mount using the original hardware. You may need to pull the factory hose through the bracket to gain some slack. Repeat this on the opposite side of the truck.


21. Reinstall the front tires and torque the lugs to factory specifications. The factory torque specifications can be found in your owner's manual. Set the truck back onto the ground. **WHILE TURNING THE STEERING WHEEL FULLY IN EACH DIRECTION, MAKE SURE THERE IS AMPLE CLEARANCE BETWEEN THE WHEELS, TIRES, LINK ARMS, BRAKE LINES AND ABS WIRES.**

**Install appropriate transmission drop bracket (not included with this kit) at this time as per the instructions included with this kit**

### **REAR INSTRUCTIONS**

22. Jack up the rear end of the vehicle and support the frame rails with jack stands. Supporting the rear differential remove and discard the rear shocks and u-bolts. Lower the axle down slowly. Use care not to over extend the brake hoses.
23. Locate the supplied 4" blocks and FT160 Block Pin Sleeve. Use a drill with a 3/4" drill bit and drill out the hole in the bottom of the block. Install the Pin Sleeve into the hole in the axle perch and install block with its locating pin into the new sleeve. Install with the integrated bump stop towards

inside of vehicle. Using the supplied u-bolts, nuts and washers, from the Coil Spring box, align axle, lift block, and springs and torque to u-bolts to 90 ft-lbs. The short end of the block should face to the front of the vehicle. SEE PHOTOS IN NEXT COLUMN

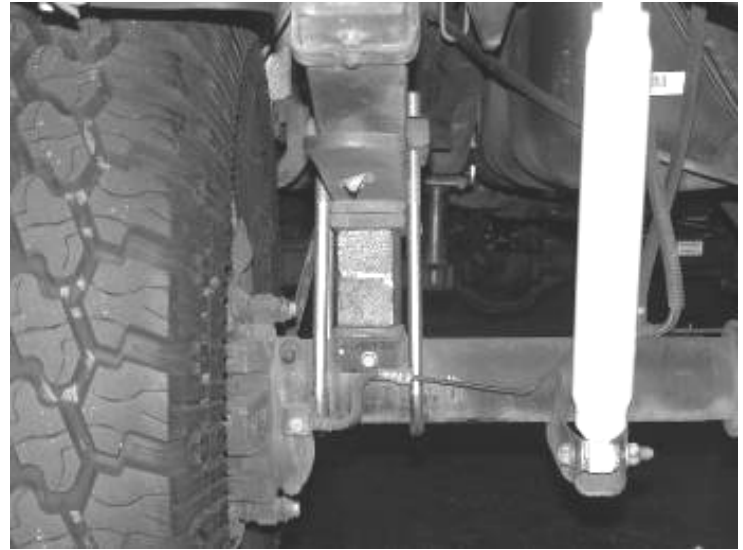

***NOTE:***

**Dodge ¾ Ton truck came with two different rear U-Bolt sizes. They differ depending on if your model is GAS or DIESEL. The U-Bolts are supplied in the Coil Spring Box Kit appropriate to your vehicle model.**

24. Install new Fabtech shocks Performance or Dirt Logic 2.25" (not supplied with this kit) with the factory hardware and torque upper and lower bolts to 65 ft-lbs.
25. Recheck all bolts for proper torque. Recheck brake hoses and lines for proper clearances.
26. Install tires and wheels and torque lug nuts to wheel manufacturer's specifications. Turn front tires left to right and check for appropriate tire clearance. Note- Some tires may require trimming of the front plastic bumper valance.
27. Check front-end alignment and set to factory specifications. Re-adjust headlights.
28. Recheck all the hardware on the suspension that was used for correct toque.