

START HERE!

READ ME FIRST

Don't be a hero and muscle through this installation without reading these fitting instructions first! Improper installation of this gear may void certain aspects of your warranty.


Before you begin, take a moment and open all your Front Runner rack kit boxes and gather the assembly instructions for the various components.

A complete kit will contain:

1. A Front Runner Mounting System specific to your vehicle
2. A Front Runner Rack Tray or Load Bar Slats

This document will guide you through the assembly of the mounting system and assist you in fitting the roof rack tray or load bars to your specific vehicle.

Please refer to the next page for a list of all the components, quantities and tools required.

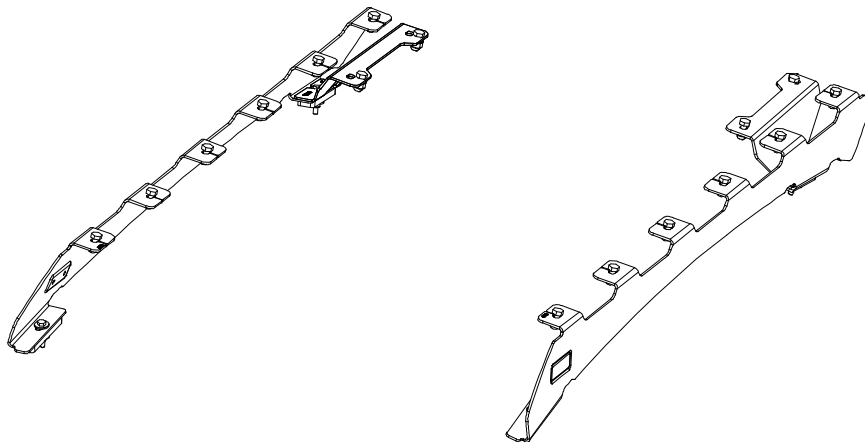

IMPORTANT WARNING! ⚠


IT IS CRITICAL THAT ALL FRONT RUNNER PRODUCTS BE PROPERLY AND SECURELY ASSEMBLED AND ATTACHED TO YOUR VEHICLE. IMPROPER ATTACHMENT COULD RESULT IN AN AUTOMOBILE ACCIDENT, AND COULD CAUSE SERIOUS BODILY INJURY OR DEATH. YOU ARE RESPONSIBLE FOR ASSEMBLING AND SECURING ALL FRONT RUNNER PRODUCTS TO YOUR VEHICLE, CHECKING THE ATTACHMENTS PRIOR TO USE, AND PERIODICALLY INSPECTING THE PRODUCTS FOR ADJUSTMENT, WEAR AND DAMAGE. THEREFORE, YOU MUST READ AND UNDERSTAND ALL OF THE INSTRUCTIONS AND PRECAUTIONS SUPPLIED WITH YOUR FRONT RUNNER PRODUCT PRIOR TO INSTALLATION OR USE. IF YOU DO NOT UNDERSTAND ALL OF THE INSTRUCTIONS AND CAUTIONS, OR IF YOU HAVE NO MECHANICAL EXPERIENCE AND ARE NOT THOROUGHLY FAMILIAR WITH THE INSTALLATION PROCEDURES, YOU SHOULD HAVE THE PRODUCT INSTALLED BY A PROFESSIONAL INSTALLER OR OTHER QUALIFIED PERSONNEL.

NOTE: Front Runner will not be responsible for any damage caused by the failure to install the product according to these instructions.

Please call us if you have any questions about the installation of this product.

**1 GET ORGANIZED****IN THE BOX**

1	2 X	Foot Rail 1LH + 1RH
2	2 X	Stiffener Bracket 1LH & 1 RH
3	4 X	Spacer 10mm
4	16 X	M8 x 20 Hex Bolt
5	16 X	M8 x 16 x 1.6 Flat Washer
6	16 X	M8 Nyloc Nut
7	16 X	M8 Nut Cap
8	4 X	M6 x 35 Hex Bolt
9	8 X	M6 x 20 x 2 Flat Washer
10	4 X	M6 Nut Cap
11	4 X	M6 Nyloc Nut

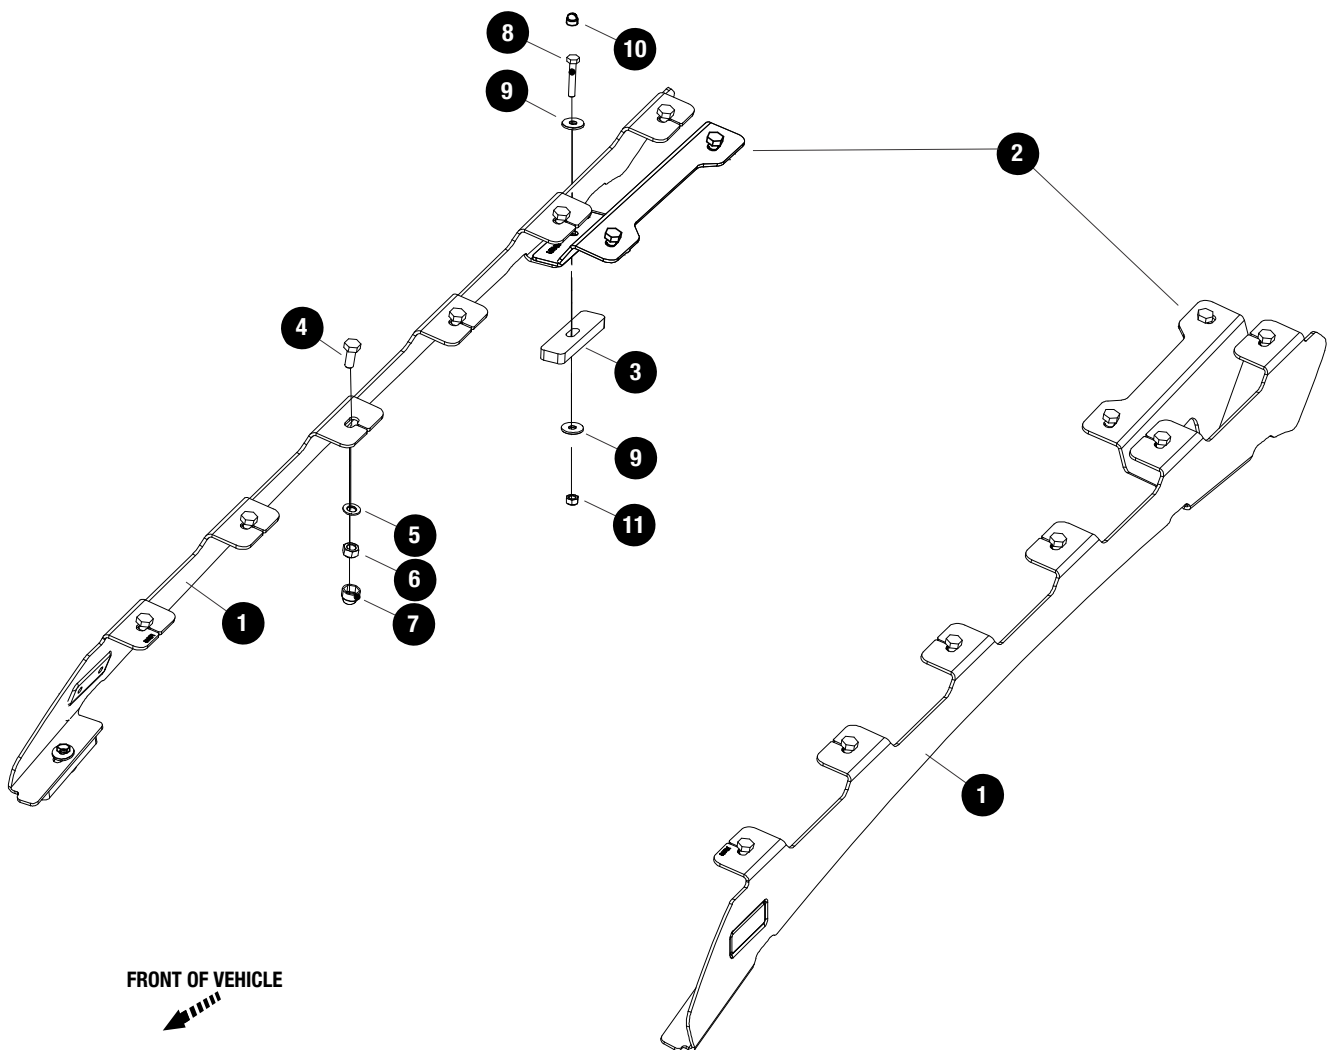TOOLS NEEDED**FIGURE 1.1**

2

FIT AND SECURE - FOR USA SPEC FITMENT ONLY

2.1



Drop the vehicle's roof lining.




Look online for videos to assist.

2.2



After the roof lining has been dropped, loosen the M6 nuts on the inside of the roof holding the ditch trim in place and remove the ditch trim from the roof.

2.3

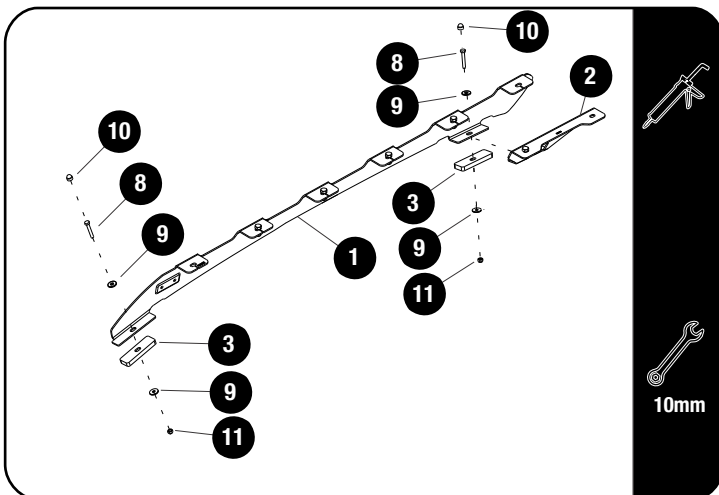

Apply a bead of sealant on the threads of the M6 x 35 Hex Bolts and also around check mounting hole before securing the Foot Rail (Item 1) together with the Support Bracket and Spacers (Item 2 & 3), using the M6 x 35 Hex Head Bolts, M6 x 20 x 2 Flat Washers and M6 Nyloc Nuts (Items 8,9 & 11) as shown.

NOTE: One of the M6 Washers (Item 9) goes on the inside of the roof.

Tighten all Fasteners.

Place M6 Nut Caps (Item 10) over all the Hex bolt heads.



Tightening Torque:

M6 : 8-10Nm / 5.9 ft lb - 7.38 ft lb

3


FIT AND SECURE

3.1

Refer to RRSUNI when assembling your Slimline II Tray.




3.2

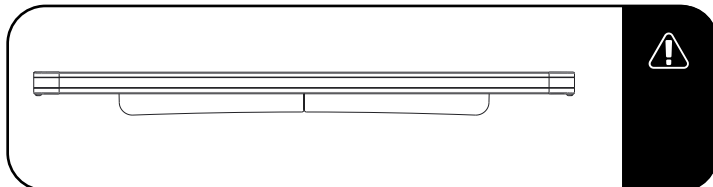

Make sure that the wind deflector is installed before you proceed to the next step.

3.3

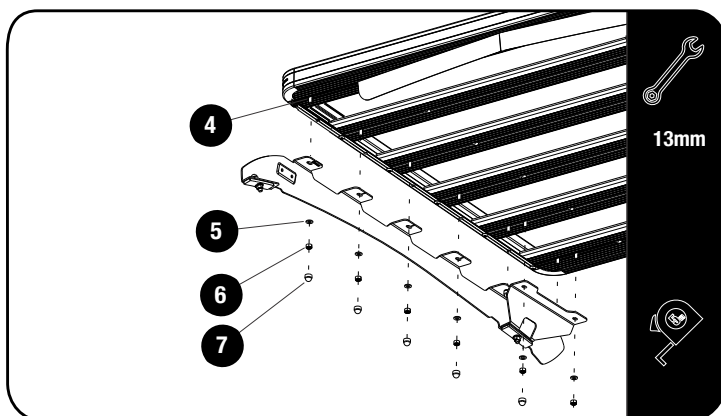

Fit your roof rack to the Foot Rails using M8 x 20 Hex Bolts, M8 x 16 x 1.6 Flat Washers and M8 Nyloc Nuts (Items 4, 5 & 6) as shown.

**Tightening Torque:**

M8 : 15-20Nm / 11.06 ft lb - 14.75 ft lb

Refit the roof lining.

3.4

Center the rack and tighten fully. Use M8 Nut Caps (Items 7) to finish off the nuts.



4

INSTALL OTHER VEHICLE AND RACK ACCESSORIES

Now's the time to visit your favorite Front Runner dealer in person or online.

IMPORTANT!

FRONT RUNNER RACK KITS OFTEN HAVE A HIGHER LOAD RATING THAN THE VEHICLES THEY ARE MOUNTED TO. PLEASE REFER TO YOUR SPECIFIC VEHICLE MANUFACTURER FOR A RECOMMENDED ROOF RATING. FRONT RUNNER CANNOT BE RESPONSIBLE FOR IMPROPER LOADING BEYOND THE VEHICLE MANUFACTURER'S STATED LOAD CAPACITY.

Be sure to tag us. We love to see our gear in action! #FrontRunnerOutfitters

Share your adventures on:



