



2009-2014 Dodge 1500 (NO SENSORS) Installation Part # 200-40-9004 + XGG 700-40-9004

Bolt Bag Contents:	
Quantity	Description
28	1/2" Flat Washers
14	1/2" Lock Washers
8	1/2" Nuts
8	1/2" X 1-3/4" Bolts
4	12mm X 60mm Bolts
2	12mm X 130mm bolts
6	12mm nuts
70	Total Pieces

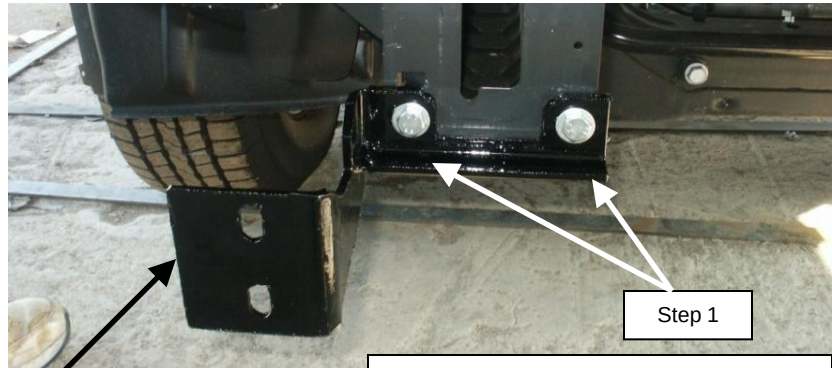

FRONT FRAME BRACKET

Picture is shown without factory bumper for better understanding.

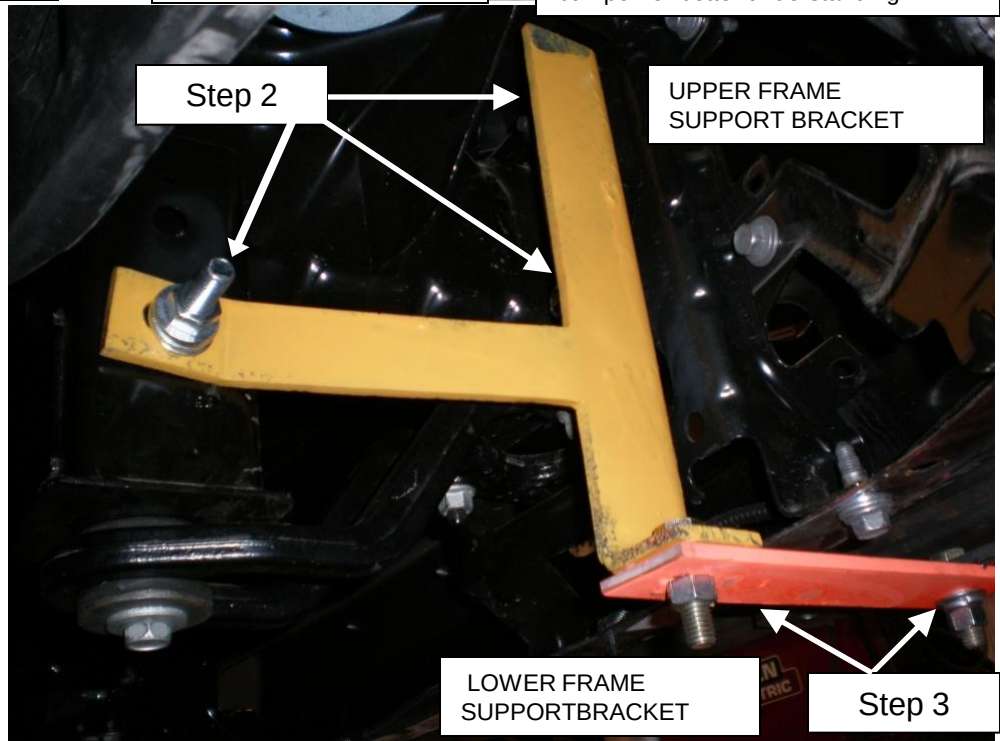

UPPER FRAME
SUPPORT BRACKET

Step 2

LOWER FRAME
SUPPORT BRACKET

Step 3

Step 1: DO NOT REMOVE FACTORY CHROME BUMPER!! **Tow hook models:** Remove tow hook and any plastic around tow hook. Mount our FRONT FRAME BRACKETS to bottom two holes that tow hook was mounted to. Then re-install factory tow hooks using our replacement bolts (12mm X 60mm) *NOTE: Do not tighten nut on lower outside tow hook bolt until step 2 bracket is installed (See below)* **Non tow hook models:** Remove plastic front cover in the center of the bumper to expose truck frame. Attach Frontier FRONT FRAME BRACKETS to bottom two frame cap bolts as shown *NOTE: Do not tighten nut on lower outside tow hook bolt until step 2 bracket is installed (See below)* The plastic piece that was removed can be trimmed and re-installed.

Step 2: Install UPPER FRAME SUPPORT BRACKET using the factory frame cap bolt on top and our 12mm X 60mm (tow hook) bolt provided. Lastly, install back bolt using a 12mm X 125mm bolt provided and insert through the frame rail and into the rear leg of our UPPER FRAME SUPPORT BRACKET.

Step 3: Install Grille Guard to FRONT FRAME BRACKET using 1/2" X 1 3/4" bolts provided. (make sure to align grille guard to truck then tighten) **IMPORTANT:** Use bottom Grille Guard tab as a guide for where to cut slots into lower bumper valence. You will need to cut this out in order to install the lower frame support bracket. Lastly, install LOWER FRAME SUPPORT BRACKET to upper frame support bracket installed in step 2 and also the bottom tab on Frontier [Grille Guard](#) using 1/2" X 1 3/4" bolts and tighten.

Step 4: Check alignment of grille guard to truck and don't forget to tighten all bolts.