




PERFORMANCE EXHAUST SYSTEMS

INSTRUCTION MANUAL
CAT-BACK STAINLESS SINGLE EXHAUST
MURCURY MOUNTAINEER 4.0L, SOHC 2/4WD 4DOOR
FORD EXPLORER 4.0L, OHC 2/4WD 4DOOR
SINGLE INLET MUFFLER W/SLIP FLANGE
PART # 619684

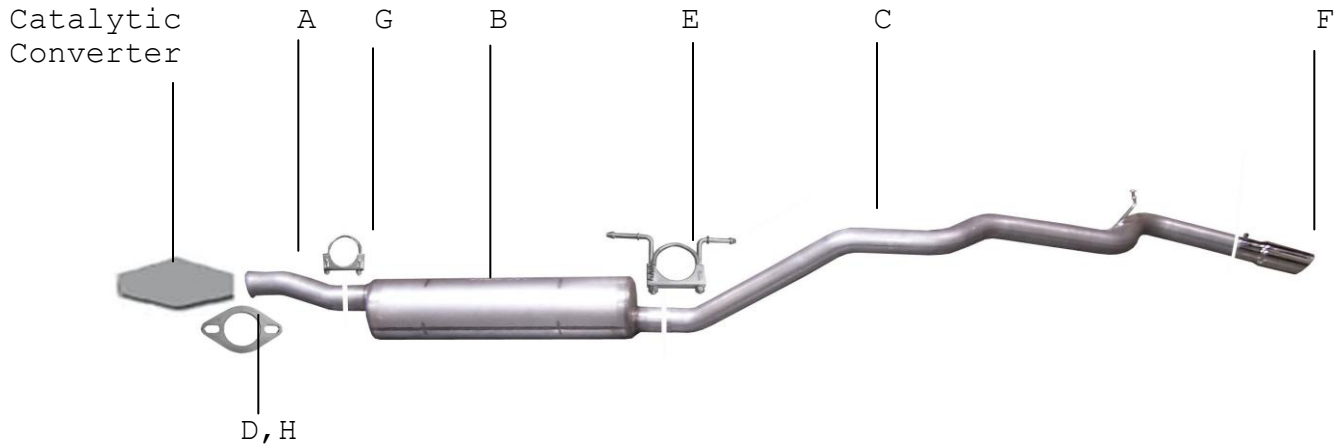

ITEM	PART #	QUANTITY	DESCRIPTION
A	458-700314S	1	2 ½" STAINLESS HEADPIPE
B	788500S	1	SUPERFLOW STAINLESS MUFFLER
C	435-700296S	1	2.5"STAINLESS OVERAXLE TAILPIPE
D	GP-102	1	FLANGE
E	4144	1	REAR MUFFLER HANGER
F	500361	1	3" STAINLESS TIP
G	5757	1	2-1/2" CLAMP
H	BO-1034	1	BOLT KIT FOR FLANGE GP-102

WILL NOT FIT WITH RELOAD LEVELING SUSPENSION

EXHAUST INSTALLATION # 619684


WHEN INSTALLING THIS EXHAUST SYSTEM, MAKE SURE TO USE THE PROPER SAFTEY PRECAUTION. USE JACK STAND WHEN UNDER TRUCK, SET PARKING BRAKE, BLOCK TIRES, AND USE SAFTEY GLASSES AND GLOVES. DO NOT WORK WITH HOT PIPES!

SUGGESTED TOOLS:


15mm SOCKET, 9/16" SOCKET, 1/2" SOCKET, 1/2" WRENCH, HACKSAW, JACKSTAND, WD40




LAY OUT THE GIBSON EXHAUST AND COMPARE PART NUMBERS TO THE MANUAL. FOR AN EASIER REMOVAL LUBE ALL RUBBER GROMMETS WITH WD-40 AND CUT THE TAILPIPE DIRECTLY BEHIND THE MUFFLER. UN-BOLT THE FLANGE LOCATED IN FRONT OF STOCK MUFFLER. THEN REMOVE LEAVING ALL RUBBER GROMMETS IN PLACE. YOU WILL REUSE STOCK HEADPIPE FLANGE BOLTS.

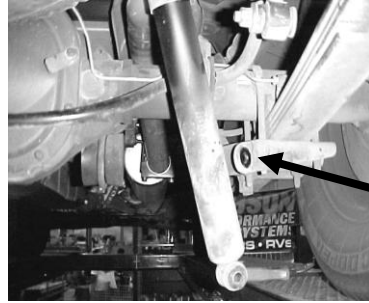

FOR AN EASIER INSTALLATION OF THE OVERAXLE PIPE DISCONNECT THE LOWER REAR SHOCK MOUNT.

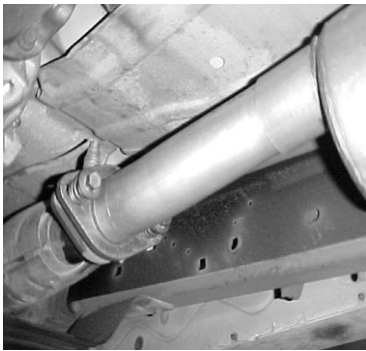

SLIDE FLANGE #D ONTO HEADPIPE #A AND BOLT TO FACTORY HEADPIPE REUSING FACTORY NUTS & BOLTS. (DO NOT TIGHTEN), OUTLET OF HEADPIPE SHOULD BE AT ABOUT 1'O'CLOCK. SLIDE MUFFLER #B ONTO THE HEADPIPE NO MORE THEN 2" AND NO LESS THEN 1" ON THE INLET OF THE MUFFLER AND CLAMP WITH #G. MUFFLER INLET IS LOOKING INTO THE LOUVERS.

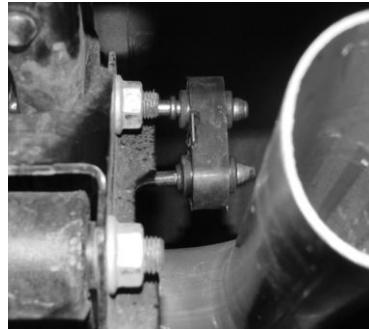

SLIP THE OVERAXLE PIPE #C THROUGH THE LEAF SPRING IN BETWEEN THE SHOCK AND THE SWAY-BAR AND INTO THE MUFFLER AT LEAST 1 1/2" NO MORE THAN 2" USE HANGER #E TO CLAMP PIPE TO MUFFLER.



INSERT TAILPIPE WELDED HANGER INTO THE RUBBER GROMMET. ROTATE OVERAXLE PIPE UNTIL YOU HAVE A MINIMUM 1" CLEARANCE.



ONCE THE MUFFLER AND HEADPIPE ARE INSTALLED ROTATE THE MUFFLER AND HEADPIPE UNTIL MUFFLER OUTLET IS POSITIONED AT 3 O'CLOCK AND SITTING LEVEL UNDERNEATH THE VEHICLE. INSTALL THE O.E. HANGER #E ONTO OUTLET OF MUFFLER AND INSERT WELDED HANGERS INTO DIAPHRAGM GROMMET



INSTALL YOUR STAINLESS STEEL TIP. USE ANY ALUMINUM OR STAINLESS STEEL CLEANER TO POLISH YOUR TIP. TIGHTEN ALL CLAMPS AND HANGERS. REINSTALL THE REAR SHOCK MOUNT.

"MAKE SURE YOU HAVE A MINIMUM OF A 1" CLEARANCE ON ALL PIPES FROM FUEL & BRAKE LINES, TIRES, SHOCKS, SWAY-BAR, ETC."