

THANK YOU FOR SELECTING A HUSKY FLOOR LINER



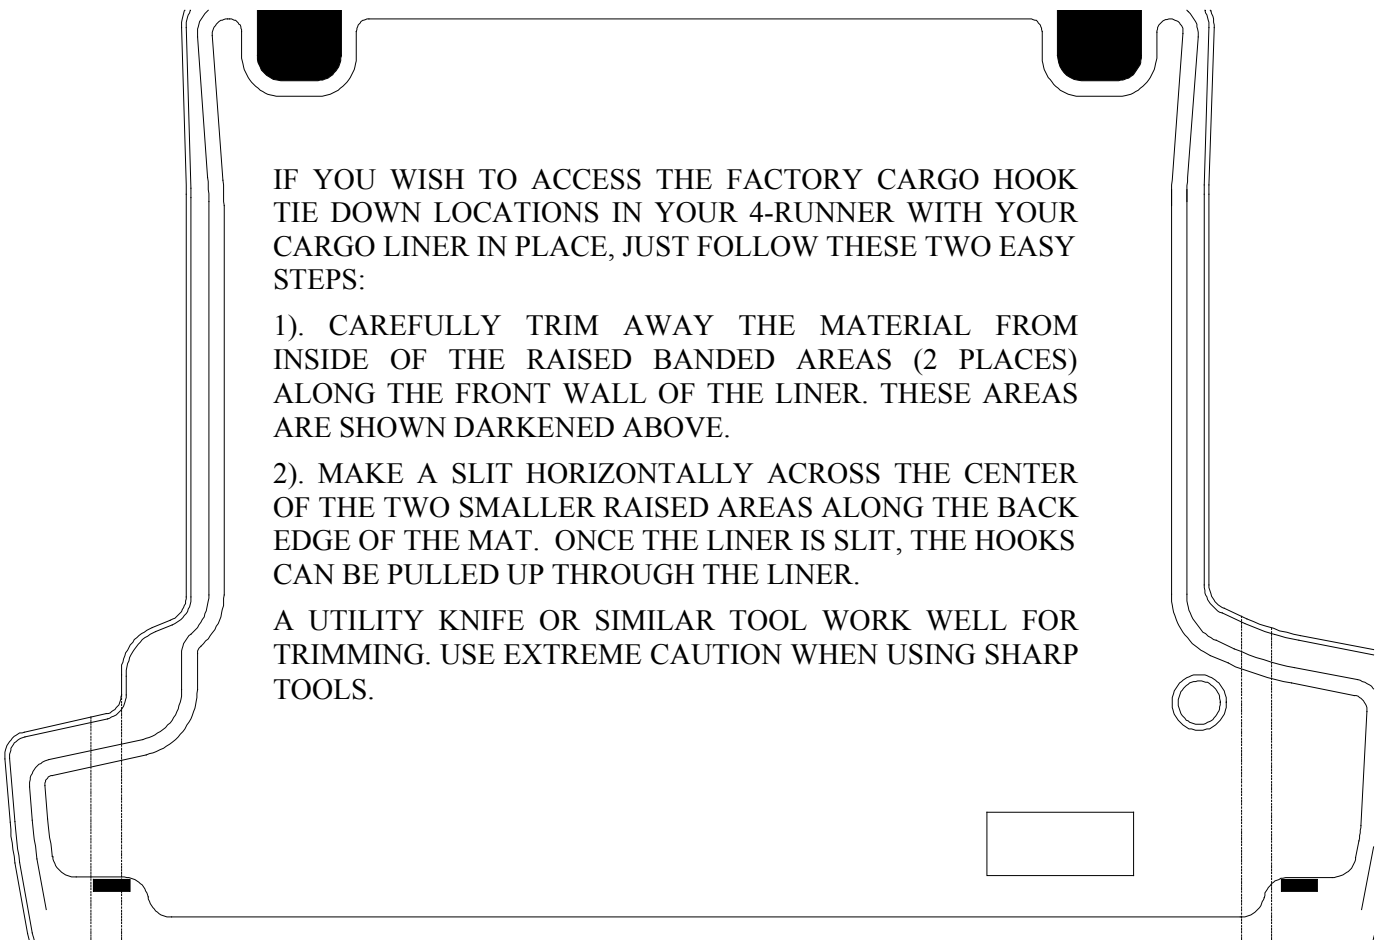
FROM WINFIELD CONSUMER PRODUCTS

CARE AND USE INSTRUCTIONS

Your new liner is custom molded to fit your vehicle. Upon removal from the box your liner will not completely unroll and lay flat. This is normal and only temporary. Just place the liner on the floor or in the back of your vehicle with a weight in each corner (a book works well). After about 15 minutes, your liner will remain flat. In colder climates this “relaxing” may take longer; moving the liner to a heated area will accelerate the process.

Your liner is manufactured using an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liner is with a damp cloth or sponge. If using a cleaner, 409[®] or Glass Plus[®] work well. Use of Armor All[®], Son-of-a-Gun[®] or similar items is discouraged as these products make the liner slick.

INSTALLATION INSTRUCTIONS FOR YOUR TOYOTA 4RUNNER CARGO LINER (WITH DOUBLE DECKER CARGO TRAY SYSTEM)

A line drawing of a rectangular cargo liner. At the top edge, there are two dark, semi-circular shapes representing raised areas. At the bottom edge, there are two small dark rectangular shapes, also representing raised areas. The text is centered within the liner's frame.

IF YOU WISH TO ACCESS THE FACTORY CARGO HOOK
TIE DOWN LOCATIONS IN YOUR 4-RUNNER WITH YOUR
CARGO LINER IN PLACE, JUST FOLLOW THESE TWO EASY
STEPS:

1). CAREFULLY TRIM AWAY THE MATERIAL FROM
INSIDE OF THE RAISED BANDED AREAS (2 PLACES)
ALONG THE FRONT WALL OF THE LINER. THESE AREAS
ARE SHOWN DARKENED ABOVE.

2). MAKE A SLIT HORIZONTALLY ACROSS THE CENTER
OF THE TWO SMALLER RAISED AREAS ALONG THE BACK
EDGE OF THE MAT. ONCE THE LINER IS SLIT, THE HOOKS
CAN BE PULLED UP THROUGH THE LINER.

A UTILITY KNIFE OR SIMILAR TOOL WORK WELL FOR
TRIMMING. USE EXTREME CAUTION WHEN USING SHARP
TOOLS.