

PART #	DESCRIPTION
21031	07-UP JEEP WRANGLER JK <u>FRONT LOWER LINK KIT</u>

COMPONENTS INCLUDED	
(2) 124039 JK FRONT LOWER FIXED LINK	(1) 21031H JK FRONT LOWER LINK HARDWARE
HARDWARE INCLUDED	
(4) 129004 SLEEVE 1.375 X .565 X 2.625 (8) 297035 URETHANE BUSHING	(4) 297039 URETHANE LOAD RING (4) 605903 1/4-28 X 90 DEG ZERK FITTING
TOOLS REQUIRED	
TORQUE WRENCH	21MM SOCKET / WRENCH 3/8" SOCKET / WRENCH
TECH NOTES	
N/A	


WARNING!


**** READ ALL INSTRUCTIONS THOROUGHLY FROM START TO FINISH BEFORE BEGINNING INSTALLATION! IF THESE INSTRUCTIONS ARE NOT PROPERLY FOLLOWED SEVERE FRAME, SUSPENSION AND TIRE DAMAGE MAY RESULT TO THE VEHICLE!**

**** ICON VEHICLE DYNAMICS RECOMMENDS THAT YOU EXERCISE EXTREME CAUTION WHEN WORKING UNDER A VEHICLE THAT IS SUPPORTED WITH JACK STANDS.**

BEGIN INSTALLATION


1. Remove stock front lower link from driver side of vehicle using (2) 21mm.
2. Hand grease bushings prior to installing. When greasing bushings, try to fill all bushing veins with grease, with minimal grease on outside and inside surfaces. Also lightly grease inside rim and both ends of bushing. Lightly grease support rings. Push bushing into bushing housing of the link, then turn over and put support ring in, then push the second bushing in. Lightly grease 1 end of the bushing sleeve and push in until flush with bushings (FIG. 1). **FAILURE TO INSTALL LOAD RING WILL HINDER PERFORMANCE AND CAUSE DAMAGE TO THE BUSHINGS.**

FIG.1

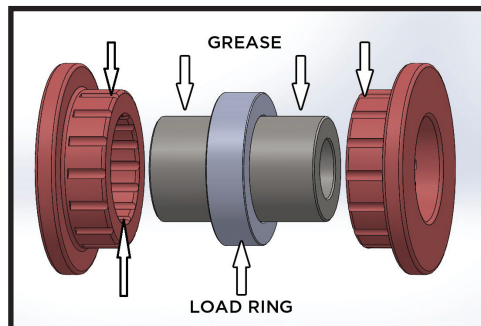

3. Install zerk fittings pointing downward on both sides of both links using a 3/8" [Tighten only until snug].
4. Install the new front lower link using a 21mm [Torque to factory spec]. The bend in the link goes inboard for added tire clearance. The bend should be closer to the axle than the frame (FIG. 2).

FIG.2

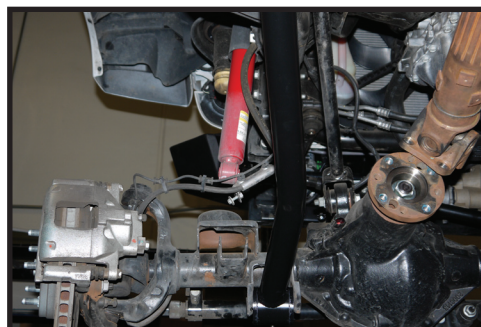

5. Repeat steps for passenger side.