

PART #	DESCRIPTION
22024	18-UP JEEP JL REAR UPPER LINK KIT

COMPONENTS INCLUDED	
(2) 124063 18-UP JEEP JL REAR UPPER LINK	
HARDWARE INCLUDED	
N/A	
TOOLS REQUIRED	
TORQUE WRENCH	21MM SOCKET / WRENCH
TECH NOTES	
1. THE ICON REAR UPPER LINKS ARE LONGER THAN THE FACTORY LINKS WHICH WILL AFFECT PINION ANGLE.	



WARNING!
** READ ALL INSTRUCTIONS THOROUGHLY FROM START TO FINISH BEFORE BEGINNING INSTALLATION! IF THESE INSTRUCTIONS ARE NOT PROPERLY FOLLOWED SEVERE FRAME, SUSPENSION AND TIRE DAMAGE MAY RESULT TO THE VEHICLE!
** ICON VEHICLE DYNAMICS RECOMMENDS THAT YOU EXERCISE EXTREME CAUTION WHEN WORKING UNDER A VEHICLE THAT IS SUPPORTED WITH JACK STANDS.
** ICON VEHICLE DYNAMICS RECOMMENDS ALL INSTALLATION TO BE PERFORMED BY A PROFESSIONAL SHOP/SERVICE TECHNICIAN. PRODUCT FAILURE CAUSED BY IMPROPER INSTALLATION WILL NOT BE COVERED UNDER ICON'S WARRANTY POLICY.

INSTALLATION

1. Place the vehicle on a smooth, level surface. Ensure that the vehicle is in PARK, engage the emergency brake, and chock the tires before performing any work to the vehicle. ICON will not be held liable for any injuries or failure caused by improper installation.
2. Remove the rear driver's side upper link using a 21mm socket/wrench. [FIGURE 1 & 2]

FIG.1

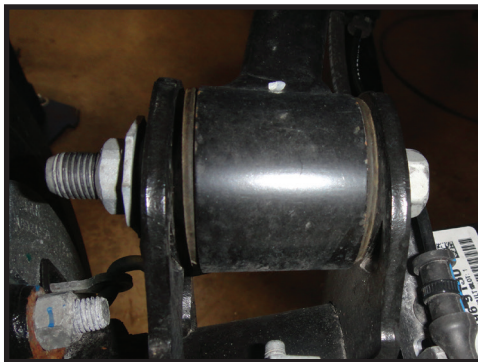


FIG.2



3. Install the ICON link on driver's side using the factory hardware and a 21mm socket/wrench. Note that the bend is not centered on the tube. Place the bend in the link towards the differential and the center of the vehicle to increase tire clearance. [Torque to factory spec] [FIGURE 3]



FIG.3

4. Repeat steps on the opposite side of the vehicle.

VERIFY ALL FASTENERS ARE PROPERLY TORQUED BEFORE DRIVING VEHICLE.

RETORQUE ALL NUTS, BOLTS AND LUGS AFTER 100 MILES AND PERIODICALLY THEREAFTER.