

# INTRO-TECH AUTOMOTIVE

## HOW TO INSTALL YOUR CUSTOM GOLD AUTO SHADE™



STEP 1: Unroll the CUSTOM GOLD AUTO SHADE™ across dash, gold reflective material facing out. Make sure the CUSTOM GOLD AUTO SHADE™ is centered in the windshield and placed down, where the glass meets dash.




STEP 2: Tuck the CUSTOM GOLD AUTO SHADE™ behind rear view mirror, if mounted on windshield.



STEP 3: Lift the CUSTOM GOLD AUTO SHADE™ against glass. Adjust the CUSTOM GOLD AUTO SHADE™ in windshield, may overlap slightly with side windshield frame (A-pillars) and headliner.



STEP 4: Lower sun visors for support. OPTION: When reversed in winter, the CUSTOM GOLD AUTO SHADE™ functions as an insulator.

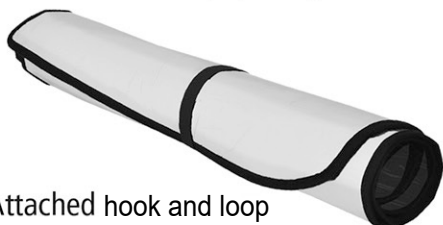

Attached hook and loop fastener strap



[View other windshield sun shades and snow covers made by Intro-Tech Automotive on our website.](#)