





**PRE-INSTALLATION INFORMATION**

**Estimated Time** 45 minutes  
**Tools Needed** Philips Screwdriver  
M4 Allen Wrench  
M8 Socket Wrench

**In the Box**

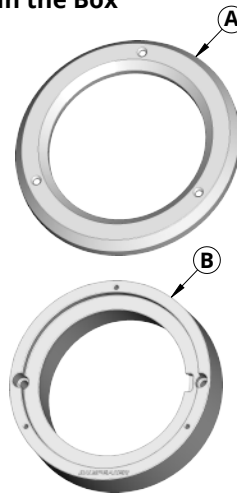

(x2) Model 6045 Fog Lights  
(in black **OR** chrome)  
(x1) Adapter Kit containing:  
**A** (x2) Chrome Bezel  
**B** (x2) Adapter Bracket  
**C** (x4) M5 x 35 SS Bolts  
**D** (x8) M5 x 0.8 Lock Nuts  
**E** (x4) Flat Washers  
**F** (x6) 6-18x1.50" Philips Screws

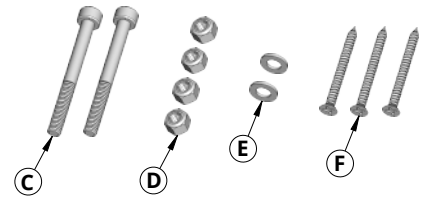

**Wire Functions** Black = Ground  
Red = Power  
**Input Voltage** 12V DC  
**Operating Voltage** 9-15V DC

**Regulatory Compliance**



**Pre-Installation Guidelines**

1. Read all safety notes and mounting guidelines before installing the product. Verify that all parts listed under "In the Box" are present and complete.
2. Inspect the product for damage. **DO NOT** install the product if there is any damage. Contact the authorized retailer where you purchased it to initiate a warranty claim if there is damage.
3. Verify that all power supply and/or charging systems comply to the specified voltage limits for the light.

**PRODUCT WARRANTY:**  
**If you have issues with a J.W. Speaker product, please contact the authorized retailer where you purchased it.**

To properly install this light you should have a good understanding of automotive electrical procedures and systems, and proficiency in the installation of fog lights. If you do not, please seek professional assistance.

**INSTRUCTIONS BEGIN ON THE NEXT PAGE**

## Installation Instructions

1. Disconnect the existing fog lamp, then uninstall any hardware that is attaching the fog lamp to the vehicle.

---

2. Insert the two, M5 x 35 Bolts from the front of the adapter bracket. Place the two M5 lock nuts in the corresponding pockets on the back of the bracket and tighten with a M4 Allen wrench

3. Mark and drill holes at the 3:00 and 9:00 position in the bumper cavity to align with the two M5 x 35 bolts.

4. Align the adapter bracket (with the J.W. Speaker logo in the 6:00 position) from the front of the bumper cavity, then attach the adapter bracket to the bumper by putting the flat washers, then the second set of lock nuts to the bolts on the back of the bumper.

5. Tighten the lock nuts using a M8 Socket Wrench.

---

6. From the front of the bumper, Insert the new fog light and immediately align the chrome bezel over it. Align the three holes on the chrome bezel with the matching holes on the adapter bracket.

7. Attach the chrome bezel to the adapter bracket using the three Philips screws provided.

8. Using the Wiring Information, connect the new fog light to the vehicle.

9. Repeat steps 1-8 on the other fog light.

