




INSTALLATION INSTRUCTIONS

PART No. 30432

MODEL No.

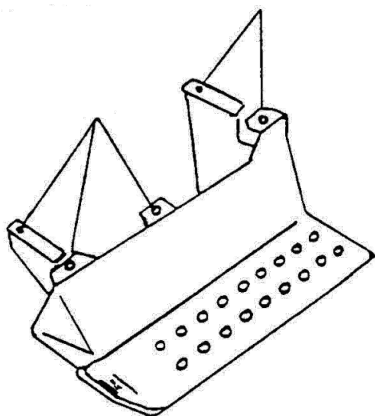

FRONT SIDE


- A.** Use 5/16 – 18NC x 1 1/4" Long Hex Bolts, Hex Nuts, & Flat washers (3 required).
- B.** Use 5/16 – 18NC x 1" Long Hex Bolts, Hex Nuts, & Flat Washers (2 required).



INSTALLATION INSTRUCTIONS

PART No. 30432

MODEL No.

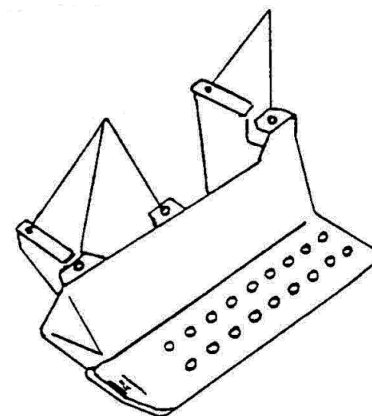

FRONT SIDE

- A.** Use 5/16 – 18NC x 1 1/4" Long Hex Bolts, Hex Nuts, & Flat washers (3 required).
- B.** Use 5/16 – 18NC x 1" Long Hex Bolts, Hex Nuts, & Flat Washers (2 required).