

INSTALLATION INSTRUCTIONS AND PARTS LIST

APPLICATION:

MODEL 401111 STEP BRACKETS:

1999 GM SILVERADO & SIERRA REGULAR CAB PICKUPS



1. READ INSTRUCTIONS COMPLETELY AND CHECK TO MAKE SURE THAT ALL REQUIRED PARTS (LISTED ON SERVICE PARTS LIST) ARE ON HAND BEFORE STARTING THE INSTALLATION.
2. ASSEMBLE THE LOAD REACTION STUDS AND HARDWARE (ITEM #5 THRU #8) AS FOLLOWS.
 - 2.1. ON THE SHORT THREADED END OF THE LOAD REACTION STUD (ITEM #8), INSTALL A BLACK 3/8" SERRATED FLANGE NUT (ITEM #7) BACKWARDS TO THE BOTTTOM OF THE THREAD. THEN, INSTALL A BLACK 3/8" FLAT WASHER (ITEM #6) AND RUBBER "CUSHION" WASHER (ITEM #5) TIGHT UP AGAINST THE SERRATED FLANGE NUT. (THE END OF THE STUD MUST BE RECESSED IN THE RUBBER WASHER APPOX. 3/16").
 - 2.2. ON THE LONG THREADED END OF THE STUD, INSTALL A BLACK 3/8" SERRATED FLANGE NUT (ITEM #7) BACKWARDS TO THE BOTTTOM OF THE THREADS
3. ATTACH THE LOAD REACTION STUD ASSEMBLIES TO THE BODY MOUNTING BRACKETS AS SHOWN.

NOTE: IF YOU ARE MOUNTING THE STEPS ON A 1500 MODEL PICKUP, YOU MUST ATTACH BRACKET (ITEM #9) TO BRACKETS (ITEM #1 & 2) (SEE FIG 2.) IN ORDER TO USE THE LOAD REACTION STUD.

- 3.1. INSERT THE STUD, FROM THE INBOARD SIDE OF THE BRACKET THRU THE LOWEST HOLE IN THE BENT FLANGE THAT WILL ALLOW THE RUBBER WASHER TO SEAT FIRM AGAINST THE SIDE WALL OF THE FRAME. INSTALL A BLACK FLANGE NUT (ITEM #7) ON THE OUTBOARD END OF THE STUD (FINGER TIGHT ONLY).

NOTE:

DUE TO EXCESSIVE THREAD LOCKER IN THE BODY MOUNT BOLT AREA ON THE 2010+ GM SILVERADO/SIERRA, USE CAUTION WHEN REMOVING THE BODY MOUNT BOLTS TO REDUCE THE RISK OF CAUSING DAMAGE TO THE THREADED INSERTS INSIDE THE VEHICLE.

4. REMOVE THE FACTORY FRONT, AND REAR BODY MOUNT BOLTS (ONE SIDE OF THE VEHICLE AT A TIME) AND INSTALL THE MOUNTING BRACKETS PER THE FOLLOWING INSTRUCTIONS.
 - 4.1. INSTALL THE FRONT MTG BRKT (ITEM #1 & #2) TO THE FRONT CAB MOUNT AS SHOWN (LEAVE THESE FASTENERS FINGER TIGHT).
 - 4.2. INSTALL THE REAR MTG BRKT (ITEM #3 & #4) TO THE REAR CAB MOUNT AS SHOWN (LEAVE THESE FASTENERS FINGER TIGHT).
5. ATTACHING THE STEP ASSEMBLY:
PLEASE REVIEW THE INSTALLATION INSTRUCTIONS THAT ARE INCLUDED IN YOUR STEP ASSEMBLY FOR SPECIFIC DETAILS.

TIGHTEN THE BODY MOUNT BOLTS PER MANUFACTURERS SPECS.
TIGHTEN ALL REMAINING 3/8" BOLTS/NUTS TO 19 LB FT.



REV A 05MAR12
551972 SHEET 1 OF 3 08AUG11

INSTALLATION INSTRUCTIONS AND PARTS LIST

APPLICATION:

MODEL 401111 STEP BRACKETS:

1999 GM SILVERADO & SIERRA REGULAR CAB PICKUPS

SERVICE PARTS LIST

ITEM	PART NO.	QTY	DESCRIPTION
PARTS INCLUDED IN BRACKET PACKAGE			
1	551868	1	BRACKET-MTG, CAB, FRONT, LH, 401111
2	551869	1	BRACKET-MTG, CAB, FRONT, RH, 401111
3	551870	1	BRACKET-MTG, CAB, REAR, LH, 401111
4	551871	1	BRACKET-MTG, CAB, REAR, RH, 401111
5	102592	4	WSHR, RUBBER, .354 ID X 1.00 OD X .75 THK
6	106962	4	WSHR, FL, 3/8", .438 ID X 1.00 OD X .083" THK, BZP
7	106995	12	NUT, SERR FLG, HEX, 3/8-16 UNC, BZP
8	106960	4	STUD, -DBL ENDED, STL, 3/8-16 X 4.50", BZP
9	551571	2	BRKT, 90 DEGREE, 3 HOLES
10	106997	2	SCREW, HHC, 5/16-18X1.00, BZP
11	106996	2	NUT-SERR FLG, 5/16-18, BZP
12	106998	2	WSHR-FL, SST, 5/16", BZP




REV A 05MAR12
551972 SHEET 1 OF 3 08AUG11

SERVICE PARTS LIST

MODEL NO. -401111

FIG. 2

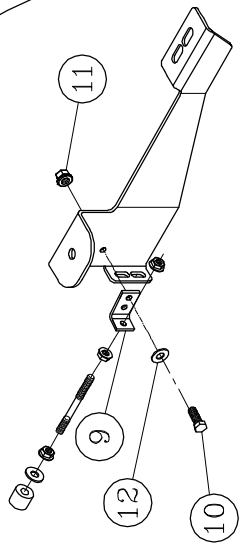


MOUNTING INSTRUCTIONS
FOR THE FRONT BRACKET.
1500 APPLICATIONS

#9-12 ARE USED
ON 1500 MODELS ONLY

FRONT

POSITION RUBBER
WASHER AGAINST
SIDE OF FRAME

FIG. 1

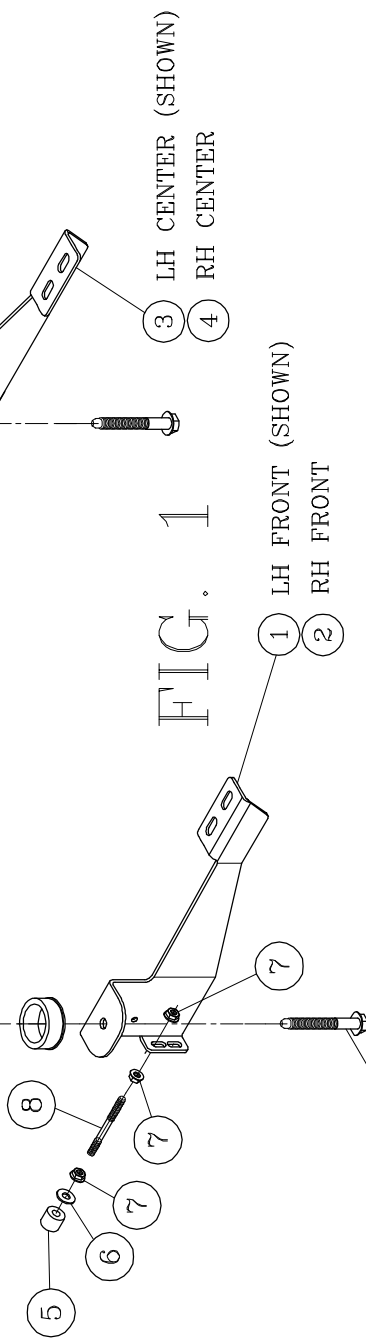

LOVERNE
LIGHT EQUIPMENT

LEFT (DRIVER) SIDE SHOWN
-RIGHT (PASSENGER) SIDE OPPOSITE-

REV A 05MAR12

551972 SHEET 3 OF 3 08AUG11