

## INSTALLATION INSTRUCTIONS AND PARTS LIST

APPLICATION: MODEL 571339/401339 W2W MEGA/GRIP [STEP BRACKETS](#)  
ON: 2013-2015 RAM 3500 PICKUPS



1. READ INSTRUCTIONS COMPLETELY AND CHECK TO MAKE SURE THAT ALL REQUIRED PARTS (LISTED ON SERVICE PARTS LIST) ARE ON HAND BEFORE STARTING THE INSTALLATION.

**NOTE: FOR REGULAR CAB PICKUPS ONLY THE FRONT AND REAR CAB MOUNTING BRACKETS ARE USED, THE CENTER MOUNTING BRACKET AND FASTENERS MAY BE DISCARDED.**

2. ASSEMBLE THE LOAD REACTION STUDS AND HARDWARE AS FOLLOWS.

**NOTE: USE A 4" STUD (ITEM #18) FOR THE FRONT BRACKET AND A 3" STUD (ITEM #17) FOR THE REAR BRACKETS.**

- 2.1. ON THE SHORT THREADED END OF THE LOAD REACTION STUD (ITEM #17, 18), INSTALL A 3/8" SERRATED FLANGE NUT (ITEM #16) BACKWARDS TO THE BOTTTOM OF THE THREAD. THEN INSTALL A 3/8" FLAT WASHER (ITEM #15) AND RUBBER "CUSHION" WASHER (ITEM # 14) TIGHT UP AGAINST THE SERRATED FLANGE NUT. (THE END OF THE STUD MUST BE RECESSED IN THE RUBBER WASHER APPROX. 3/16").
- 2.2. ON THE LONG THREADED END OF THE STUD, INSTALL A 3/8" SERRATED FLANGE NUT (ITEM # 16) BACKWARDS TO NEAR TO THE BOTTTOM OF THE THREADS
3. ATTACH THE LOAD REACTION STUD ASSEMBLIES TO THE MOUNTING BRACKETS AS SHOWN. INSERT THE STUD, FROM WHAT WILL BE THE INBOARD OR FRAME SIDE THRU THE LOWEST HOLE IN THE BENT FLANGE OF THE BRACKET THAT WILL ALLOW THE RUBBER WASHER TO SEAT FIRM AGAINST THE SIDE WALL OF THE FRAME. INSTALL A FLANGE NUT (ITEM #16) ON THE OUTBOARD END OF THE STUD (FINGER TIGHT ONLY).
4. ON THE RIGHT SIDE OF THE VEHICLE, REMOVE THE FACTORY FRONT, CENTER, AND REAR BODY MOUNT BOLTS (ONE SIDE OF THE VEHICLE AT A TIME), THESE WILL NOT BE REUSED. INSTALL THE MOUNTING BRACKETS PER THE FOLLOWING INSTRUCTIONS:
  - 4.1. USING A M12 – 110MM BOLT (ITEM #11) AND A 2.0" WASHER (ITEM #13) INSTALL THE FRONT MOUNTING BRACKET (ITEM #1, 2) TO THE FRONT BODY MOUNT AS SHOWN (LEAVE THESE FASTENERS FINGER TIGHT).
  - 4.2. USING A M12 – 110MM BOLT (ITEM #11) AND A 2.0" WASHER (ITEM #13) INSTALL THE CENTER MOUNTING BRACKET (ITEM #3, 4) TO THE CENTER BODY MOUNT AS SHOWN (LEAVE THESE FASTENERS FINGER TIGHT).
  - 4.3. USING A M12 – 116MM BOLT (ITEM #12) AND A ½" FLAT WASHER (ITEM #20) INSTALL THE REAR MOUNTING BRACKET (ITEM #5, 6) TO THE REAR BODY MOUNT AS SHOWN (LEAVE THESE FASTENERS FINGER TIGHT). **NOTE: THE ORIENTATION OF THE REAR BRACKET WILL BE DIFFERENT BETWEEN THE REG/QUAD/CREW CAB PICKUPS AND THE MEGA CAB PICKUPS. IF INSTALLING ON A REG/QUAD/CREW CAB PICKUP REFER TO FIG. 1, IF INSTALLING ON A MEGA CAB PICKUP REFER TO FIG. 2.**
  - 4.4. ATTACH THE REAR OUTBOARD MOUNTING BRACKET (ITEM #7, 8) TO THE REAR INBOARD MOUNTING BRACKET (ITEM #5, 6) IN THE UPPER MOUNTING LOCATION, USING THREE 3/8-16 X 1.0" SCREW, 3/8" FLAT WASHERS AND 3/8" FLANGE NUTS. (ITEMS #15, 16, 19).

5. ATTACH THE MOUNTING BRACKETS TO THE SHACKLE MOUNT OF THE VEHICLE AS FOLLOWS.
  - 5.1. ATTACH THE UPPER MOUNTING BRACKET (ITEM #9) TO THE SIDE OF THE LEAF SPRING SHACKLE BY LOOSENING THE BOLT THAT FASTENS THE LEAF SPRING TO THE VEHICLE. SLIDE THE UPPER MOUNTING BRACKET (ITEM #9) BETWEEN THE BOLT HEAD AND THE FRAME BRACKET, THEN PLACE A 3/8 BOLT AND WASHER (ITEM #15, 19) THROUGH THE HOLE IN THE UPPER MOUNTING BRACKET (ITEM #9) AND FRAME BRACKET THEN FASTEN WITH A 3/8" SERRATED FLANGE NUT (ITEM #16). TIGHTEN THE LEAF SPRING BOLT MAKING SURE THAT THE UPPER MOUNTING BRACKET (ITEM #9) IS LEVEL.
  - 5.2. FASTEN THE LOWER BRACKET (ITEM #10) TO THE UPPER BRACKET (ITEM #9) USING A 3/8" BOLT, WASHER, AND FLANGE NUT (ITEMS #15, 16, 19) USING THE TWO LOWER HOLES IN THE UPPER BRACKET MAKING SURE THAT IT SITS LEVEL TO THE FRONT BRACKETS.
6. ATTACH THE STEP PLATE PER THE INSTRUCTIONS INCLUDED WITH YOUR STEP PLATE ASSEMBLY.
7. POSITION THE LOAD REACTION STUD ASSY SO THAT THE RUBBER CUSHION IS SNUG UP AGAINST THE SIDE OF THE FRAME. TIGHTEN THE 3/8" FLANGE NUTS ON EITHER SIDE OF THE BRACKET TO 19LB. FT.


## SERVICE PARTS LIST

| ITEM | PART NO. | QTY | DESCRIPTION                                     |
|------|----------|-----|-------------------------------------------------|
| 1    | 552850   | 1   | BRKT-MTG, MS, FRONT, LH, BODY MOUNT             |
| 1    | 552862   | 1   | BRKT-MTG, GRIP, FRONT, LH, BODY MOUNT           |
|      |          |     |                                                 |
| 2    | 552851   | 1   | BRKT-MTG, MS, FRONT, RH, BODY MOUNT             |
| 2    | 552863   | 1   | BRKT-MTG, GRIP, FRONT, RH, BODY MOUNT           |
|      |          |     |                                                 |
| 3    | 552852   | 1   | BRKT-MTG, MS, CENTER, LH, BODY MOUNT            |
| 3    | 552864   | 1   | BRKT-MTG, GRIP CENTER, LH, BODY MOUNT           |
|      |          |     |                                                 |
| 4    | 552853   | 1   | BRKT-MTG, MS, CENTER, RH, BODY MOUNT            |
| 4    | 552865   | 1   | BRKT-MTG, GRIP, CENTER, RH, BODY MOUNT          |
|      |          |     |                                                 |
| 5    | 552854   | 1   | BRKT-MTG, REAR, LH, INBOARD, BODY MOUNT         |
|      |          |     |                                                 |
| 6    | 552855   | 1   | BRKT-MTG, REAR, RH, INBOARD, BODY MOUNT         |
|      |          |     |                                                 |
| 7    | 552856   | 1   | BRKT-MTG, MSREAR, LH, OUTBOARD                  |
| 7    | 552868   | 1   | BRKT-MTG, GRIP, REAR, LH, OUTBOARD              |
|      |          |     |                                                 |
| 8    | 552857   | 1   | BRKT-MTG, MS, REAR, RH, OUTBOARD                |
| 8    | 552869   | 1   | BRKT-MTG, GRIP, REAR, RH, OUTBOARD              |
|      |          |     |                                                 |
| 9    | 551809   | 2   | BRKT-MTG, MS, W2W, LH/RH, UPPER                 |
| 9    | 552147   | 2   | BRKT-MTG, GRIP, W2W, LH/RH, UPPER               |
|      |          |     |                                                 |
| 10   | 551721   | 2   | BRKT-MTG, MS, W2W, LH/RH, LOWER                 |
| 10   | 552125   | 2   | BRKT-MTG, GRIP, W2W, LH/RH, LOWER               |
|      |          |     |                                                 |
| 11   | 103444   | 4   | SCREW-HEX HEAD, M12 – 1.75 X 110MM, ZP          |
| 12   | 109451   | 2   | SCREW-HEX HEAD, M12 – 1.75 X 160MM, YZP         |
| 13   | 105909   | 4   | WSHR-FLAT, 2.0 X .509 X .179, ZP                |
| 14   | 102592   | 6   | WSHR, RUBBER, .354 ID X 1.00 OD X .75 THK       |
| 15   | 100062   | 18  | WSHR, FLAT, 3/8", .438 ID X 1.00 OD X .083" THK |
| 16   | 100181   | 30  | NUT, SERR FLG, HEX, 3/8-16 UNC, ZP              |
| 17   | 104697   | 4   | STUD, STL, 3/8-16 X 3.00", ZP                   |
| 18   | 104686   | 2   | STUD, -DBL ENDED, STL, 3/8-16 X 4.00", ZP       |
| 19   | 100040   | 12  | SCR-HEX HD, 3/8-16 X 1.0" UNC, ZP               |
| 20   | 100118   | 2   | WASHER, FLAT, 1/2" ZP                           |

SERVICE PARTS LIST

MODEL NO. -571339/401339

# FIG. 1 CREW/QUAD CAB

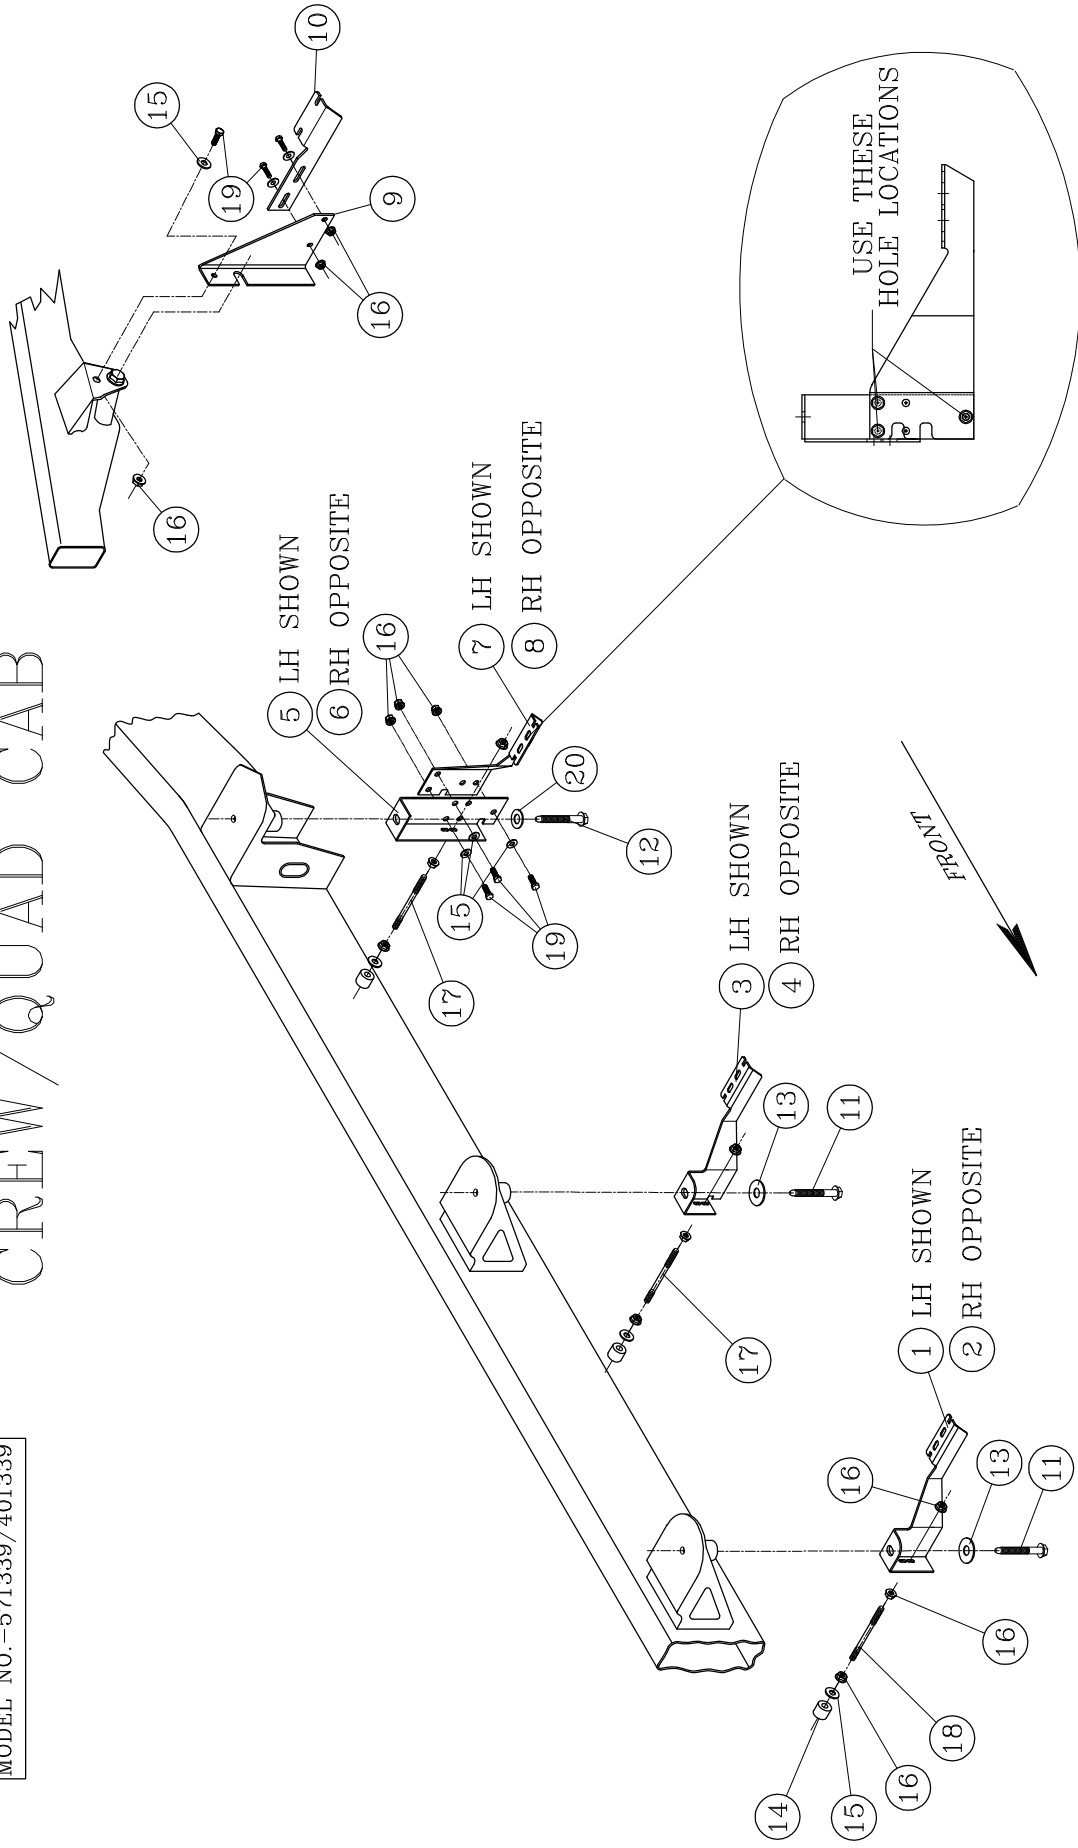


LEFT (DRIVER) SIDE SHOWN

LEFT (DRIVER) SIDE SHOWN  
-RIGHT (PASSENGER) SIDE OPPOSITE-

# SERVICE PARTS LIST

MODEL NO. -571339/401339

## FIG. 2 MEGA CAB PICKUPS

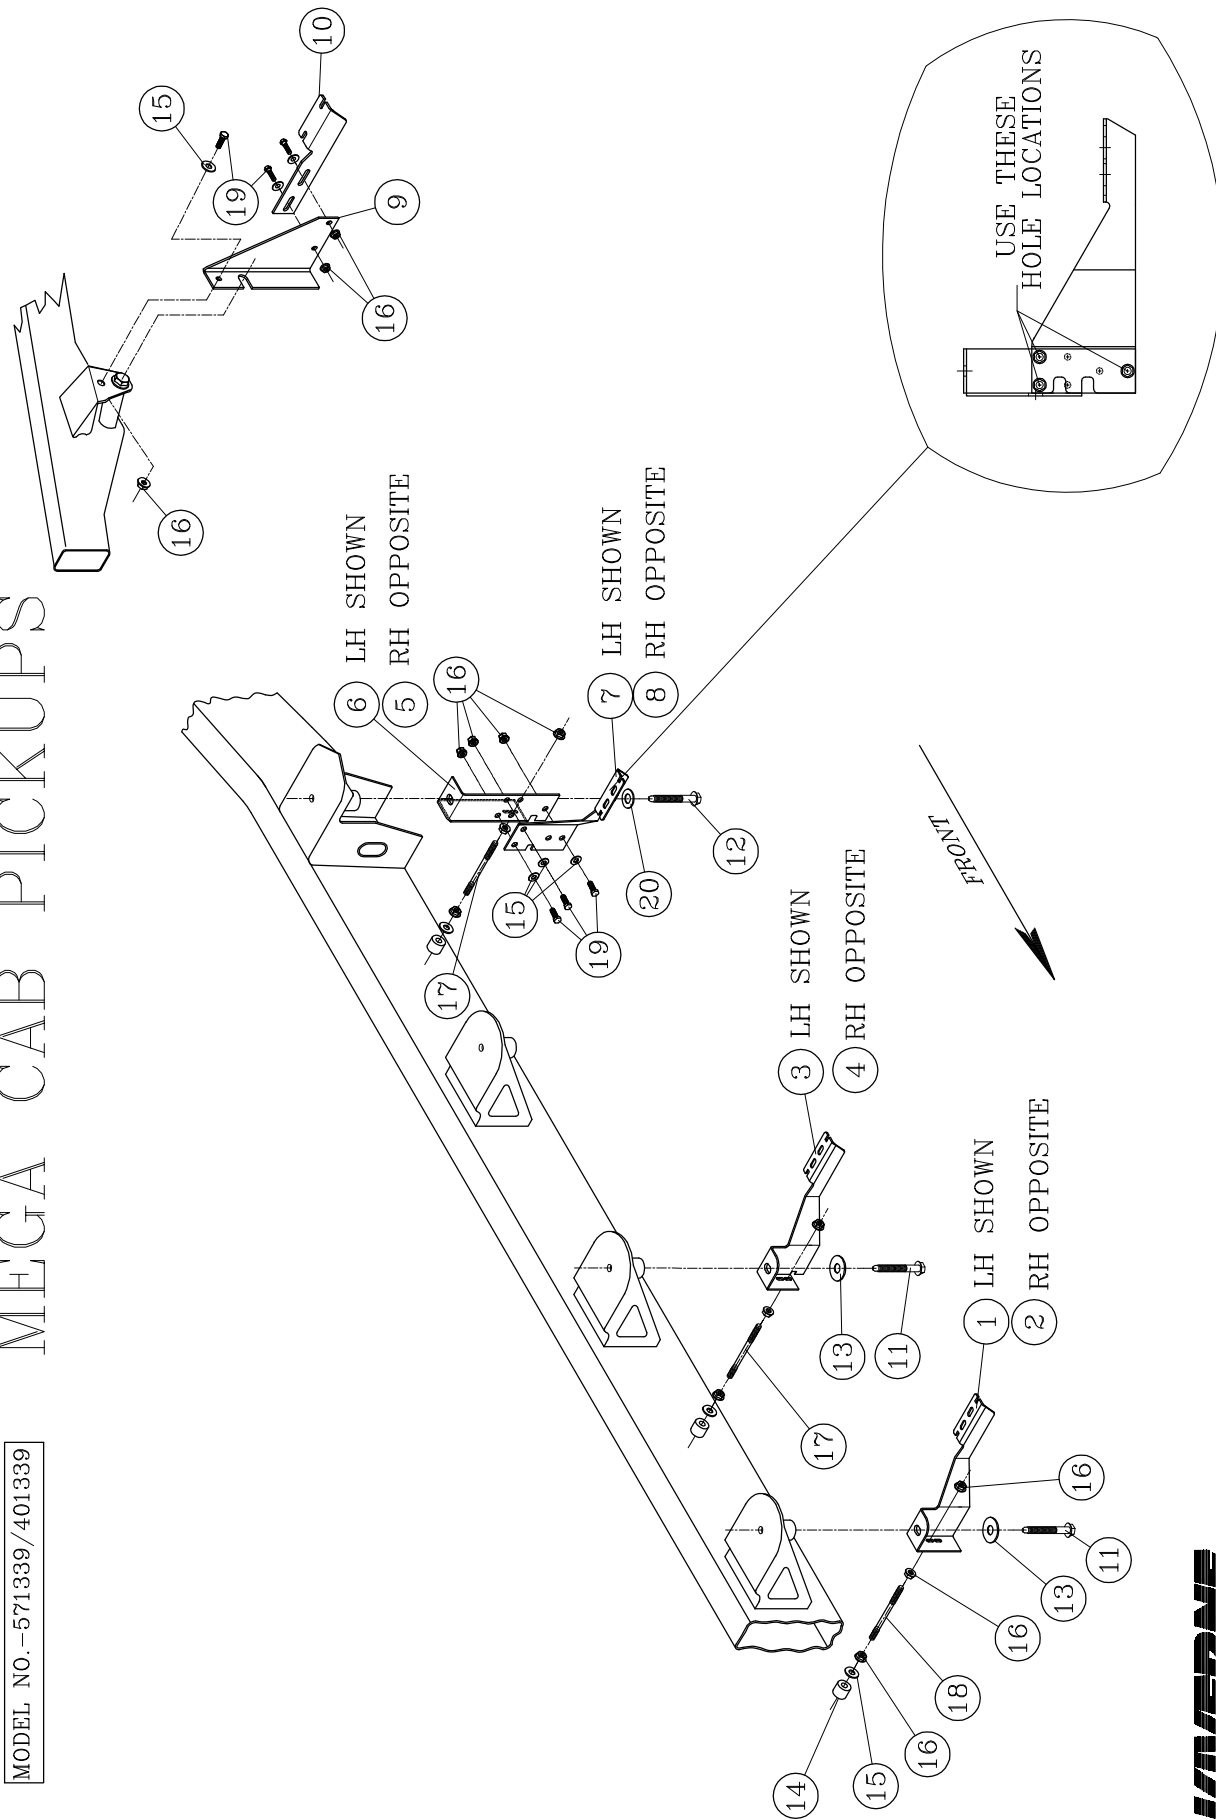

LEFT (DRIVER) SIDE SHOWN  
-RIGHT (PASSENGER) SIDE OPPOSITE-

**LIVERNE**  
A LIVERNE COMPANY  
1200 E. 20th St.  
Plymouth, MI 48170