


# S5512

1997-1999 JEEP WRANGLER (TJ),  
2.5L I-4 & 4.0L I-6, CAT BACK  
SINGLE SIDE



**PERFORMANCE EXHAUST**

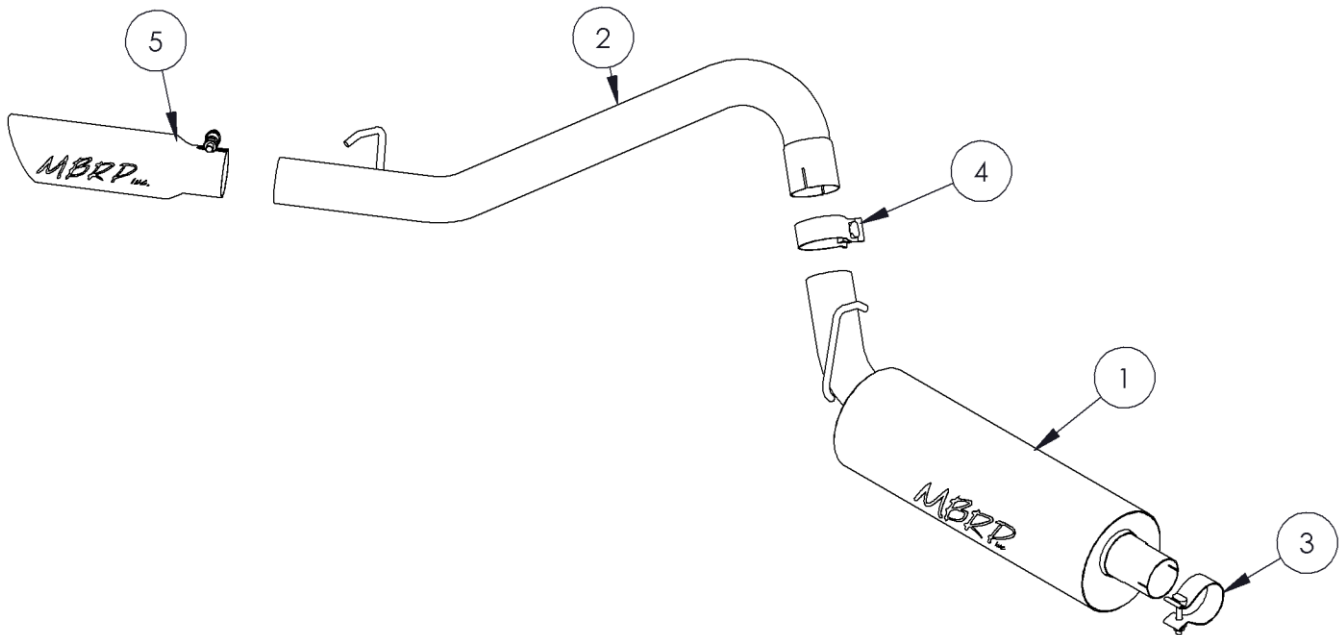

1. MUFFLER
2. TAIL PIPE
3. 2 1/4" BAND CLAMP (SADDLE CLAMP IN ALUMINIZED SYSTEM)
4. 2 1/2" BAND CLAMP (SADDLE CLAMP IN ALUMINIZED SYSTEM)
5. EXHAUST TIP

## PLEASE READ BEFORE STARTING INSTALLATION

While MBRP Inc. has made every effort to ensure that all components of this system are of superior quality and properly packaged, it is the installer's responsibility to ensure the following before removal of the factory exhaust:

- that ALL components shown above are present.
- that ALL mating components fit together.
- that there are no damaged components.
- that the system you have purchased is appropriate for your vehicle year, model and configuration.
- that the system will not interfere with any modifications previously installed or planned.
- that you have read and understand these instructions.

If you have any questions or are uncertain about any aspect of the installation of this system to your vehicle please contact your dealer before commencing installation.

## 1997-1999 Jeep Wrangler (TJ)


### Removal of stock system:



**Figure 1**

1. Apply a penetrating lubricant liberally to all exhaust fasteners, hangers and rubber insulators.

2. Cut the exhaust pipe after the muffler to be able to remove it from the vehicle. **Refer to Figure 1.**

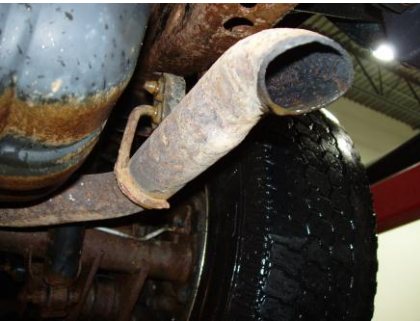

**Figure 2**

3. Remove the tail section of the exhaust by removing it from the rubber insulators. **Refer to Figure 2.**

4. Remove the clamp at the rear of the catalytic converter and remove the muffler from the vehicle.

**Installation of MBRP Inc. Performance Exhaust:**



**Figure 3**

1. Install the **Muffler** to the catalytic converter using the **2 ¼” Clamp**. Slide the **Muffler** hanger into the existing rubber isolator.

2. Slide a **2 ½” Clamp** over the **Muffler** outlet then install the **Tail Pipe** to the **Muffler**. Install the **Tail Pipe** hanger into the existing rubber isolator. **Refer to Figure 3.**



**Figure 4**

3. Install and adjust the **Exhaust Tip** to suit. Tighten the lock bolt located on the **Exhaust Tip**. **Refer to Figure 4.**

4. Align the exhaust as required. Starting at the front of the exhaust, tighten all clamps and connections.

5. Check along the whole length of the exhaust system to ensure that there is adequate clearance around the spare tire, fuel and brake lines or any wiring. If any interference is detected relocate or adjust.



**Congratulations!** You are ready to begin experiencing the improved power, sound and driving experience of your MBRP Inc. performance exhaust system. We know you will enjoy your purchase.