




# 72-5602


## INSTALLATION INSTRUCTIONS

### 2010-up

### Ford/Mazda speaker

### connector

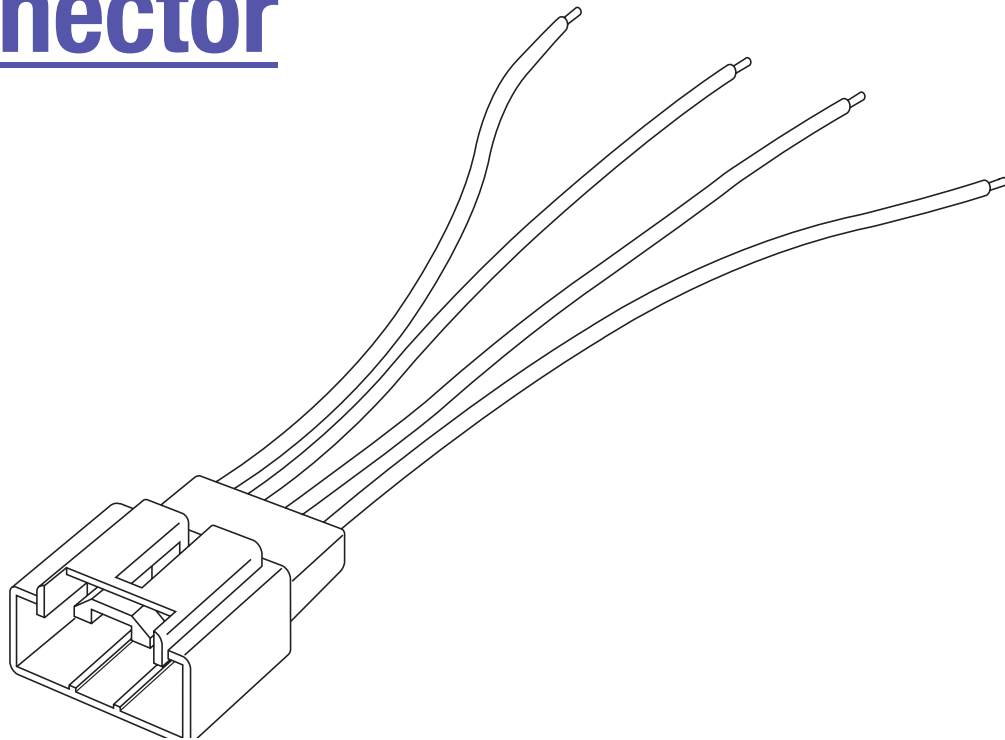

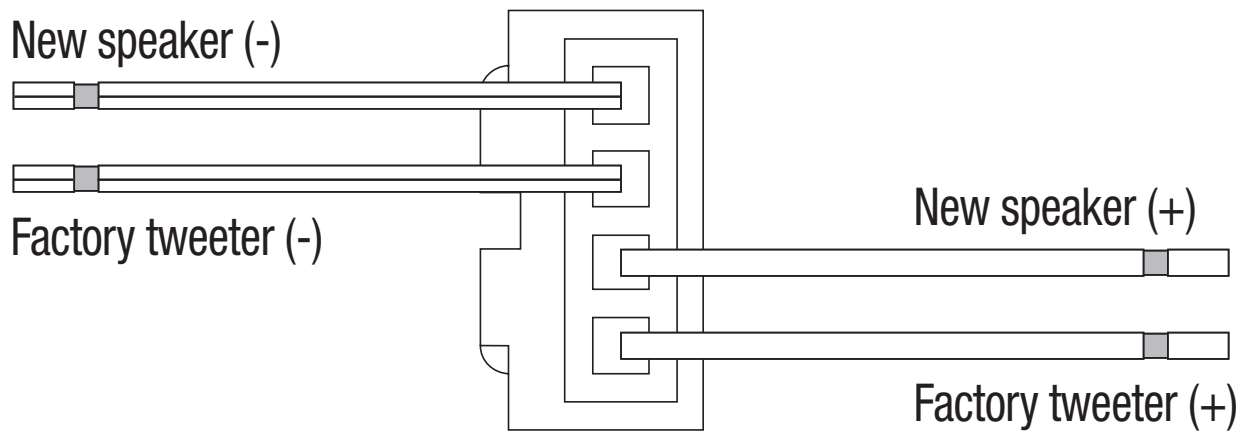

There are four wires in this plug. The factory tweeter wiring is included. The factory tweeter is protected with a capacitor. If you intend to retain the factory tweeter, connect solid white wires together and connect to the positive terminal of the replacement speaker. Connect white/ black wires together and connect to the negative terminal on the replacement speaker.