




THE AUTOMOTIVE LIGHTING BENCHMARK

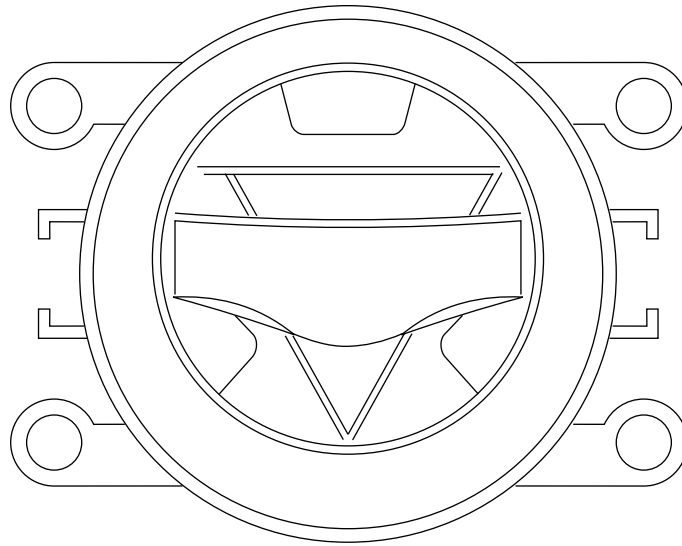

INSTALLATION GUIDE

# XB LED FOG LIGHTS




**WARNING:** By reading this document, I agree it is only to be used as an educational guide. Morimoto Lighting makes no guarantee on any finished results, nor are they to be held responsible for any damage, misuse, or personal injuries. Use at your own risk. If you are unable to clearly understand and adapt the information below to your own application, professional installation is recommended.


## CONNECTOR IDENTIFICATION

Your Morimoto XB LED fog lights will come with one of the following connector types:


H11 / H9 / H8  
Male



9005 / 9006 /  
H10 Male



5202 / PSX24W  
Male

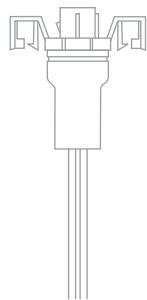


## A NOTE ABOUT WIRING


For the H11 / H9 / H8 Male and 9005 / 9006 / H10 Male connectors, they do not come pre-installed in the plastic connector housing because the fog light wiring polarity varies with these types.

Test the bare pins in the stock fog light connector to ensure the light works first, then insert the pins into the plastic connector housing in the same orientation to complete the wiring of your new fog lamps.


## OPTIONAL LAMIN-X FILM INSTALLATION

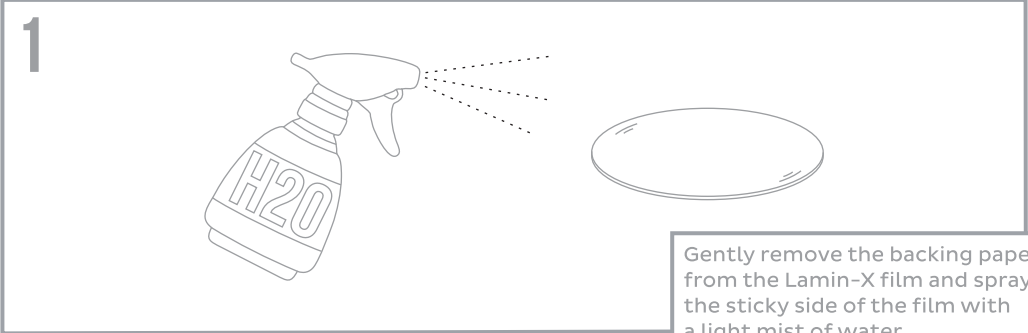- 

1

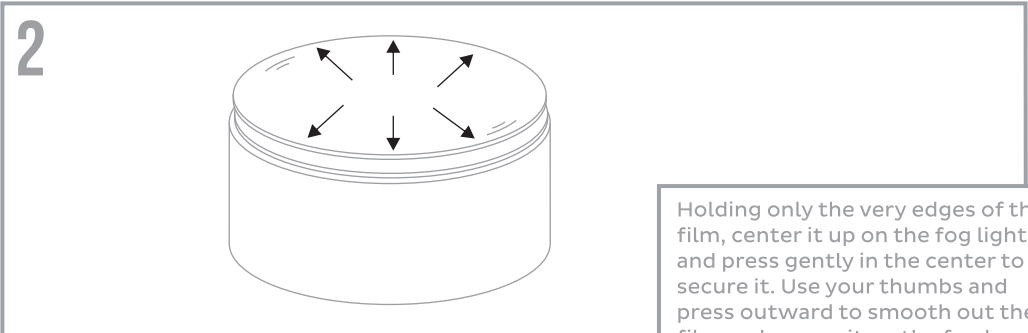Gently remove the backing paper from the Lamin-X film and spray the sticky side of the film with a light mist of water.
- 

2

Holding only the very edges of the film, center it up on the fog light and press gently in the center to secure it. Use your thumbs and press outward to smooth out the film and secure it on the fog lamp.
- 

3

If necessary, use a blow dryer to heat the Lamin-X up slightly and press any lifting areas as needed.