Hardware included shown on right.

Tools required:

- 1/2" socket
- 1/2" wrench
- 3/8" Nut driver on Drill
- Tape measure

NO DRILLING INTO VEHICLE IS REQUIRED!



NOTE CREW CAB SHOWN IN PHOTOS!

1)



Measure from front wheel well back and :
Std Cab— 9 1/2" & 54"
Quad Cab—9 1/2", 46 3/4", 74 3/8"
Crew Cab—9 1/2", 46 3/4", 83 1/4"

2)



Assemble brackets as shown using one long 5/16" bolt and steel retaining nut. (FL511 shown)

3)




Attach brackets to vehicle by inserting the retaining nut in the factory obround hole and leave out the 5/16" bolt and nut through the pinch weld at this time.

4)



Remove the small factory stone guard in the front fender well by removing the small screw and then unsnap. Reinstall the screw.

5)

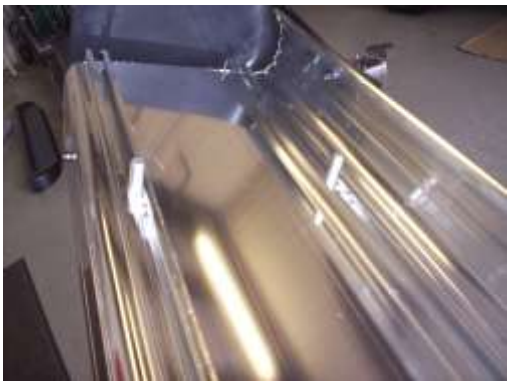

Insert one square head bolt into track for each bracket.

6)



Attach the stone guard and end caps to the board with 3/8" self threading bolts. (extruded board shown)


7)



Place the board on the brackets with bolts through slots. Attach with 1/4" nuts loose.


8)

5/16" Bolt & nut

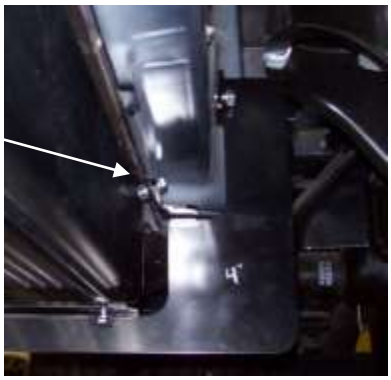


At this time place 5/16" bolt through hole in pinch weld and place nut onto threads.
This is done after 1/4" bolts & nut in board are placed into bracket for easier installation of 1/4" bolt into slots of brackets.

9)

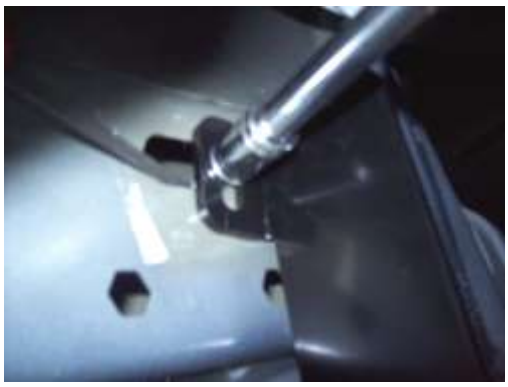

It may be necessary to use a small screw driver to hold against the retaining nut to keep it from turning while tightening the bolt.

10)

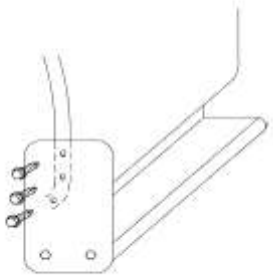

Level board and attach stone guard to vehicle using the sheet metal screws that are included. Tighten all bolts on brackets and repeat for opposite side.