



Owens Premier

2009- Current GMC ACADIA
CHEVY TRAVERSE
BUICK ENCLAVE

IN527

Product number: 67057
67065
67061

Tools required:

- 1/2" Standard socket
- 13mm socket
- 1/2" Wrench
- 3/8" nut driver on Drill

**Thank you for choosing Owens Products.
Proudly made in the USA.**

Painting your Premier board is not necessary. The board is made with UV protected ABS plastic that will resist fading and cracking from the sun.


THIS APPLICATION REQUIRES NO DRILLING

Hardware included shown below





1)

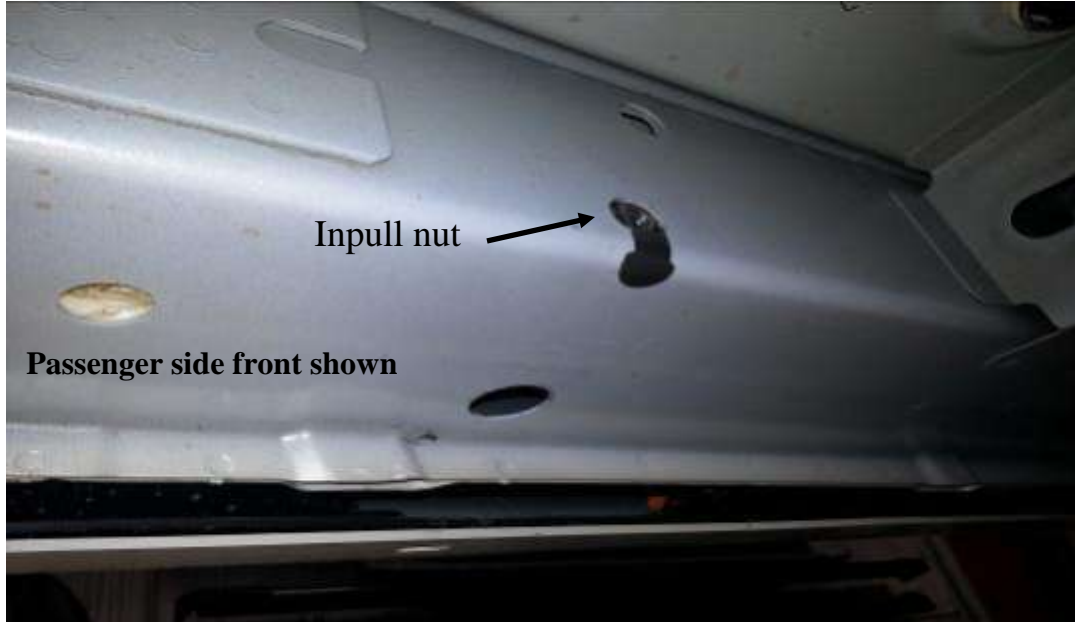

On the underside of the body locate the factory holes as shown. There is a set of these holes at each corner of the underbody. (There may be foam filling in the holes that will need to be pushed into the holes for the fasteners) Insert inpull nut into hole as shown,

2)



Assemble BT86, BT87 and BT88 together as shown using the 1.5" long 5/16" bolt and steel retaining nut. Use two 3/4" bolts to attach the BT87 and BT88 together.

3)



Insert the retaining nut into the factory hole. Leave loose. This will get tightened in the next step.



Owens Premier

IN527

2009– Current GMC ACADIA
CHEVY TRAVERSE
BUICK ENCLAVE

Product number: 67057
67065
67061

4)



Attach CB71 channel bracket using a 8mm bolt through bracket and into the inpull nut and a 5/16" bolt and nut .

Repeat the previous steps for both driver side locations.

5) Refer to included IN453 instruction for attaching the step tread or step pads.

6)



Place the board on the brackets and align front to back. Using the supplied 3/4" long self drilling screws, attach the board to the brackets.

Shop for other running boards and step bars on our website.