

INSTALLATION INSTRUCTIONS





STEP 1

DETERMINE LEFT FROM RIGHT LIGHT BAR

SIDE LIGHTS WILL BE FACING DOWN IF YOU HAVE THEM IN THE PROPER ORIENTATION.

INSERT 1 LIGHT BAR INTO EACH HE END OF THE HITCH FRAME

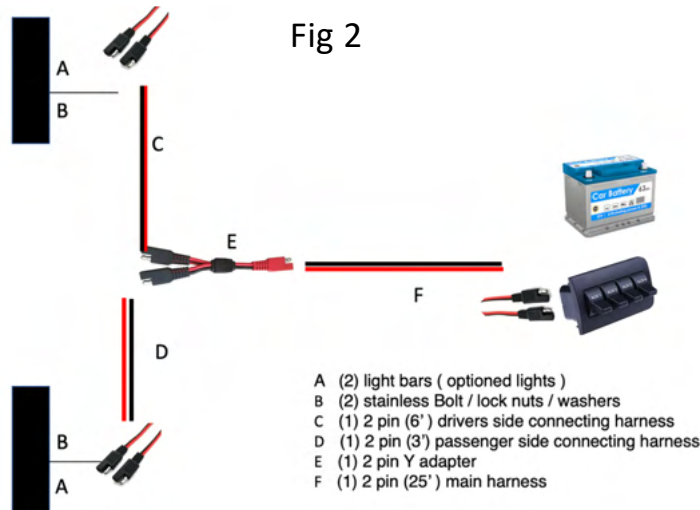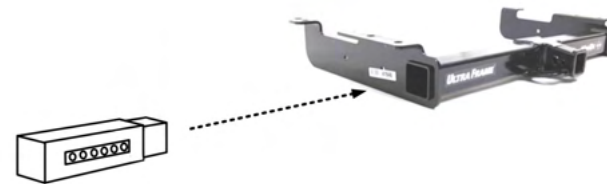

STEP 2


DETERMINE LEFT FROM RIGHT LIGHT BAR

(SIDE LIGHTS WILL BE FACING DOWN IF YOU HAVE THEM IN THE PROPER ORIENTATION)

Lay out the entire setup on the floor and wire, connect all wires as needed in Fig 2. Then power up the lights before installing to ensure you have all wires in the proper orientation (C, D & F must be in the right direction to power both lights)

Once both lights are powered up, you are ready to install them on the truck.

Step 3 –HITCH BAR™ INSTALL

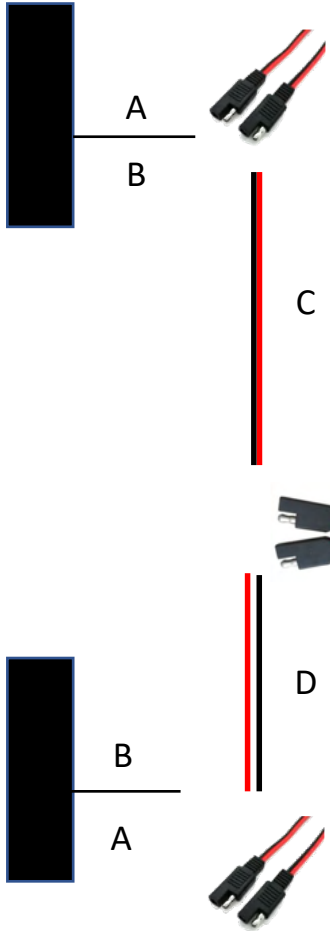

- Install the Hitch Bars into the end of Hitch (FIG A), the single bolt hole will be immediately available (FIG B), remove bolt from truck, push bars into place and reinstall stock bolt.
- Route the harnesses along the frame of the truck and secure with zip ties as needed to ensure harnesses do not hang and are snug against the body
- Harness F can be cut to the proper length once you have routed it to your switching system
- Check all connectors
- Hook up switch and power

- A (2) light bars (optioned lights)
- B (2) stainless Bolt / lock nuts / washers
- C (1) 2 pin (6') drivers side connecting harness
- D (1) 2 pin (3') passenger side connecting harness
- E (1) 2 pin Y adapter
- F (1) 2 pin (25') main harness

