RANCH HAND

INSTALLATION INSTRUCTIONS
TBC031BP
TOW HOOK MOUNTING BRACKETS for:
2003 – 2007(Classic) CHEVY/GMC 1500HD, 2500, 2500HD and 3500 GRILL GUARDS and FRONT BUMPER REPLACEMENTS (except WINCH FRONT BUMPER REPLACEMENTS)

Note: It is easier to install the tow hooks before installing the grill guard or front bumper replacement on the truck but it can be done after.

1. Remove the factory tow hooks from frame. Install the driver side tow hook on the passenger side and vise versa.

2. Place the tow hooks in the tow hook brackets by using the factory bolts on the inside and top of the brackets. Hand tighten only. (see drawing)


3. Place 12mm bolts with washers (provided) through the upright, tow hook bracket and then into the tow hook. On the front bumper replacement, it will go through the mounting bracket, tow hook bracket and then into the tow hook.

4. Install the ½" bolts and nuts (provided) through the back hole of the tow hook mounting bracket and the upright or mounting brackets.

5. MAKE SURE ALL NUTS AND BOLTS ARE TIGHT!

WARNING

Special care should be exercised in the handling, storage and installation of Kaspar Ranch Hand equipment.
The actual weight of each piece of equipment will vary depending on style and model. The weight of the equipment is sufficient in volume to warrant special care, assistance and in some instances, the use of mechanical equipment during the transfer and installation of the equipment. Do not assume a position directly under the equipment during installation. Be sure the equipment has been connected and stabilized during installation to prevent falling or shifting of positions.
Periodically check tightness of bolts to make sure they are tight, and unlikely to fail.

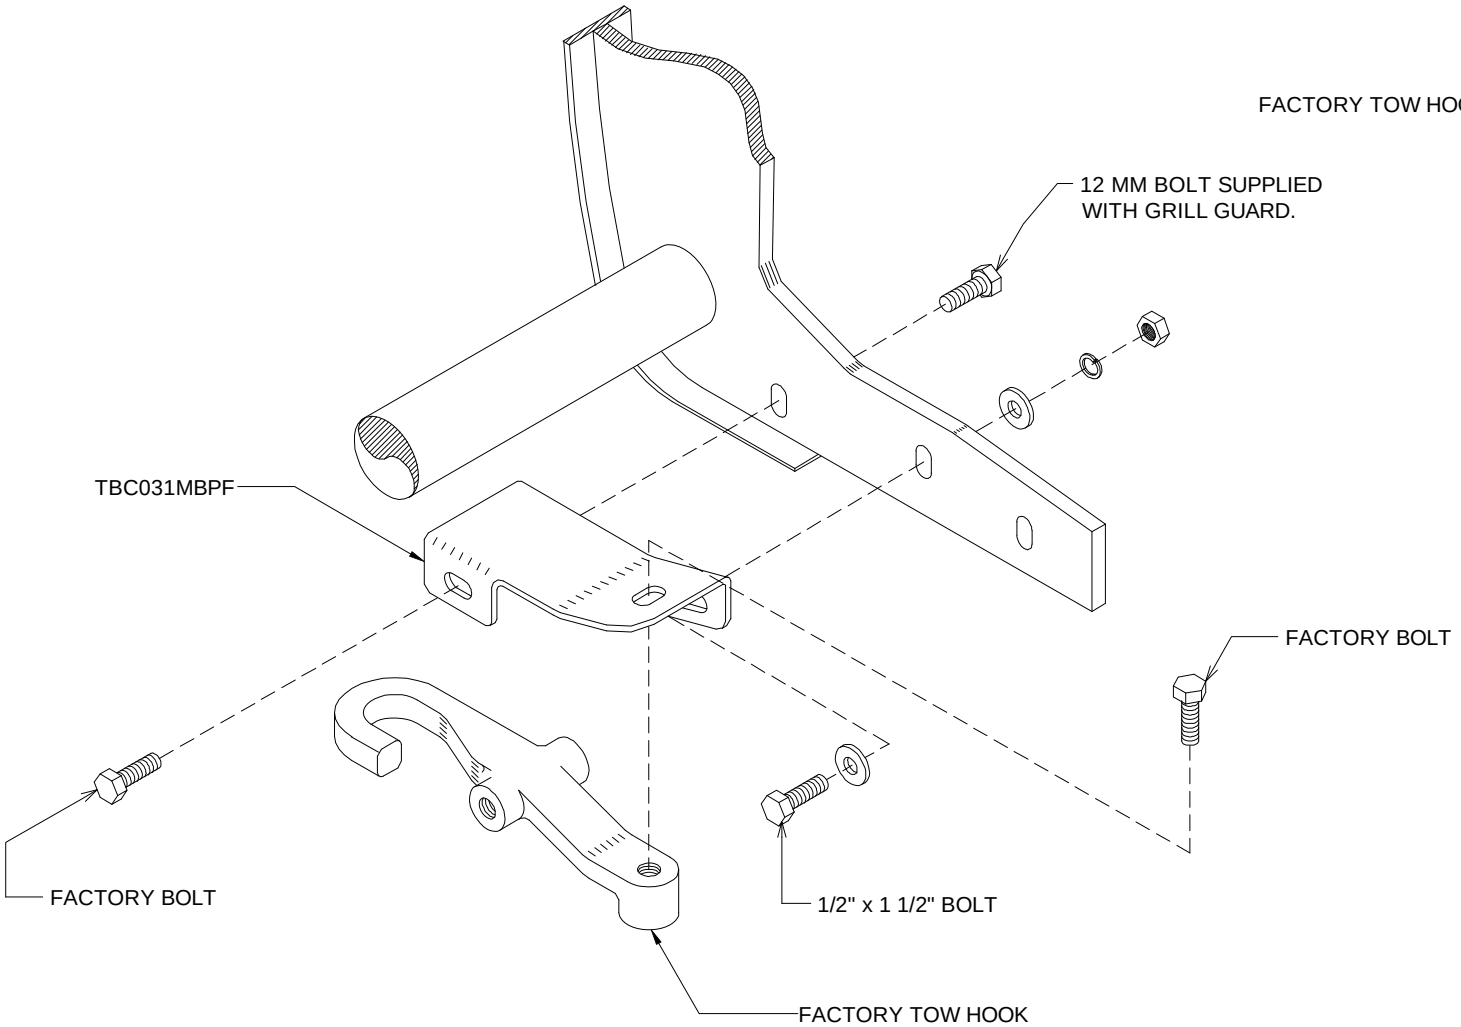

NOTE:
-TOW HOOK MNTG. BRACKET
FOR GRILL GUARD.
-FITS A GGC031BL1,GGC03TBL1
GGG031BL1,GGG03TBL1.

Shop for quality Ranch Hand products on our website.

Buy grille guards and bull bars in our online store.