

RIGHT WEIGH



Installation Manual

AIR LINE INSTALLATION KIT

FOR 201, 202, 250, 310, AND 510 SERIES | 101-SK

RIGHT WEIGH




PP-003-0007 Revision D
December 2019

PARTS INCLUDED




1

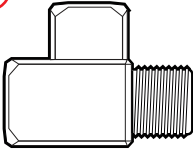


1/4" NPT Street Tee Fitting

2

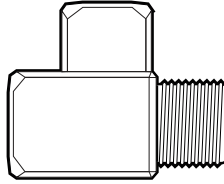


3/8" NPT Street Tee Fitting

3

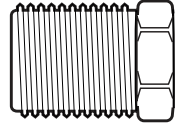


3/8" NPT to 1/4" NPT Reducer Fitting

4




1/4" NPT Male Straight Fitting

5

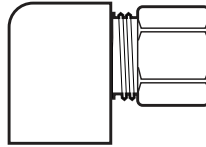


1/8" NPT Female Elbow Fitting

6

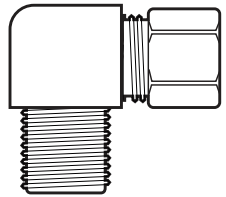


1/4" NPT Male Elbow Fitting

7


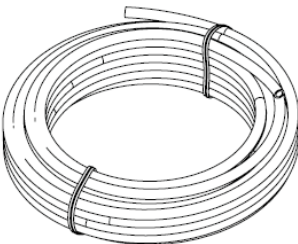


1/4 Inch Air Line


8

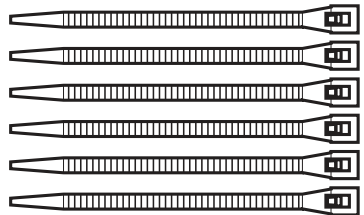

15 Zip Ties

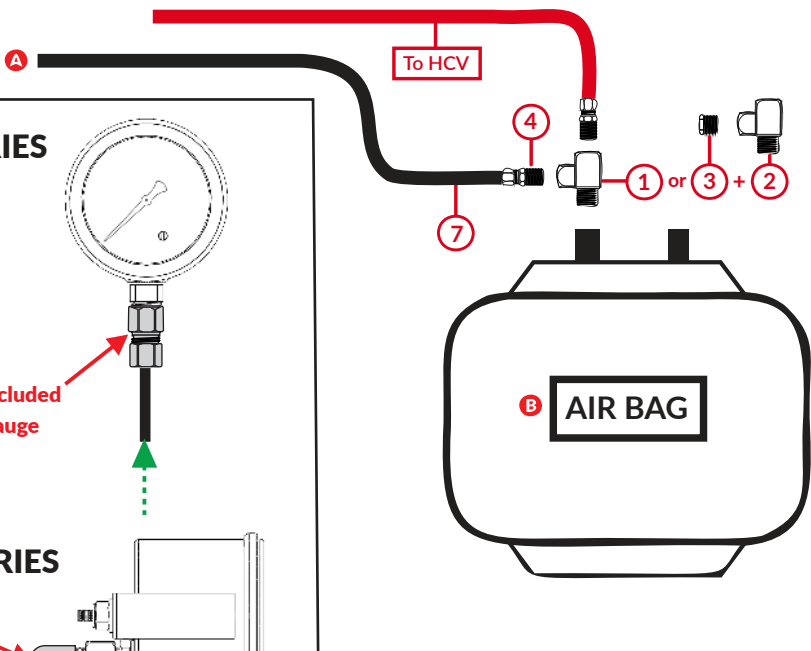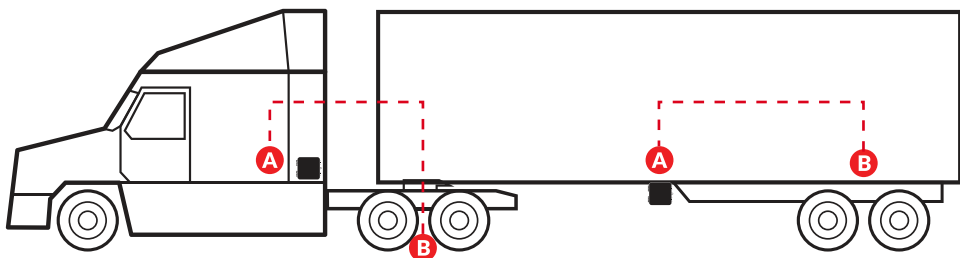


250 SERIES

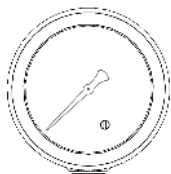


Fitting included with gauge


510 SERIES

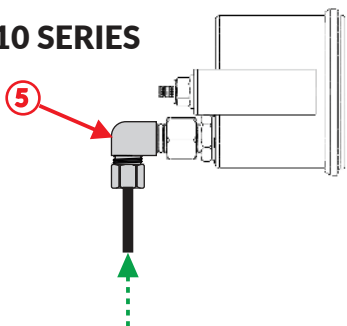

310 SERIES

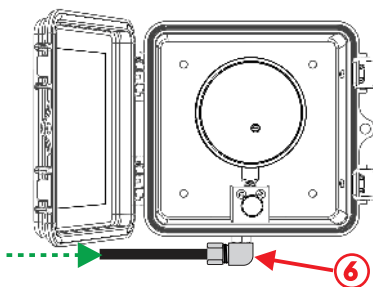

202 SERIES

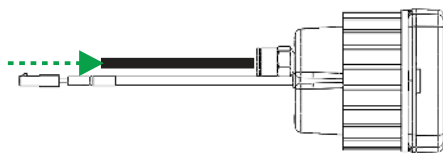

201 SERIES

