


**Pre-installed Connector System
Installation Instructions**

Identify your wiper arm to properly select the adapter you need to install

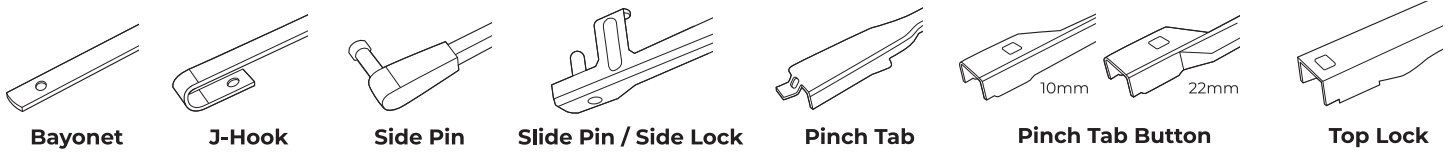

“A” ADAPTER FITS BAYONET OR J-HOOK

Attaching the “A” adapter: Place adapter over the metal anchor on the back of the wiper blade, slide the adapter into place. Once it is in the proper position you will hear a click. To ensure its locked into place, pull on the blade to make sure it is properly fastened.


	<p>Bayonet: Push down on the inner adapter to expose the connection point. Slide wiper arm into the opening, push it in gently to the opening of the inner adapter. Once it is fully seated in the adapter, you will hear a click; pull on the blade to make sure it is properly fastened.</p>
	<p>J-Hook: Open the small cover on front of the adapter. Place J-Hook in the space created by opening the small cover. Slide the hook towards the back of the adapter gently until you hear a click. Pull on the blade to make sure it is properly fastened and then close the cover.</p>

“C” ADAPTER FITS SLIDE PIN OR SIDE LOCK

	<p>Attaching the “C” adapter: Place adapter over the metal anchor on the back of the wiper blade; slide the adapter into place. Once it is in the proper position you will hear a click. Pull on the blade to make sure it is properly fastened.</p> <p>Connecting the arm to the blade: While holding the wiper blade at a 45-degree angle to the wiper arm, slide the side pin into the hole on the side of the adapter (see image). Then rotate the wiper blade so the top clip attaches to the top of the “C” adapter.</p>
--	--

“D” ADAPTER FITS SIDE PIN

	<p>Attaching the “D” adapter: Place adapter over the metal anchor on the back of the wiper blade; slide the adapter into place. Once it is in the proper position you will hear a click. Try sliding it forward gently. If it doesn't move it is installed correctly.</p>
--	---

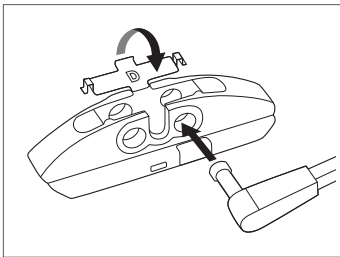


Connecting the arm to the blade: Remove the retainer in the center of the **“D” adapter** by squeezing the clips on either side of the adapter and pulling up. Slide the side pin of the wiper arm into the hole on the side of the adapter (1/4” larger hole and 3/16” smaller hole), then reinstall the retainer on the top of the adapter. Pull on the blade to make sure it is properly fastened.

All **“B” adapters** will first need to have the **“B” adapter base** installed onto the wiper blade.

“B1” ADAPTER FITS PINCH TAB

Attaching the **“B” adapter base**: Place adapter over the metal anchor on the back of the wiper blade, then slide the adapter into place. Once it is in the proper position you will hear a click. Pull on the blade to make sure it is properly fastened.

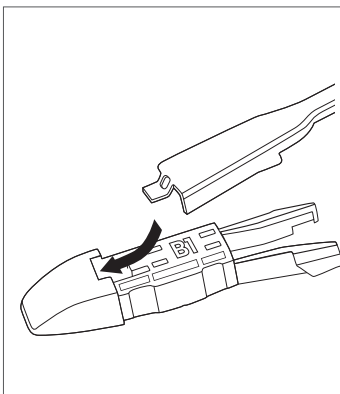


Attaching the **“B1” adapter**: Line up the round holes of the adapter to the round anchors of the **“B” base**. Push the adapter down until it clicks onto the **“B” base**.


Connecting the arm to the blade: While holding the wiper blade at a 45-degree angle to the wiper arm, place the hook on the end of the wiper arm into the front of the **“B1” adapter**. Squeeze the clips on the other end of the **“B1” adapter** together. While keeping the clips squeezed, rotate the wiper blade so the clips anchor onto the wiper arm.

“B2” ADAPTER FITS PINCH TAB BUTTON

Attaching the **“B2” adapter**: Line up the round holes of the adapter to the round anchors of the **“B” base**. Push the adapter down until it clicks onto the **“B” base**.

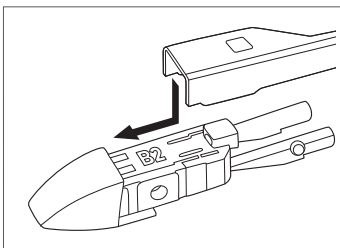


Attaching the wiper blade to 22mm wiper arms: On the **“B2” adapter** there are two wing anchors on the back end of the adapter, place the wing anchors against the **“B2” adapter** as pictured. Slide the adapter into the wiper arm until you hear a click. Pull on the blade to make sure it is properly fastened.

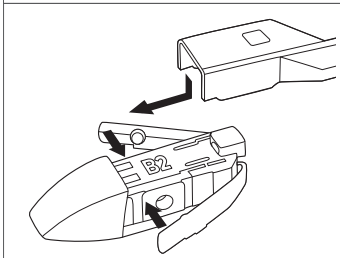

Attaching the wiper blade to 19mm wiper arms: On the **“B2” adapter** there are two wing anchors on the back end of the adapter, rotate the wing anchors so they are facing the back of the adapter as pictured. Slide the adapter into the wiper arm until you hear a click. Pull on the blade to make sure it is properly fastened.

“B4” ADAPTER FITS TOP LOCK

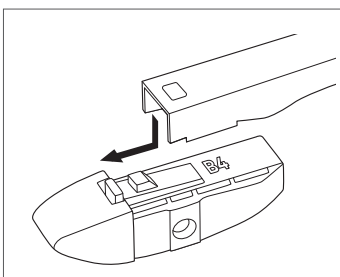

Attaching the **“B4” adapter**: Line up the round holes of the adapter to the round anchors of the **“B” base**. Push the adapter down until it clicks onto the **“B” base**.

Attaching the wiper blade to the wiper arm: Slide the adapter onto the wiper arm with light pressure (see image) until you hear a click. Pull on the blade to make sure it is properly fastened.