


Installation Instruction for GM 4L80E Transmission Harness 2004 and Up

1. Remove old wire harness from valve body.
 2. Install new Rostra wire harness.
 3. Plug-in connectors as shown in the figure below.
- NOTE:** Shift solenoid A connector may be white.

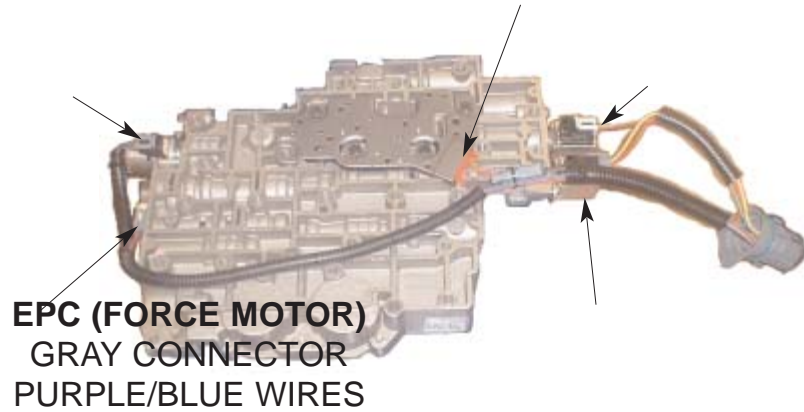

EPC (FORCE MOTOR)
GRAY CONNECTOR
PURPLE/BLUE WIRES

PRESSURE SWITCH
RED THREE-PIN CONNECTOR
ORANGE/BLUE/PURPLE WIRES

SHIFT SOLENOID A
GREEN CONNECTOR
RED/GREEN WIRES

PWM SOLENOID
GRAY CONNECTOR
RED/BLACK WIRES

SHIFT SOLENOID B
GRAY CONNECTOR
RED/YELLOW WIRES