

# INSTALLATION & CARE

## 2014-2015 SILVERADO 1500 PROJECTOR HEADLIGHT INSTALLATION INSTRUCTION

### BEFORE INSTALLATION:

- If you experience any difficulties that the instructions did not cover, please seek assistance at a local automotive shop.
- Please wear proper protective equipment before you work on any vehicle.
- An assistant is recommended when removing the front bumper from your vehicle.
- Please be cautious when working with the bumper or any parts belonging to the vehicle's body to prevent scratching.
- Do not make direct contact with the halogen bulbs or the wire assembly until the unit has cooled down after use.


### TOOLS AND SUPPLIES REQUIRED

1/4" Ratchet	7 mm Socket	10 mm Socket	1/4" Socket Extension
			
Trim Pad Remover	10 mm Wrench		
			

### PRODUCT NUMBER

2LHP-SIV14-SQ-RS	2LHP-SIV14-C-SQ-RS
2LHP-SIV14JM-SQ-RS	2LHP-SIV14JM-C-SQ-RS
2LHP-SIV14SM-SQ-RS	2LHP-SIV14SM-C-SQ-RS
2LHP-SIV14G-SQ-RS	2LHP-SIV14G-C-SQ-RS

### LET'S START THE INSTALLATION

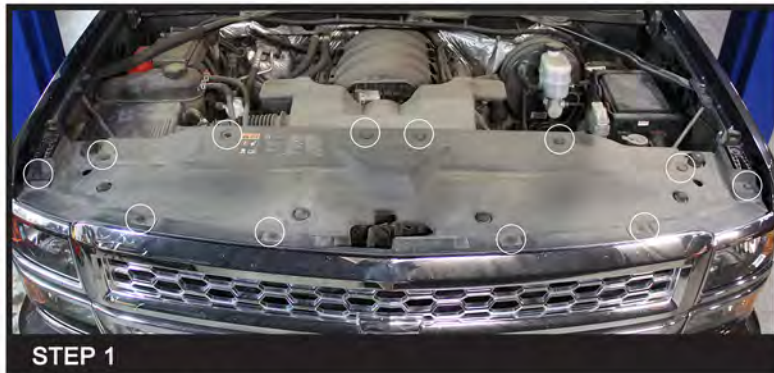

Remove the twelve plastic clips



Remove the radiator support cover



Remove the four 10mm upper grille mounting bolts




Remove the four 10mm lower grille mounting bolts behind the front grille



**STEP 4B**

Remove the four 10mm lower grille mounting bolts behind the front grille

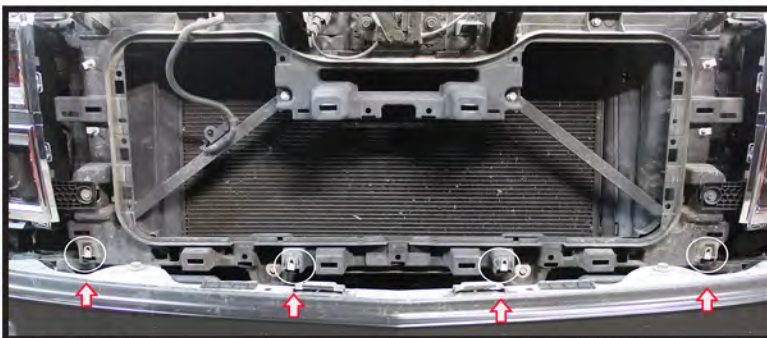


**STEP 4C**

Locations for the four 10mm lower grille mounting bolts




**STEP 5**

Remove the two 7mm bolts from the side of the front bumper's upper trim for both sides

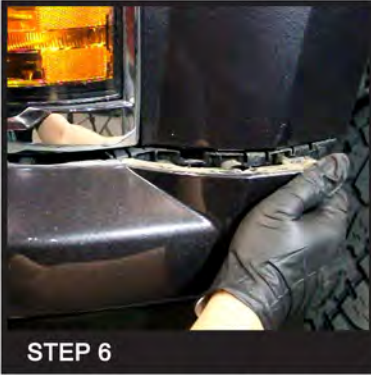


**STEP 6**

Gently pull out the side on both side to unclip the front bumper upper trim

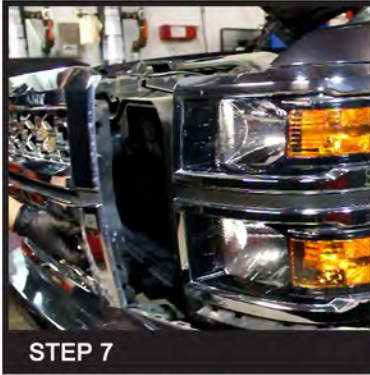

**STEP 7**

Remove the front grille assembly

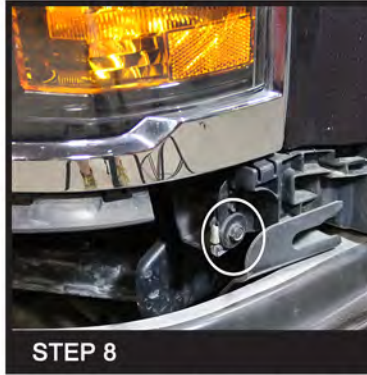

**STEP 8**

Remove the 10mm headlight mounting bolt at the bottom of the headlight




**STEP 9**

Remove the 10mm headlight mounting bolt at the side of the grille




**STEP 10**

Remove the two 10mm headlight mounting bolts at the top of the headlight

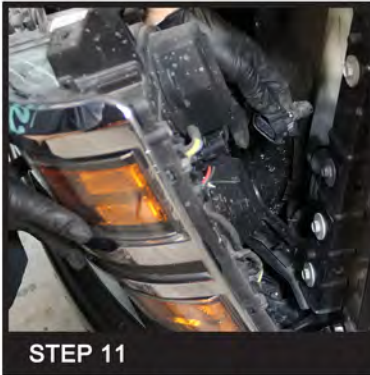

**STEP 11**

Disconnect the headlight harness and remove the factory headlight housing

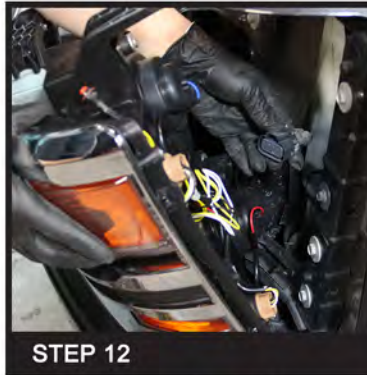

**STEP 12**

Reconnect the new headlight harness



**STEP 13**

Seat the new headlight assembly in place



**STEP 14**

Tighten the two 10mm headlight mounting bolts at the top of the headlight



**STEP 15**

Tighten the 10mm headlight mounting bolt at the side of the grille



**STEP 16**

Tighten the 10mm headlight mounting bolt at bottom of the headlight



**STEP 17**

Please repeat the steps from 8 to 16 for the opposite side



**STEP 18**

Reinstall the front grille assembly



**STEP 19**

Tighten the four 10mm lower grille mounting bolts behind the front grille



**STEP 20**

Tighten the two 7mm bolts from the side of the front bumper's upper trim for both sides



**STEP 21**

Tighten the four 10mm upper grille mounting bolts




**STEP 22**

Reinstall the radiator support cover



**STEP 23**

Reinstall the twelve plastic clips

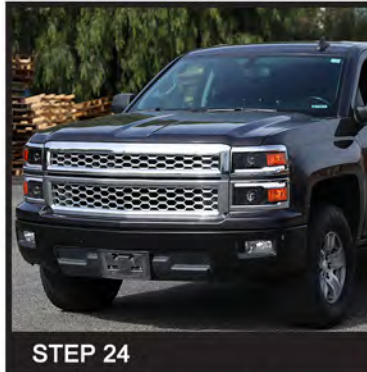

**STEP 24**

Close the hood to complete the installation

