



# SPYDER™

## SKU# 5001061



SCAN THE QR CODE TO  
VIEW THE INSTALL VIDEO

### PACKAGE CONTENTS:



• 2X TAIL LIGHT ASSEMBLIES

### FITMENT:

• 2002-2006 CHEVROLET AVALANCHE

-  [FACEBOOK.COM/SPYDERAUTO](https://facebook.com/spyderauto)
-  [LINKEDIN.COM/COMPANY/SPYDER-AUTO](https://linkedin.com/company/spyder-auto)
-  [INSTAGRAM.COM/SPYDERAUTO](https://instagram.com/spyderauto)
-  [TWITTER.COM/SPYDERAUTO](https://twitter.com/spyderauto)
-  [TIKTOK.COM/@SPYDERAUTO](https://tiktok.com/@spyderauto)



SCAN THE QR CODE  
TO VISIT OUR WEBSITE

**WARNING:** BY READING THIS DOCUMENT, YOU AGREE IT IS ONLY TO BE USED AS AN EDUCATIONAL GUIDE. SPYDER AUTO NOR ITS DEALERS MAKE GUARANTEES ON ANY FINISHED RESULTS, NOR ARE THEY TO BE HELD RESPONSIBLE FOR ANY DAMAGE, MISUSE, OR PERSONAL INJURIES. IF YOU ARE UNABLE TO CLEARLY UNDERSTAND AND ADAPT THE INFORMATION BELOW, PROFESSIONAL INSTALLATION IS RECOMMENDED. FOR ANY ISSUES OR QUESTIONS ABOUT YOUR SPYDER PRODUCT, REACH OUT TO OUR TECH SUPPORT TEAM [TECHSUPPORT@SPYDERAUTO.COM](mailto:TECHSUPPORT@SPYDERAUTO.COM). IT IS THE INSTALLER'S RESPONSIBILITY TO CONFIRM COMPLIANCE WITH STATE AND LOCAL LAWS. THIS PRODUCT CAN EXPOSE YOU TO CHEMICALS INCLUDING CHROMIUM (HEXAVALENT COMPOUNDS), WHICH ARE KNOWN TO THE STATE OF CALIFORNIA TO CAUSE CANCER AND BIRTH DEFECTS OR OTHER REPRODUCTIVE HARM. FOR MORE INFORMATION GO TO [WWW.P65WARNING.CA.GOV](http://WWW.P65WARNING.CA.GOV)

**TOOLS REQUIRED:**


- PHILLIPS SCREWDRIVER



**STEP 1:**  
**DISCONNECT THE NEGATIVE BATTERY TERMINAL**




**STEP 2:**  
OPEN THE TAILGATE

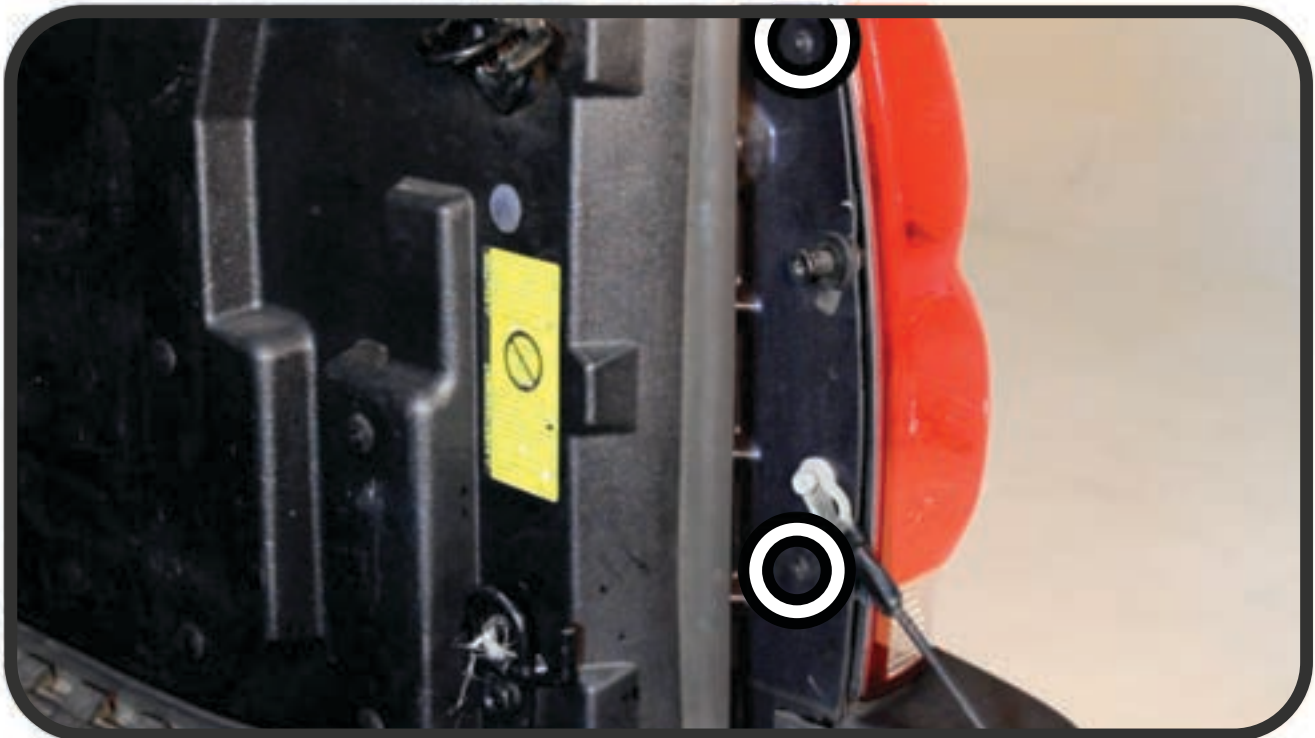

**STEP 3:**  
REMOVE (2) PHILLIPS SCREWS SECURING THE TAIL LIGHT



**STEP 4:**  
UNSEAT THE TAIL LIGHT

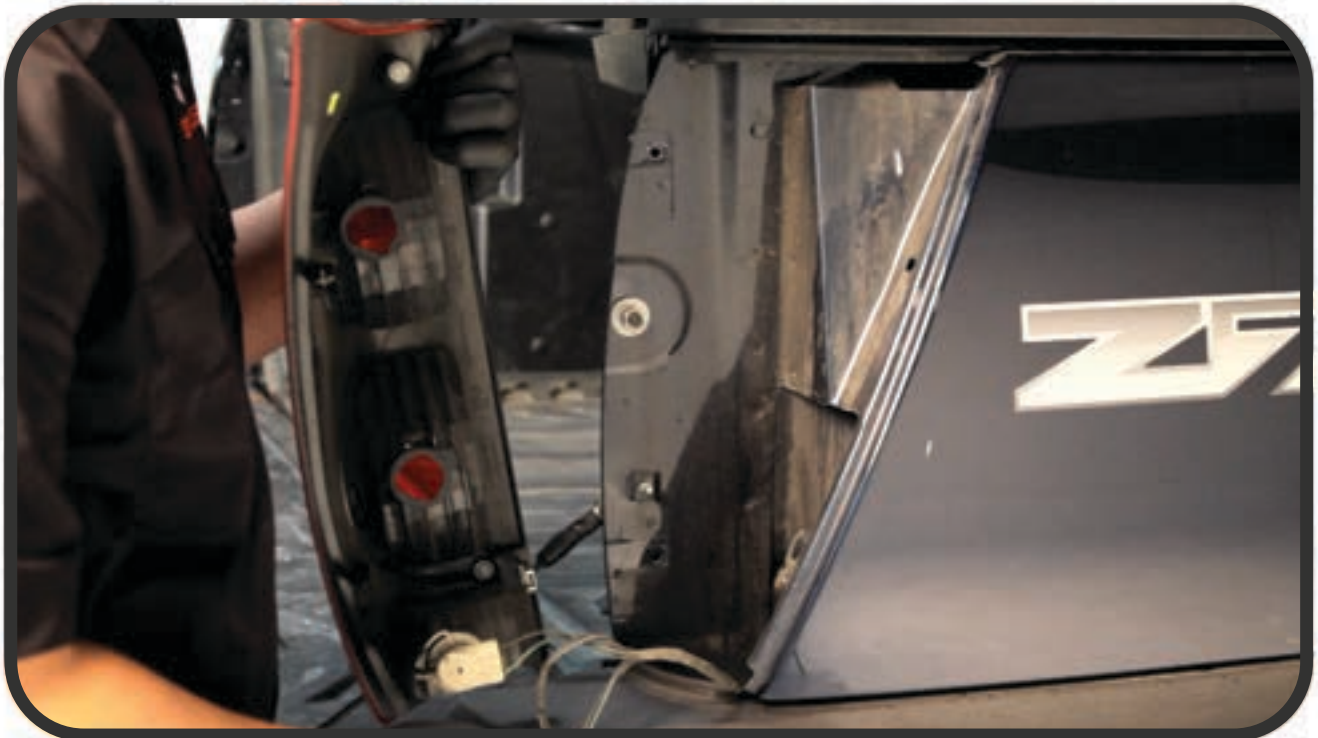

**STEP 5:**  
REMOVE THE TURN SIGNAL, REVERSE, AND BRAKE BULB SOCKETS  
FROM THE OLD TAIL LIGHT




**STEP 6:**

**REMOVE THE CENTER AND TOP BULBS FROM THEIR SOCKETS (NOTE: NEVER TOUCH EXPOSED BULBS WITH BARE HANDS)**



**STEP 7:**

**REINSTALL THE REVERSE SOCKET INTO THE SPYDER TAIL LIGHT**

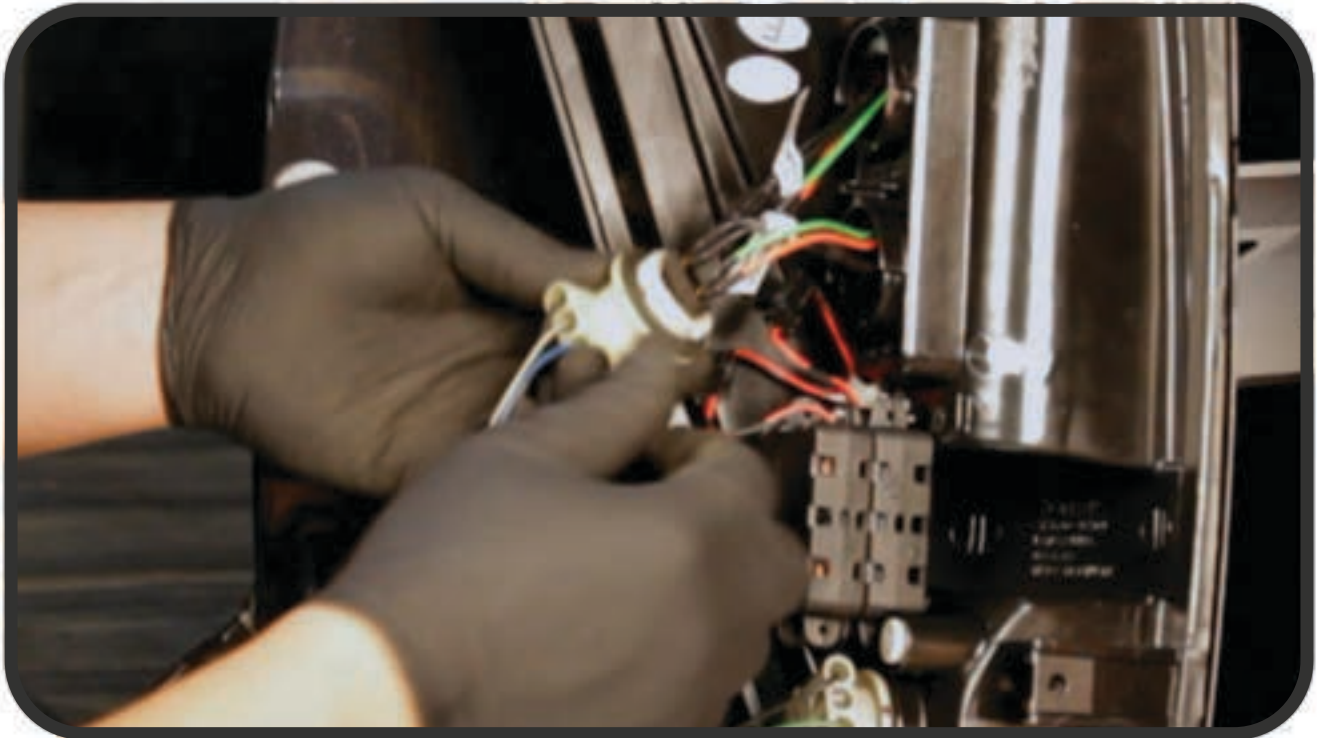


**STEP 8:**

**CONNECT THE CENTER AND TOP SOCKET TO THEIR RESPECTIVE POSITION ON THE SPYDER LIGHT ENSURING THE BLACK WIRES MATCH AND SECURE THE SOCKET**



**STEP 9:**

**SEAT THE SPYDER TAIL LIGHT**

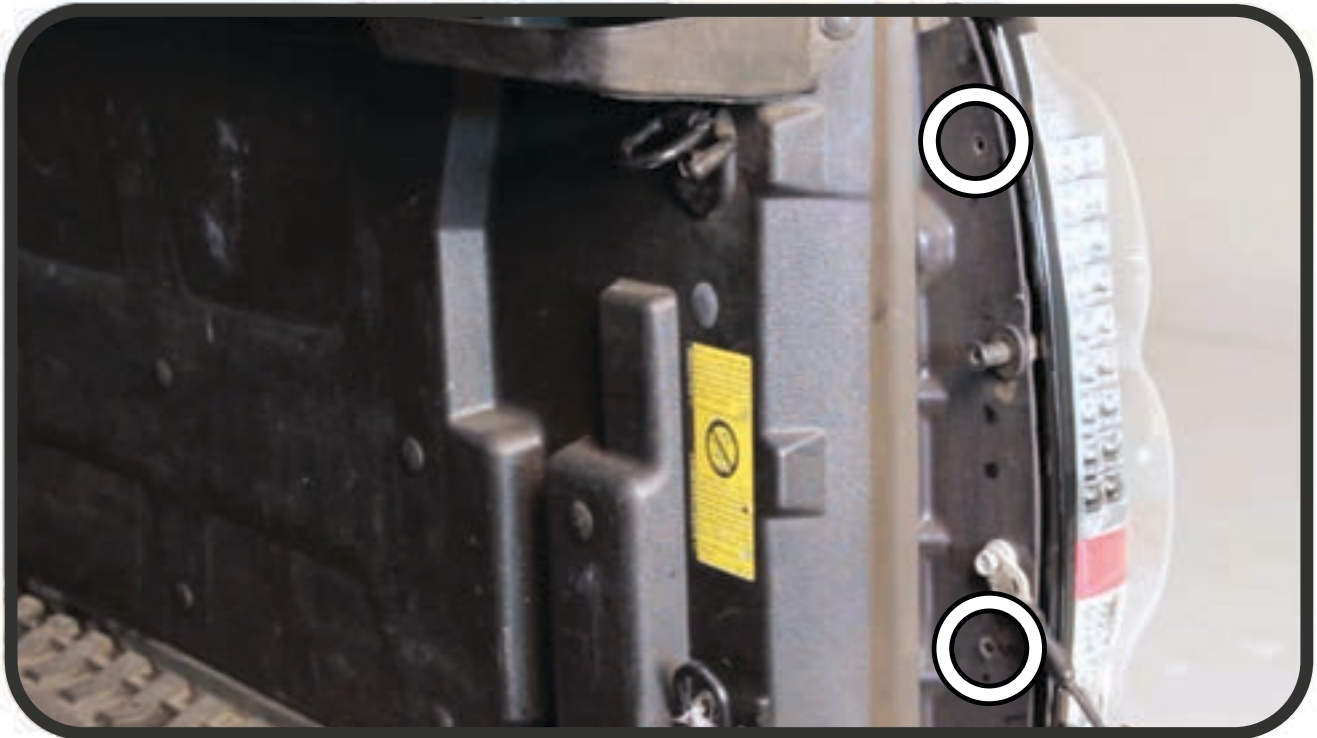

**STEP 10:**

**REINSTALL THE (2) PHILLIPS SCREWS TO SECURE THE TAIL LIGHT**



**STEP 11:**

**RECONNECT THE BATTERY AND TEST THE FUNCTIONS TO ENSURE THEY FUNCTION PROPERLY**