



# SPYDER™

## SKU# 5001412



SCAN THE QR CODE TO  
VIEW THE INSTALL VIDEO

### PACKAGE CONTENTS:



• 2X TAIL LIGHT ASSEMBLIES

### FITMENT:

- 2004-2013 CHEVY COLORADO
- 2004-2013 GMC CANYON

- FACEBOOK.COM/SPYDERAUTO
- LINKEDIN.COM/COMPANY/SPYDER-AUTO
- INSTAGRAM.COM/SPYDERAUTO
- TWITTER.COM/SPYDERAUTO
- TIKTOK.COM/@SPYDERAUTO



SCAN THE QR CODE  
TO VISIT OUR WEBSITE


**WARNING:** BY READING THIS DOCUMENT, YOU AGREE IT IS ONLY TO BE USED AS AN EDUCATIONAL GUIDE. SPYDER AUTO NOR ITS DEALERS MAKE OR WARRANTS ON ANY FINISHED RESULTS, NOR ARE THEY TO BE HELD RESPONSIBLE FOR ANY DAMAGE, MISUSE, OR PERSONAL INJURIES. IF YOU ARE UNABLE TO CLEARLY UNDERSTAND AND ADAPT THE INFORMATION BELOW, PROFESSIONAL INSTALLATION IS RECOMMENDED. FOR ANY ISSUES OR QUESTIONS ABOUT YOUR SPYDER PRODUCT, REACH OUT TO OUR TECH SUPPORT TEAM [TECHSUPPORT@SPYDERAUTO.COM](mailto:TECHSUPPORT@SPYDERAUTO.COM). IT IS THE INSTALLER'S RESPONSIBILITY TO CONFIRM COMPLIANCE WITH STATE AND LOCAL LAWS. THIS PRODUCT CAN EXPOSE YOU TO CHEMICALS INCLUDING CHROMIUM (HEXAVALENT COMPOUNDS), WHICH ARE KNOWN TO THE STATE OF CALIFORNIA TO CAUSE CANCER AND BIRTH DEFECTS OR OTHER REPRODUCTIVE HARM. FOR MORE INFORMATION GO TO [WWW.P65WARNING.CA.GOV](http://WWW.P65WARNING.CA.GOV)

**TOOLS REQUIRED:**


- PHILLIPS SCREWDRIVER



**STEP 1:**  
**DISCONNECT THE NEGATIVE BATTERY TERMINAL**

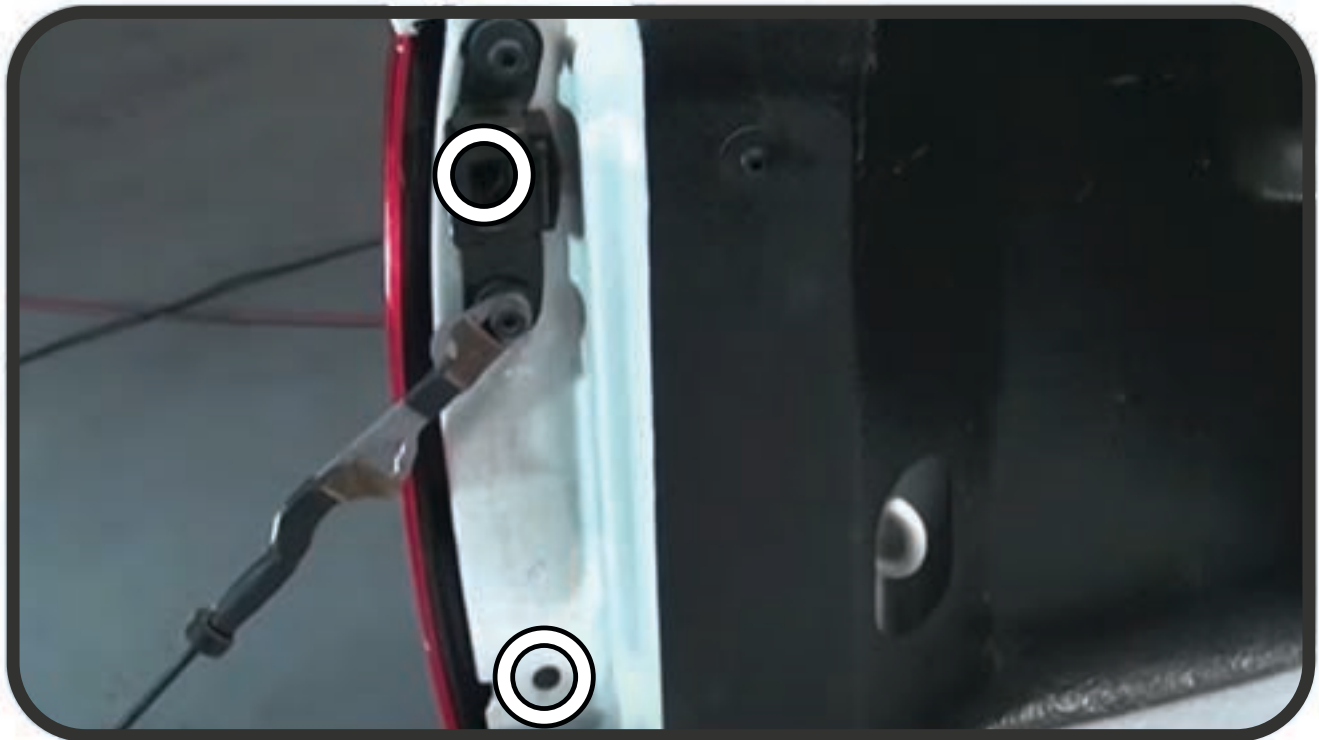

**STEP 2:**  
REMOVE (2) PHILLIPS SCREWS

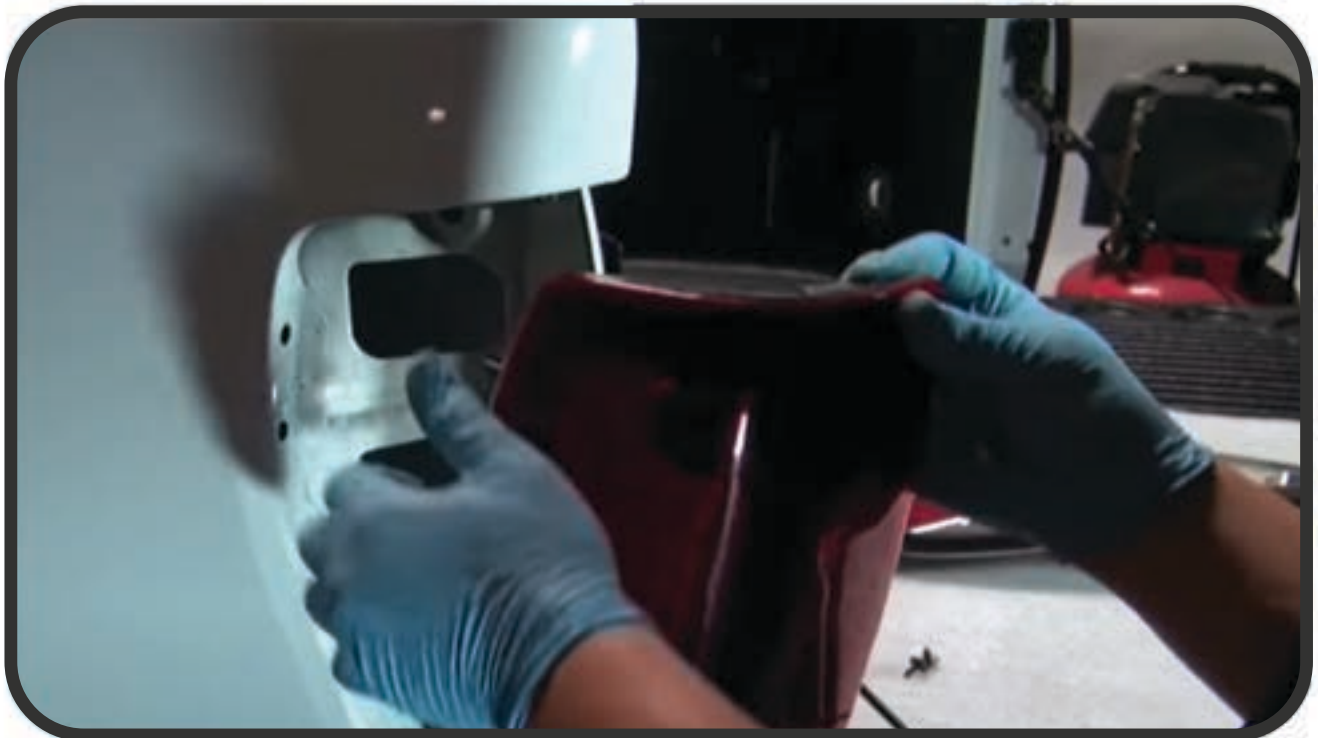

**STEP 3:**  
UNSEAT TAIL LIGHT




**STEP 4:**  
**REMOVE (3) BULB SOCKETS FROM THE TAIL LIGHT**  
**(NOTE: NEVER TOUCH BULBS WITH BARE HANDS)**




**STEP 5:**  
**INSTALL THE (3) BULB SOCKETS INTO SPYDER TAIL LIGHT**



**STEP 6:**  
**SEAT SPYDER TAIL LIGHT MAKING SURE NOT TO PINCH THE HARNESS**

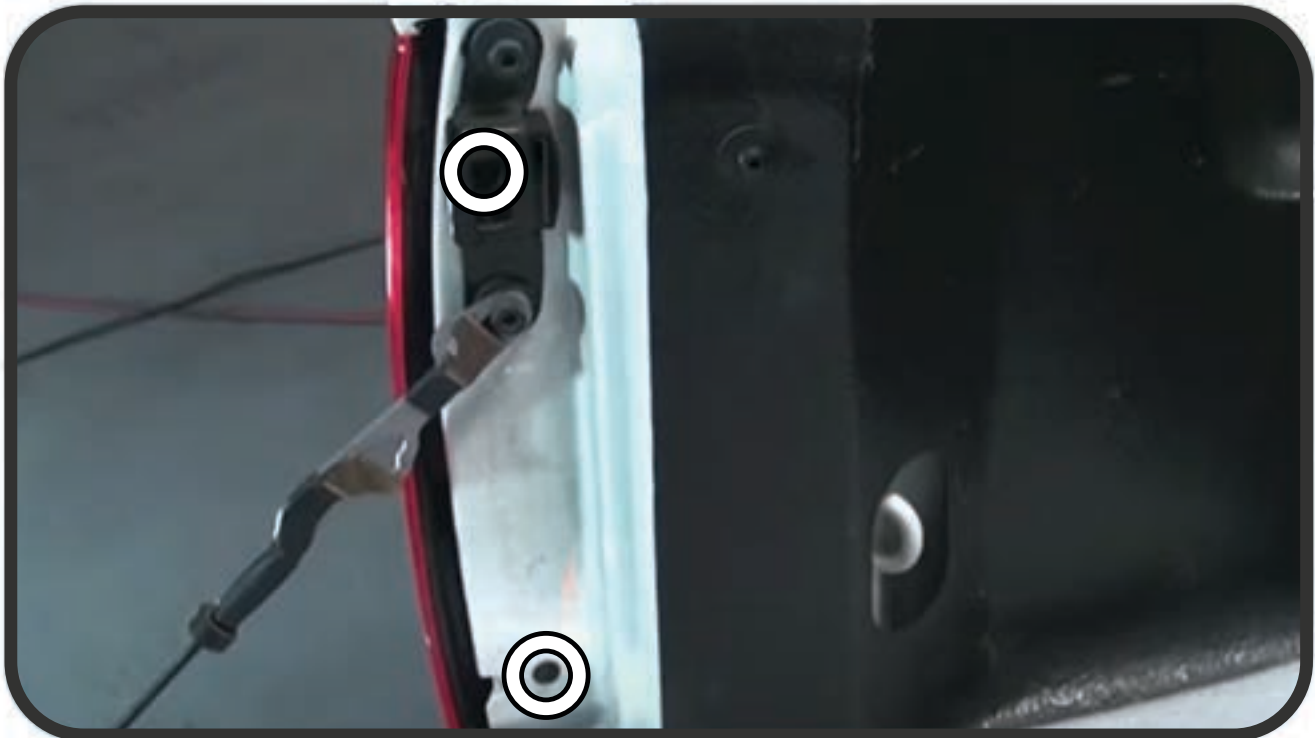

**STEP 7:**  
**REINSTALL THE (2) PHILLIPS SCREWS**

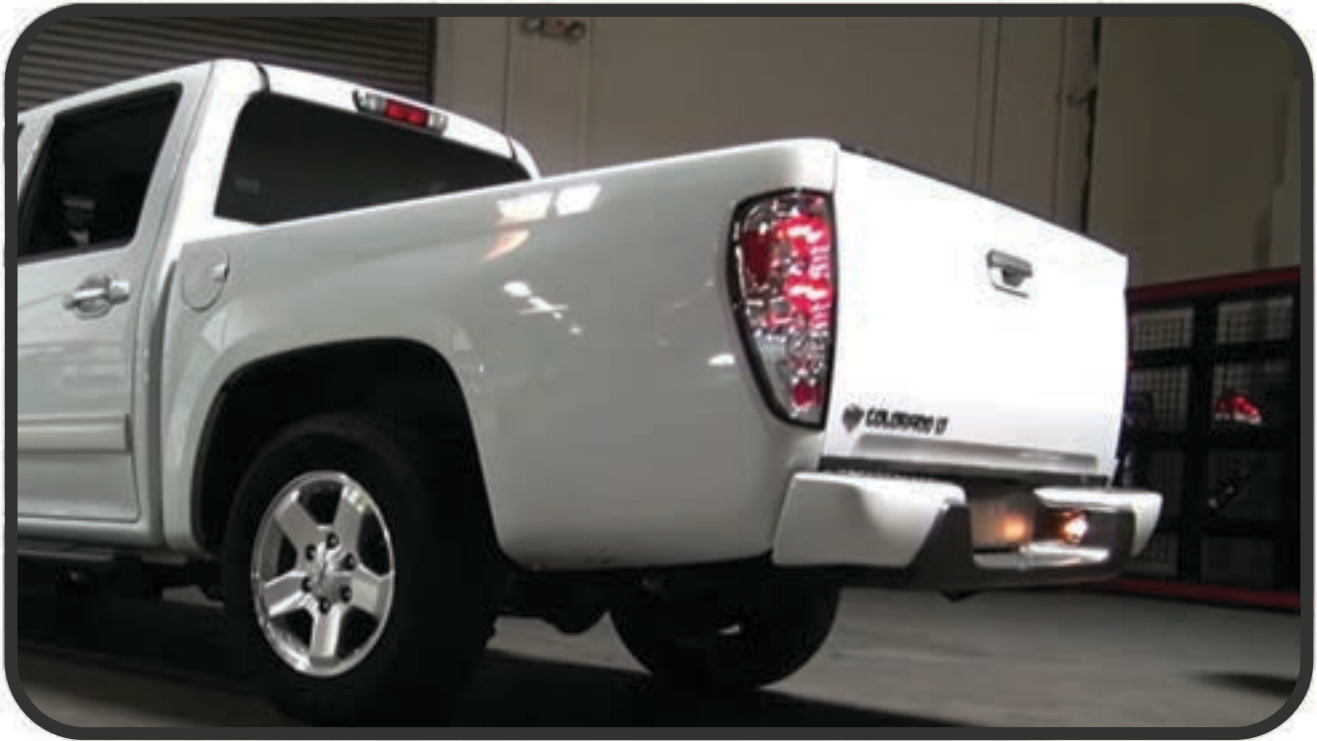

**STEP 8:**

**RECONNECT THE BATTERY AND TEST THE FUNCTIONS TO ENSURE THEY FUNCTION PROPERLY**