



SPYDER™

SKU# 5001528



SCAN THE QR CODE TO
VIEW THE INSTALL VIDEO

PACKAGE CONTENTS:



• 2X TAIL LIGHT ASSEMBLIES

FITMENT:

- 2000-2006 CHEVROLET TAHOE 1500/2500
- 2000-2006 CHEVROLET SUBURBAN
- 2000-2006 GMC YUKON/YUKON XL
- 2001-2006 GMC YUKON DENALI/DENALI XL (LIFT GATE STYLE ONLY)

- FACEBOOK.COM/SPYDERAUTO
- LINKEDIN.COM/COMPANY/SPYDER-AUTO
- INSTAGRAM.COM/SPYDERAUTO
- TWITTER.COM/SPYDERAUTO
- TIKTOK.COM/@SPYDERAUTO



SCAN THE QR CODE
TO VISIT OUR WEBSITE

WARNING: BY READING THIS DOCUMENT, YOU AGREE IT IS ONLY TO BE USED AS AN EDUCATIONAL GUIDE. SPYDER AUTO NOR ITS DEALERS MAKE GUARANTEES ON ANY FINISHED RESULTS, NOR ARE THEY TO BE HELD RESPONSIBLE FOR ANY DAMAGE, MISUSE, OR PERSONAL INJURIES. IF YOU ARE UNABLE TO CLEARLY UNDERSTAND AND ADAPT THE INFORMATION BELOW, PROFESSIONAL INSTALLATION IS RECOMMENDED. FOR ANY ISSUES OR QUESTIONS ABOUT YOUR SPYDER PRODUCT, REACH OUT TO OUR TECH SUPPORT TEAM TECHSUPPORT@SPYDERAUTO.COM. IT IS THE INSTALLER'S RESPONSIBILITY TO CONFIRM COMPLIANCE WITH STATE AND LOCAL LAWS. THIS PRODUCT CAN EXPOSE YOU TO CHEMICALS INCLUDING CHROMIUM (HEXAVALENT COMPOUNDS), WHICH ARE KNOWN TO THE STATE OF CALIFORNIA TO CAUSE CANCER AND BIRTH DEFECTS OR OTHER REPRODUCTIVE HARM. FOR MORE INFORMATION GO TO WWW.P65WARNING.CA.GOV

TOOLS REQUIRED:

- PHILLIPS SCREWDRIVER




STEP 1:

DISCONNECT THE NEGATIVE BATTERY TERMINAL




STEP 2:
OPEN THE TAILGATE

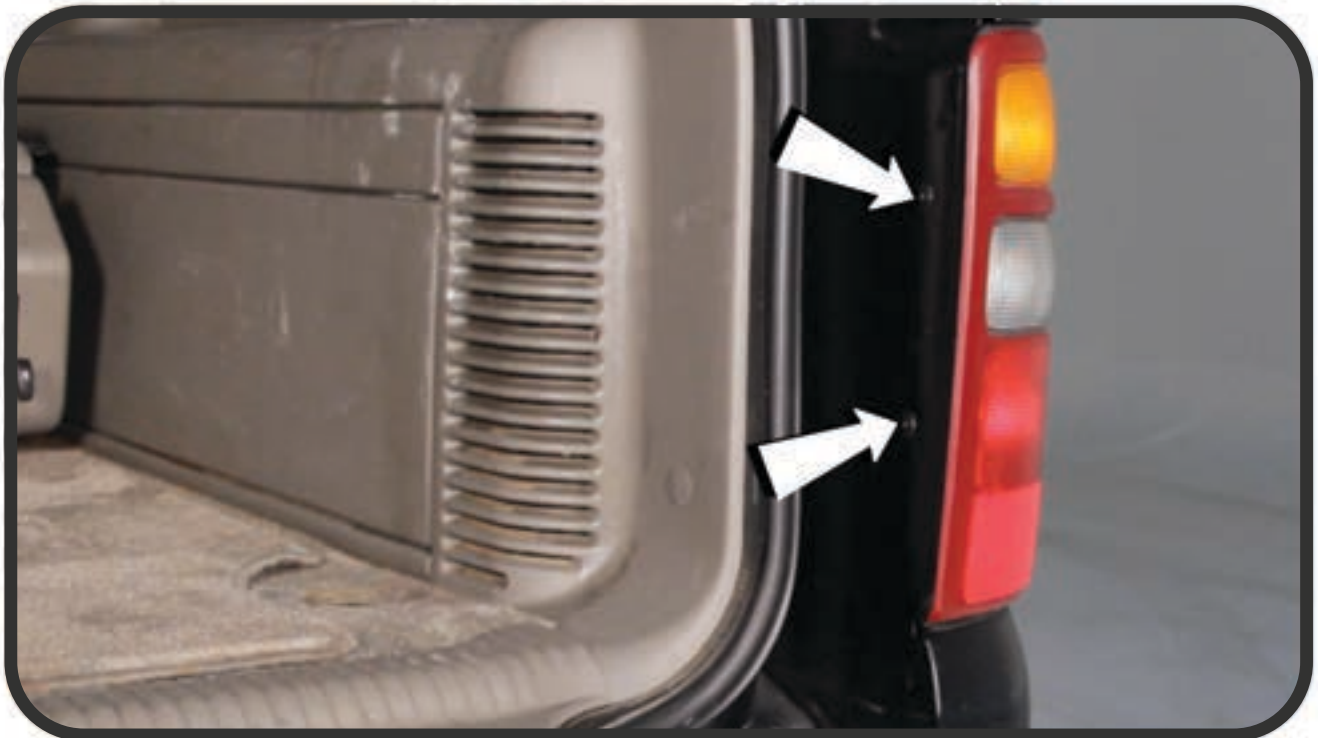


STEP 3:
REMOVE (2) PHILLIPS SCREWS SECURING THE TAIL LIGHT



STEP 4:
UNSEAT THE TAIL LIGHT

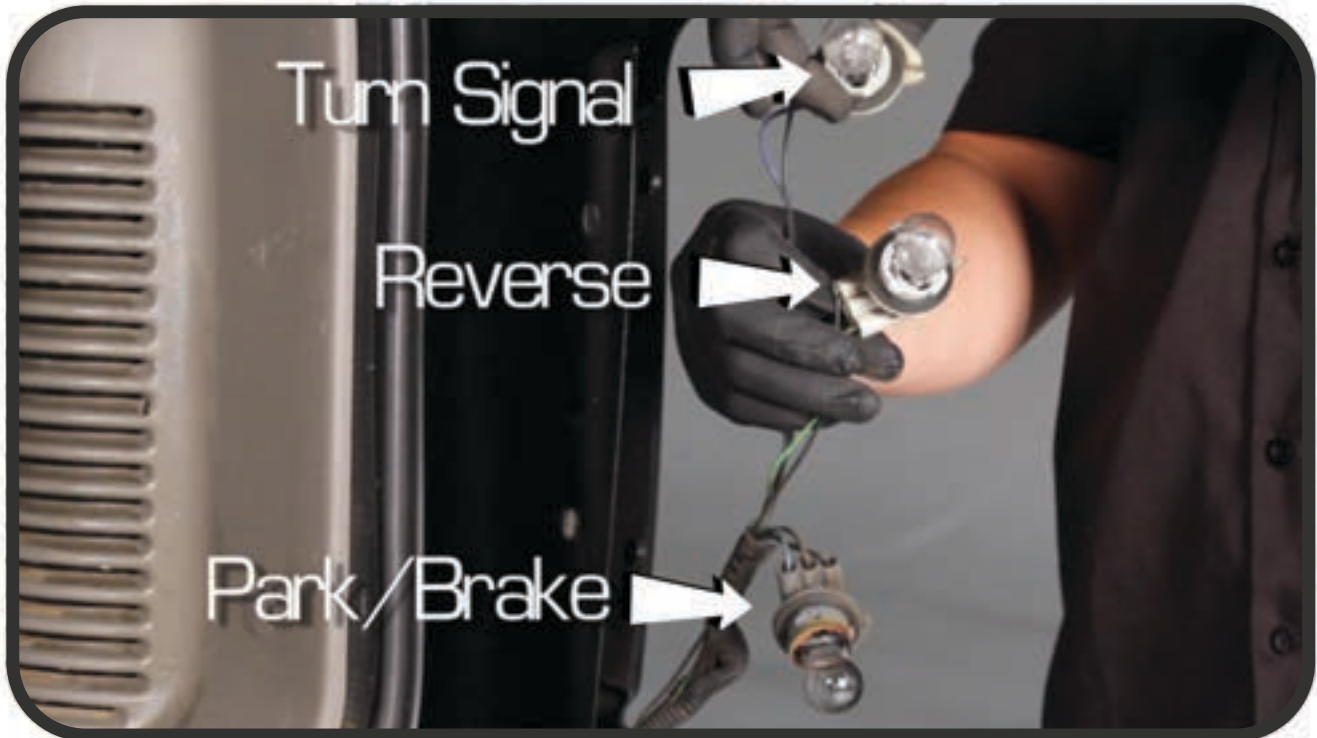


STEP 5:
REMOVE THE TURN SIGNAL, REVERSE, AND PARKING/BRAKE LIGHT SOCKETS FROM THE OLD TAIL LIGHT

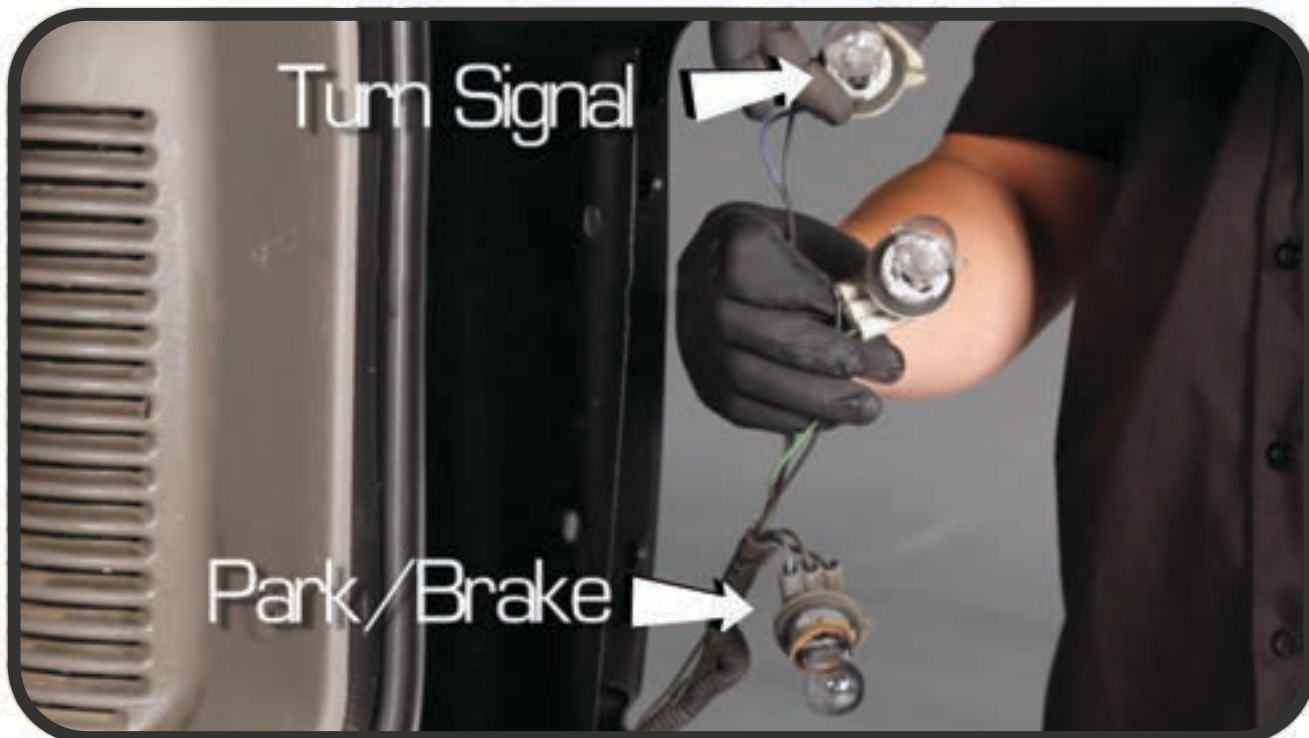

STEP 6:

REMOVE THE TURN SIGNAL AND BRAKE BULBS FROM ITS SOCKET
(NOTE: NEVER TOUCH EXPOSED BULBS WITH BARE HANDS)

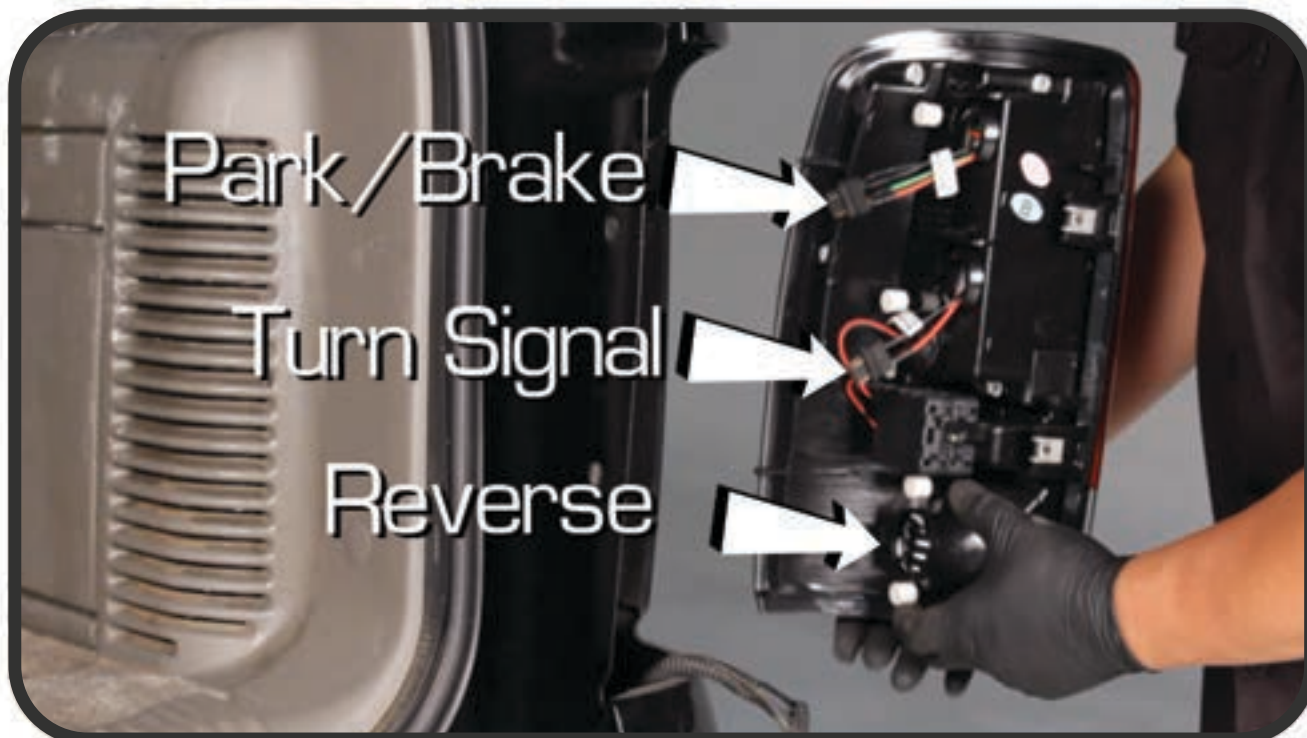

STEP 7:

INSTALL THE REVERSE LAMP SOCKET INTO THE SPYDER TAIL LIGHT



STEP 8:

CONNECT THE TURN SIGNAL TO THE CENTER SOCKET AND THE BRAKE LAMP TO THE UPPER SOCKET. ENSURE THAT THE BLACK WIRES ALIGN WITH THE SOCKET. THEN REINSTALL THE SOCKET



STEP 9:

SEAT THE SPYDER TAIL LIGHT



STEP 10:

REINSTALL THE (2) PHILLIPS SCREWS TO SECURE THE TAIL LIGHT



STEP 11:

RECONNECT THE BATTERY AND TEST THE FUNCTIONS TO ENSURE THEY FUNCTION PROPERLY