



# SPYDER™

## SKU# 5081766



SCAN THE QR CODE TO  
VIEW THE INSTALL VIDEO

### PACKAGE CONTENTS:



• 2X TAIL LIGHT ASSEMBLIES

### FITMENT:

- 2007-2013 CHEVROLET SILVERADO 1500
- 2007-2014 CHEVROLET SILVERADO 2500HD/3500HD
- 2007-2014 GMC SIERRA 3500HD DUALY MODEL (DOES NOT FIT 2010 MODEL WITH DUAL REVERSE SOCKET 921 BULB)

- [FACEBOOK.COM/SPYDERAUTO](https://www.facebook.com/spyderauto)
- [LINKEDIN.COM/COMPANY/SPYDER-AUTO](https://www.linkedin.com/company/spyder-auto)
- [INSTAGRAM.COM/SPYDERAUTO](https://www.instagram.com/spyderauto)
- [TWITTER.COM/SPYDERAUTO](https://twitter.com/spyderauto)
- [TIKTOK.COM/@SPYDERAUTO](https://www.tiktok.com/@spyderauto)



SCAN THE QR CODE  
TO VISIT OUR WEBSITE


**WARNING:** BY READING THIS DOCUMENT, YOU AGREE IT IS ONLY TO BE USED AS AN EDUCATIONAL GUIDE. SPYDER AUTO NOR ITS DEALERS MAKE GUARANTEES ON ANY FINISHED RESULTS, NOR ARE THEY TO BE HELD RESPONSIBLE FOR ANY DAMAGE, MISUSE, OR PERSONAL INJURIES. IF YOU ARE UNABLE TO CLEARLY UNDERSTAND AND ADAPT THE INFORMATION BELOW, PROFESSIONAL INSTALLATION IS RECOMMENDED. FOR ANY ISSUES OR QUESTIONS ABOUT YOUR SPYDER PRODUCT, REACH OUT TO OUR TECH SUPPORT TEAM [TECHSUPPORT@SPYDERAUTO.COM](mailto:TECHSUPPORT@SPYDERAUTO.COM). IT IS THE INSTALLER'S RESPONSIBILITY TO CONFIRM COMPLIANCE WITH STATE AND LOCAL LAWS. THIS PRODUCT CAN EXPOSE YOU TO CHEMICALS INCLUDING CHROMIUM (HEXAVALENT COMPOUNDS), WHICH ARE KNOWN TO THE STATE OF CALIFORNIA TO CAUSE CANCER AND BIRTH DEFETS OR OTHER REPRODUCTIVE HARM. FOR MORE INFORMATION GO TO [WWW.P65WARNING.CA.GOV](http://WWW.P65WARNING.CA.GOV)

**TOOLS REQUIRED:**

- PHILLIPS SCREWDRIVER



**STEP 1:**  
**DISCONNECT THE NEGATIVE BATTERY TERMINAL**

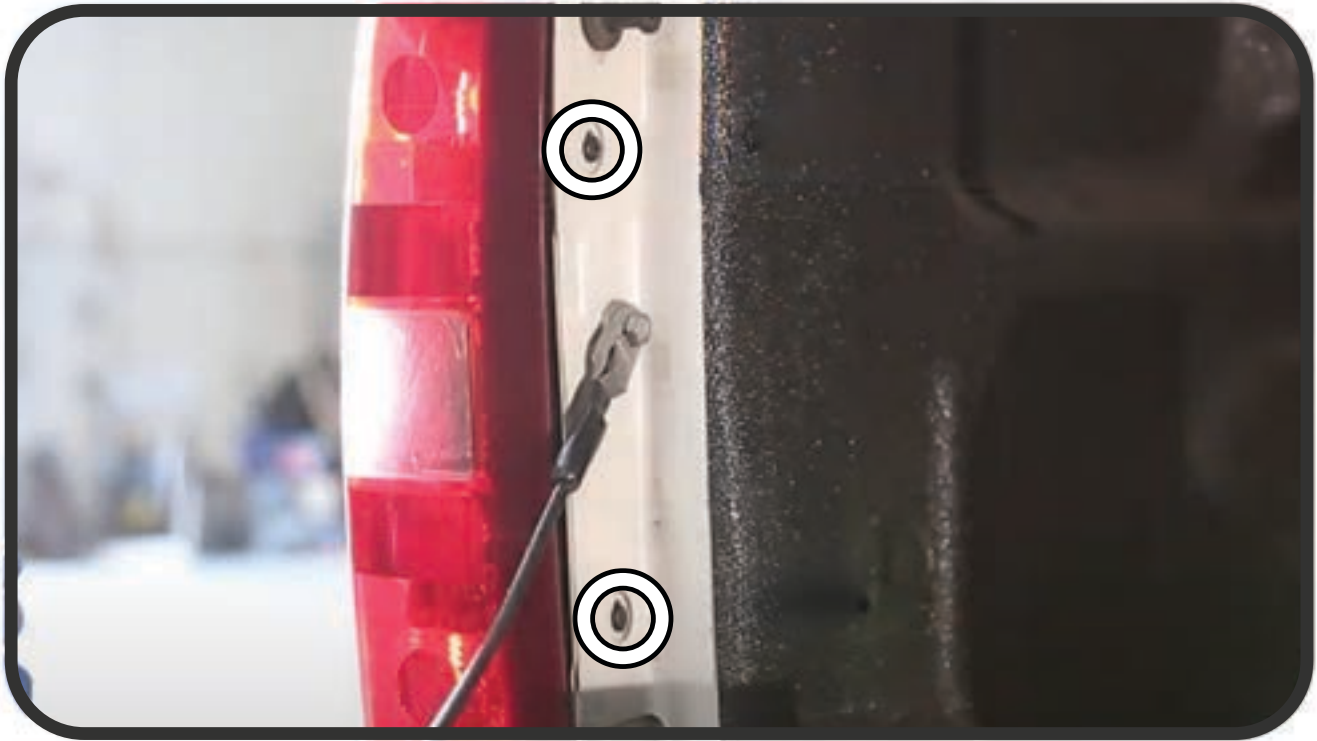


**STEP 2:**

**OPEN THE TAILGATE AND REMOVE (2) PHILLIPS SCREWS SECURING THE TAIL LIGHT**



**STEP 3:**

**UNSEAT THE TAIL LIGHT AND REMOVE ALL 3 BULB SOCKETS FROM THE OLD TAIL LIGHT**

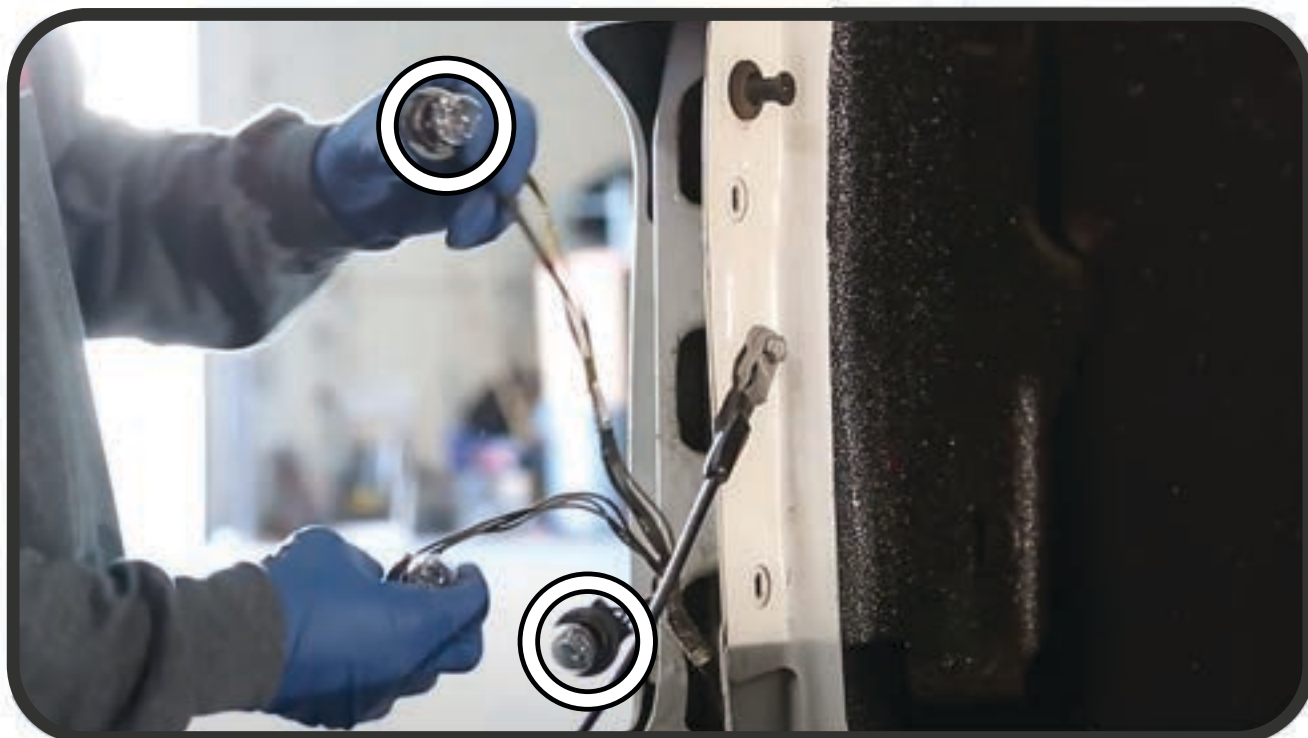


**STEP 4:**

**REMOVE TOP (BRAKE LIGHT) AND BOTTOM (BRAKE LIGHT) BULBS FROM SOCKETS. THE BOTTOM SOCKET IS NO LONGER NEEDED FOR THE REMAINDER OF THIS INSTALL**



**STEP 5:**

**INSTALL TOP BRAKE LIGHT SOCKET PLUG INTO SPYDER TAIL LIGHT AND ENSURING THAT THE BLACK WIRE MATCHES ON BOTH THE SOCKET PLUG AND SOCKET**

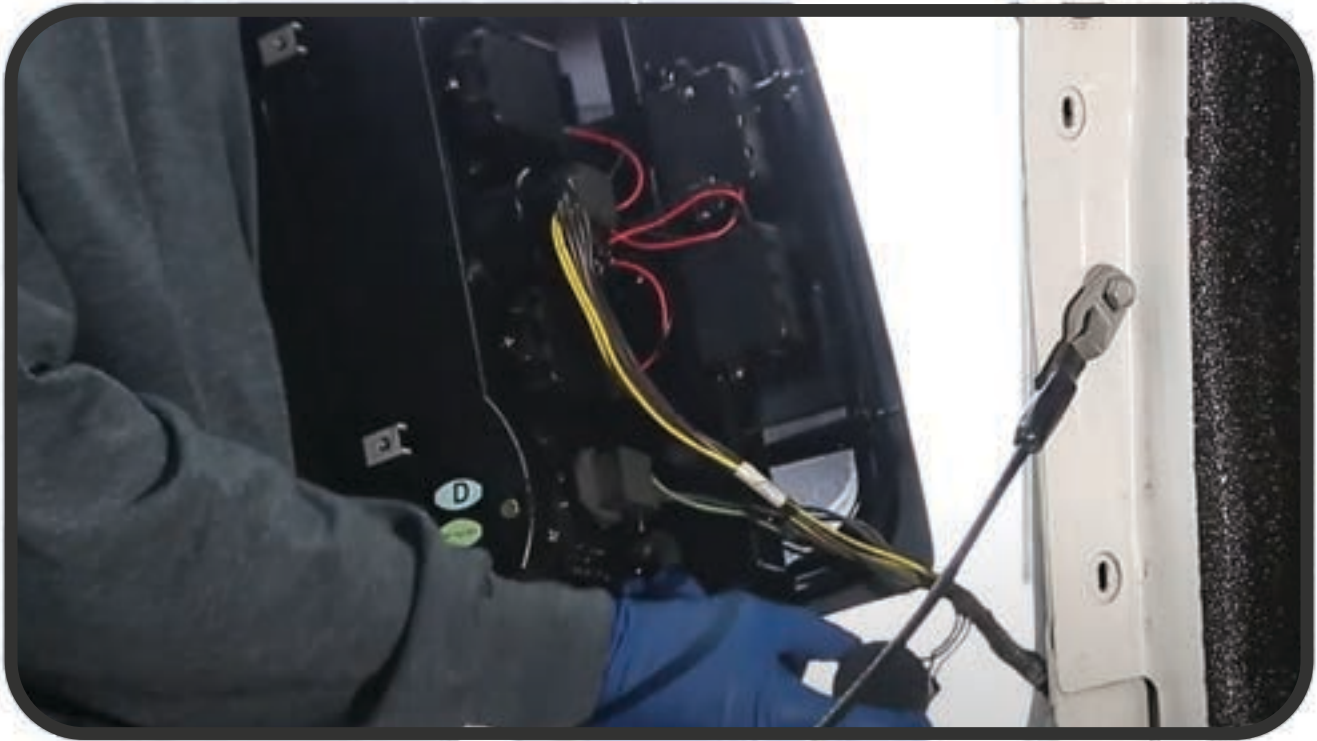

**STEP 6:**  
**INSTALL THE REVERSE LIGHT SOCKET AND THE BRAKE LIGHT SOCKET INTO THE SPYDER TAIL LIGHT**



**STEP 7:**  
**SEAT THE SPYDER TAIL LIGHT**

**STEP 8:**

**REINSTALL THE (2) PHILLIPS SCREWS TO SECURE THE TAIL LIGHT**

**STEP 9:**

**RECONNECT THE BATTERY AND TEST THE FUNCTIONS TO ENSURE THEY FUNCTION PROPERLY**